



County of San Diego

Low Impact Development Appendices

**San Diego Considerations and
LID Fact Sheets**

DECEMBER 31, 2007

**Department of Planning and Land Use
5201 Ruffin Road, Suite B
San Diego, California 92123**

**This page intentionally left blank
for reproduction purposes.**

	<u>Page</u>
Appendix 1 Glossary	1
Appendix 2 Bibliography	1
Appendix 3 San Diego LID Considerations	5
A. Climate	5
B. Geology and Soils	10
C. Hydrology	12
D. Groundwater Infiltration	16
E. Fire Safety Considerations	18
F. Vector Control	19
G. LID Treatment BMPs Design Considerations	22
Appendix 4 Technical Fact Sheets	27
Fact Sheet 1. Infiltration Trench	29
Fact Sheet 2. Infiltration Basins	31
Fact Sheet 3. Extended detention (dry) ponds	34
Fact Sheet 4. Vegetated Swale / Rock Swale	36
Fact Sheet 5. Vegetated Filter Strips	38
Fact Sheet 6. Sand Filters	40
Fact Sheet 7. Bioretention Systems	42
Fact Sheet 8. Pervious Concrete	45
Fact Sheet 9. Permeable Asphalt-Concrete (AC)	48
Fact Sheet 10. Unit Pavers	51
Fact Sheet 11. Subsurface Reservoir Bed	54
Fact Sheet 12. Crushed Aggregate (gravel)	56
Fact Sheet 13. Cobbles	58
Fact Sheet 14. LID Street Design	60
Fact Sheet 15. Public Road Standard	62
Fact Sheet 16. Private Road Standard	64
Fact Sheet 17. Curb-cuts	66
Fact Sheet 18. Rural Swale Systems	68
Fact Sheet 19. Concave Median	70
Fact Sheet 20. Cul-de-sac Design	72
Fact Sheet 21. Hybrid Parking Lot	74
Fact Sheet 22. Parking Grove	76
Fact Sheet 23. Overflow Parking	78
Fact Sheet 24. LID Driveway, Sidewalk, and Bike Path Design	80
Fact Sheet 25. Dry-well	82
Fact Sheet 26. Rain Harvesting	84
Fact Sheet 27. Foundation Planting	86
Fact Sheet 28. Downspout to Swale	88
Fact Sheet 29. Vegetated Roofs	89
Fact Sheet 30. Soil Amendments	91
Fact Sheet 31. Street Trees	93
Fact Sheet 32. Plant species selection for infiltration areas	95

**This page intentionally left blank
for reproduction purposes.**

Appendix 1 Glossary

Aquifer	The underground layer of rock or soil in which groundwater resides. Aquifers are replenished or recharged by surface water percolating through soil. Wells are drilled into aquifers to extract water for human use.
Average Daily Traffic (ADT)	The average total number of vehicles that traverse a road or highway on a typical day. Often used to classify and design roadway systems.
Biofilter	Any of a number of devices used to control pollution using living materials to filter or chemically process pollutants.
Bioretention	A technique that uses parking lot islands, planting strips, or swales to collect and filter urban stormwater, that includes grass and sand filters, loamy soils, mulch, shallow ponding and native trees and shrubs.
Buffer	A zone created or sustained adjacent to a shoreline, wetland or stream where development is restricted or prohibited to minimize the negative effects of land development on animals and plants and their habitats.
Catchment	The smallest watershed management unit, defined as the area of a development site to its first intersection with a stream, usually as a pipe or open channel outfall.
Check dam	(a) A log or gabion structure placed perpendicular to a stream to enhance aquatic habitat. (b) An earthen or log structure, used in grass swales to reduce water velocities, promote sediment deposition, and enhance infiltration.
Cluster Development	A development pattern for residential, commercial, industrial, institutional, or combination of uses, in which the uses are grouped or “clustered,” rather than spread evenly throughout the parcel as in conventional lot-by-lot development. A local jurisdiction may authorize such development by permitting smaller lot sizes if a specified portion of the land is kept in permanent open space to provide natural habitat or open space uses through public or private dedication.
Constructed wetland	An artificial wetland system designed to mitigate the impacts of urban runoff.
Contamination	The impairment of water quality by waste to a degree that creates a hazard to public health through poisoning or through the spread of disease.
Cul-de-Sac	A circular section located at the end of an access street that permits vehicles to turn around.

Curbs	A concrete barrier on the margin of a road that separates vehicular and pedestrian traffic and is used to direct stormwater runoff to an inlet, protect pavement edges, and protect lawns and sidewalks from encroachment by vehicles.
Density	The average number of families, persons, or housing units per unit of land. Usually density is expressed in “(number of) units per acre”.
Design Storm	A rainfall event of specified duration, intensity, and return frequency (e.g., a 2 year 6 hour event) that is used to calculate runoff volume and peak discharge rate.
Detention	The temporary storage of storm runoff which is used to control discharge rates sufficiently to provide gravity settling of pollutants.
Detention Time	The amount of time water actually is present in a basin. Theoretical detention time for a runoff event is determined from the period of release from the basin.
Disturbance	The act of moving, grading, tilling, clearing, taking or repositioning the natural environment’s soil surfaces and/or vegetation that was previously undisturbed by man.
Directly Connected Impervious Area (DCIA)	The square footage of all impervious surfaces (see “Impervious Surface Area”) that flow directly into a conveyance stormwater system.
Drainage Basin	A land area bounded by high points, which drains all surface water into a single stream, other body of water, or storm drain infrastructure. (see Watershed)
Ephemeral Stream	A stream or waterway that holds water only for a few hours or days, then evaporates (?) shortly after rain storms.
Erosion	The wearing away of land surface by wind or water. Erosion occurs naturally from weather or runoff but can be intensified by land-clearing practices related to farming, residential, commercial or industrial development, road building, or timber cutting.
Evapotranspiration	The combined loss of water from a given area, occurring during a specified period of time, by evaporation from the soil surface and transpiration from plants into the atmosphere.
Evaporation Practices	Practices that temporarily store runoff and provide for its evaporation. (e.g.: retention, detention, reservoirs, etc.).

Excess Parking	Parking spaces that are constructed over and above the number required or predicted based on the parking demand ratio for a particular land use or activity.
Feasible	Capable of being accomplished in a successful manner within a reasonable period of time, taking into account economic, environmental, and technological factors. Infeasibility must be supported by substantial evidence developed through a good faith effort to investigate alternatives that would result in less adverse impacts. A substantial modification to the configuration of a development, or reduction in density or intensity, would not be considered infeasible unless supported by the above factors.
Filter Fabric	A textile of relatively small mesh or pore size that is used to either allow water to pass through while keeping sediment out (permeable), or prevent both runoff and sediment from passing through (impermeable).
Filter Strips	A vegetated area that treats sheetflow and/or interflow to remove sediment and other pollutants. Filter strips are used to treat shallow concentrated stormflows over very short contributing distances in urban areas.
First Flush	The delivery of a disproportionately large load of pollutants during the early part of storms due to the rapid runoff of accumulated pollutants. The first flush of runoff can be defined in several ways (e.g., one-half inch per impervious acre).
Forebay	An extra storage space provided near an inlet of a wet pond or constructed wetland to trap incoming sediments before they accumulate in the pond.
Green Space	The proportion of open space in a cluster development that is retained in an undisturbed vegetative condition.
Groundwater	Water stored underground that fills the spaces between soil particles or rock fractures. A zone underground with enough water to withdraw and use for drinking water or other purposes is called an aquifer.
Habitat	The specific area or environment in which a particular type of plant or animal lives. An organism's habitat must provide the basic requirements for life and should be free of harmful contaminants.
Hammerhead	A "T" shaped turnaround option for lightly traveled residential roads. This road type creates less impervious cover as compared to a circular cul-de-sac.
Heat Island Effect	The increase in ambient temperatures generated by heat radiating from paved surfaces exposed to sunlight.

Hybrid Parking Lots	A parking lot that uses multiple paving techniques to better utilize the area by combining impervious aisles with permeable stalls.
Hydrology	The science of the behavior of water in the atmosphere (air), on the surface of the earth, and underground.
Impermeable	Not able to be infiltrated by water.
Impervious Surface	Any surface which cannot be effectively (easily) penetrated by water. Examples include conventional pavements, buildings, highly compacted soils, and rock outcrops.
Impervious surface area	The ground area covered or sheltered by an impervious surface, measured in plan view (i.e., as if from directly above). For example, the “impervious surface area” for a pitched roof is equal to the ground area it shelters, rather than the surface area of the roof itself.
Imperviousness	The level of (or percentage of) impervious surface within a development site or watershed.
Infill	Developing vacant parcels or redeveloping existing property within urban or sub-urban areas.
Infiltration	The downward entry of water into the surface of the soil, as contrasted with percolation which is movement of water through soil layers.
Infiltration Best Management Practice (BMP)	Any treatment BMP designed primarily to percolate water into the subsurface. These include: infiltration trench, infiltration basin, dry wells, permeable pavements without an under-drain, and sub-surface reservoir beds without an under-drain. BMPs that have some incidental infiltration but which are designed primarily to retain water or to treat water, such as bioretention, filter strips, permeable pavements with an under-drain, or vegetated/rock swales, are not infiltration BMPs.
Infiltration Basin	A concave vegetated surface (e.g., pond) designed to hold water so that it can gradually infiltrate into the soil.
Intermittent Stream	A stream that flows mostly during the rainy or wet season and may not flow at all during other times of the year.
Management Practice	A method, activity, maintenance procedure, or other management practice for reducing the amount of pollution entering a water body. The term originated from the rules & regulations developed pursuant to the federal Clean Water Act (40 CFR 1 30).

Natural Drainage	A drainage consisting of native soils such as a natural swale or topographic depression which gathers and/or conveys runoff to a permanent or intermittent watercourse or waterbody.
Nonpoint Source Pollution	Pollution that enters water from dispersed and uncontrolled sources, such as rainfall or snowmelt, moving over and through the ground rather than a single, identifiable source. A nonpoint source is any source of water pollution that does not meet the legal definition of point source in section 502(14) of the Clean Water Act (e.g., agricultural practices, on site sewage disposal, automobiles, and recreational boats). While individual sources may seem insignificant, they may contribute pathogens, suspended solids, and toxicants which result in significant cumulative effects.
National Pollutant Discharge Elimination System (NPDES)	A provision of the Clean Water Act that prohibits discharge of pollutants into waters of the United States unless a special permit is issued by EPA, a state, or another delegated agency.
Open Space	A portion of a cluster development that is set aside for public or private use and is not developed. The space may be used for active or passive recreation, or may be reserved to protect or buffer natural areas (see also Green Space).
Parking Groves	A variation on the hybrid parking lot design, that uses a grid of trees and bollards to delineate parking stalls and create a shady environment. The permeable stalls reduce impervious land coverage while the trees reduce the heat island effect and improve soil permeability.
Perennial Stream	A stream channel that has running water throughout the year.
Percolation	The downward movement of water through soil layers, as contrasted with infiltration which is the entry of water into the surface of the soil.
Permeable	A type of soil or other material that allows passage of water or other liquid.
Permeable Surfaces	Surfaces made up of materials that allow stormwater to infiltrate the underlying soils (e.g., soil covered or vegetated areas).
Pervious	A soil or material that allows the passage of water or other liquid.
Point Source Pollution	A source of pollutants from a single point of conveyance, such as a pipe. For example, the discharge from a sewage treatment plant or a factory is a point source pollutant.

Pollutants	A chemical or other additive that adversely alters the physical, chemical, or biological properties of the environment.
Permeable Pavement	Asphalt or concrete paving material consisting of a coarse mixture cemented together with sufficient interconnected voids to provide a high rate of permeability.
Private Roads	Considered the lowest order of road in the hierarchy of roads, private roads conduct traffic between individual dwelling units onto Public streets (such as Residential Collector Roads feeding onto local public roads or Circulation Element roads.). Private roads generally convey the lowest traffic volume, and are prime candidates for reduced street widths.
Public Roads	<p>A public corridor or right of way which enables vehicular, bicycle and pedestrian traffic. Roads are classified in a hierarchical order, according to their character and level of service they intend to provide. The County maintains standards for public roadways, including the Public Road Standards which primarily describe Circulation Element Road design and criteria.</p> <p>Circulation Element Roads - Circulation Element roads are considered the regional backbone or skeleton road system. These roads provide for the vehicular movement of goods and services between various parts of the County. Traffic on Circulation Element roads are given preference at intersections, and some access control may be considered in order to maintain capacity to carry high volumes of traffic.</p> <p>Non-Circulation Element - Non Circulation Element roads, or Local Public Roads, feed vehicular traffic into the Circulation Element system of roads. They provide access to residential neighborhoods, commercial and industrial areas. Of the two types of Public roads, non-Circulation Element roads are afforded the most flexibility with regards to implementing LID concepts.</p>
Receiving Waters	Water bodies such as lakes, rivers, wetlands, bays, and coastal waters that receive runoff.
Recharge Area	A land area in which surface water infiltrates soil and reaches to the zone of saturation, such as where rainwater soaks through the earth to reach an aquifer.
Recharge	Infiltration of surface water to groundwater.
Retrofit	To provide or add new equipment, parts, structures, or techniques made available after the time of original construction or manufacture.

Riparian Area	Habitat found along the bank of a natural and freshwater waterway, such as a river, stream, or creek, that provides for a high density, diversity, and productivity of plant and animal species.
Runoff	Water from sources such as rain, melted snow, agricultural or landscape irrigation that flows over the land surface.
Runoff Coefficient	The runoff coefficient measures permeability and determines the portion of rainfall that will run off the watershed. The runoff coefficient value, expressed as 'C', can vary from close to zero to as high as 1.0. A low 'C' value indicates that most of the water is retained for a time at the site, by soaking into the ground or forming puddles, whereas a high 'C' value means that the majority of the rain is runoff.
Sand Filter	A small scale sand filter consists of a preliminary sediment trap chamber with a secondary filtration chamber and are usually located in below-ground concrete pits (as residential/lot level). Larger scale sand filters may be comprised of a preliminary sedimentation basin with a downstream sand filter basin-type arrangement.
Setback	A required, specified distance between a building or structure and a lot line or lines. A setback can be used as a tool to protect sensitive areas from negative impacts associated with development.
Shared Parking	A strategy designed to reduce the total number of parking spaces needed within an area, by allowing adjacent users to share parking areas during non competing hours of operation (e.g., a shared lot for a theater and an office building).
Sheetflow	A flow condition during a storm where the depth of stormwater runoff is very shallow in depth and spread uniformly over the land surface. A sheet flow can quickly change into a concentrated channel flow within several hundred feet.
Significant Tree	Any tree which is more than 12 inches in diameter as measured four and one-half feet (4'-6") above the root crown; or any tree with a diameter of any two trunks of at least 16 inches as measured four and one-half feet (4'-6") above the root crown. Any 'Oak tree' of the quercus genus more than 6 inches in diameter as measured four and one-half feet (4'-6") above the root crown; or any such tree with a total diameter of any two trunks of at least 8 inches as measured four and one-half feet (4'-6") above the root crown.
Steep Slope	An area of land that has a slope angle of 25% or greater.

Stormwater Conveyance	A system of gutters, pipes, or ditches used to carry stormwater from surrounding land areas to constructed or natural drainage systems.
Stormwater Runoff	Rain that flows over the surface of the land without penetrating the soil.
Structural Control	A practice that involves design and construction of a facility to mitigate the adverse impact of urban runoff and often requires maintenance.
Subdivision	The process (and result) of dividing a parcel of land into smaller buildable sites, streets, open spaces, public areas, and the designation of utilities and other improvements. State and local regulations govern the density and design of new subdivisions.
Surface Water	Water on the surface of the land that has not infiltrated the soil including streams, lakes, rivers, and ponds.
Standard Urban Stormwater Mitigation Plan (SUSMP)	A mitigation plan for land development projects and public improvement projects.
Swale	An open drainage channel that has been explicitly designed to detain, evaporate, and/or infiltrate the runoff associated with a storm event.
Treatment Control BMP	Any engineered system designed to removed pollutants by a variety of methods such as simple gravity to settle particulate pollutants, filtration, biological uptake, media absorption or any other physical, biological, or chemical process.
Treatment Train	A stormwater technique in which several treatment types (filtration, infiltration, retention, evaporation) are used in conjunction with one another and are integrated into a comprehensive runoff management system.
Unit Pavers	Concrete grid and modular pavement whose spaces are filled with pervious materials such as sod, sand, or gravel.
Vector	Any insect (e.g.: mosquitoes) or other organism that is capable of harboring or transmitting a causative agent of human disease (e.g.: virus, bacterium, fungus, etc.).
Water Table	The upper surface of groundwater or the level below which the soil is saturated with water. The water table indicates the uppermost extent of ground water.
Watercourse	A permanent or intermittent stream or other body of water, either natural or improved, which gathers or carries surface water.

Watershed (see Drainage Basin) The geographic region within which water drains into a particular river, stream or body of water. A watershed includes hills, lowlands, and the body of water into which the land drains. Watershed boundaries are defined by the ridges of separating watersheds.

Zoning A mapped area to which a uniform set of regulations apply. Zoning may govern the use, placement, spacing, and size of land and buildings within a specific area (zone).

Appendix 2 Bibliography

(In order of appearance in Manual)

1. Bay Area Stormwater Management Agencies Association, (1999), Start at the Source: Design Guidance Manual for Stormwater Quality Protection
<http://www.basmaa.org/resources/files/Start%20at%20the%20Source%20%2D%20Design%20Guidance%20Manual%20for%20Stormwater%20Quality%20Protection%20Epdf>
2. Rodgers, Terry (2002, April 21) Streams of conscience; Urban runoff fouls the ocean and we have only ourselves to blame. *San Diego Union-Tribune*.
3. Beltran, S.M., Singarella, P.N., & Katz, E.M. (2004) *Water at the Crossroads: The Intersection of Water Supply and Water Quality Issues and the Resulting Effect on Development. American Bar Association Section of Real Property, Probate and Trust Law.*
http://www.abanet.org/rppt/meetings_cle/spring2004/rp/resultingeffectondevelopment/beltran.pdf
4. California Regional Water Quality Control Board San Diego Region. (2007) Order No. R9-2007-0001. NPDES No. CAS0108758. *Waste Discharge Requirements for Discharges of Urban Runoff from The Municipal Separate Storm Sewer Systems (MS4s) Draining the Watersheds of The County of San Diego, The Incorporated Cities of San Diego County, The San Diego Unified Port District, and the San Diego County Regional Airport Authority.*
<http://www.waterboards.ca.gov/sandiego/programs/stormwater/sd%20permit/r9-2007-0001/Final%20Order%20R9-2007-0001.pdf>
5. Federal Water Pollution Control Act, "Clean Water Act," 33 U.S.C. 1251 et seq.
<http://www.epa.gov/region5/water/cwa.htm>
6. Mull, K. K., (2005, December). Selling Low Impact Development: Audiences, Messages, and Media. *Fourth National Nonpoint Source and Stormwater Pollution Education Programs* (46-52). Chicago: Holiday Inn.
http://www.epa.gov/owow/nps/2005_nps_outreach_proceedings.pdf
7. County of San Diego, (2002, February) County of San Diego Watershed Protection, Stormwater Management, and Discharge Control Ordinance. Stormwater and Discharge Control, §§ 67.801--67.825, added by Ord. No. 9424 (N.S.), effective 2-20-02.
<http://www.projectcleanwater.org/pdf/county-stormwater-ord-9424.pdf>
8. County of San Diego, Department of Planning and Land Use. (1998). *Landscape Water Conservation Design Manual*.
http://www.sdcountry.ca.gov/dplu/Resource/docs/3~pdf/LandWtrConMan_sm.pdf
9. County of San Diego (2003, February). *Standard Urban Storm Water Mitigation Plan For Land Development and Public Improvement Projects*
http://www.sdcountry.ca.gov/dpw/watersheds/pubs/susmp_manual.pdf
10. Mount, J. F. (1995). *California Rivers and Streams: The Conflict Between Fluvial Process and Land Use*. Berkeley: University of California Press.

11. County of San Diego Department of Public Works Flood Control Section (2003, June), *San Diego County Hydrology Manual*
<http://www.sdcountry.ca.gov/dpw/docs/hydrologymanual.pdf>
12. Stein, Eric D. (2005). *Effect of Increases in Peak Flows and Imperviousness on Stream Morphology of Ephemeral Streams in Southern California*. North American Benthological Society (NB21F-05) <http://www.environmental-expert.com/files/19961/articles/4562/4562.pdf>
13. United States Environmental Protection Agency Office of Water. (2005, November). National Management Measures to Control Nonpoint Source Pollution from Urban Areas. EPA-841-B-05-004. Office of Water, Washington DC 20460
http://www.epa.gov/owow/nps/urbanmm/pdf/urban_guidance.pdf
14. San Diego Association of Government (SANDAG). (2004, June). *2030 Regional Growth Forecast*. San Diego, CA.
http://www.sandag.org/uploads/publicationid/publicationid_1077_3212.pdf
15. California Regional Water Quality Control Board, San Diego Region. Order No. 2001-01, NPDES No. CAS0108758, Waste Discharge Requirements for Discharges of Urban Runoff from the Municipal Separate Storm Sewer Systems (MS4s) Draining the Watersheds of the County of San Diego, The Incorporated Cities of San Diego County, and the San Diego Unified Port District.
<http://www.swrcb.ca.gov/rwqcb9/programs/stormwater/sd%20permit/Order%20No.%202001-01%20Final%20with%20attachmentss.pdf>
16. Guillette, Anne. (2007, February 12). Achieving Sustainable Site Design through Low Impact Development Practices. *Whole Building Design Guide*
<http://www.wbdg.org/design/lidsitedesign.php>
17. Coffman, L. S. (2002, September). Low Impact Development: Smart Technology for Clean Water *Definitions, Issues, Roadblocks, and Next Steps*. Urban Drainage 2002: 9th International Conference on Urban Drainage. Sept. 8-13, 2002. Portland, Or.
<http://www.wsud.org/downloads/Info%20Exchange%20&%20Lit/Larry%20Coffman%20Low%20Impact%20Development.pdf>
18. Horner, Richard R. (2006). *Investigation of the Feasibility and Benefits of Low-Impact Site Design Practices ("LID") for the San Diego Region*.
http://www.projectcleanwater.org/pdf/permit/case-study_lid.pdf
19. Lloyd, S. D, Wong, T. H. F. and Chesterfield, C. (2002) *Water Sensitive Urban Design: A Stormwater Management Perspective*. CRC for Catchment Hydrology Industry Report 02/10.
20. City of Derby, Kansas (2006) *Comprehensive Plan: Future Land Use*
<http://www.derbyweb.com/pdfs/comp-plan-chapter5.pdf>

21. Coombes, P., Paskin, R. (2002). Water Sensitive Urban Design in the Sydney Region. *Practice Note 2: Water Sensitive Homes*. Lower Hunter and Central Coast Regional Environmental Management Strategy
<http://www.wsud.org/downloads/Planning%20Guide%20&%20PN's/02-Site%20Planning.pdf>
22. Brown, Jeffrey and Bay, Steven. (2005). *Assessment of Best management Practice (BMP) Effectiveness- Final Report*. Technical Report. Southern California Coastal Water Research Project. No.461, Sep 2005
23. Urbonas, B.R., Stahre, P. (1993). *Stormwater: Best Management Practices including Detention*, Englewood Cliffs: Prentice Hall,
24. Phil Hammer, Staff at Regional Water Quality Control Board; RWQCB Order No. R9-2007-0001, Section D.1.d(4)(b)iv – Low Impact Development BMP Requirements
25. California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment.
<http://www.cabmphandbooks.com/documents/Development/DevelopmentHandbook.pdf>
26. Woodward-Clyde Consultants. (1996, June 11). *Parking Lot BMP Manual*, Santa Clara Valley Non-point Source Pollution Control Program.
27. United States Environmental Protection Agency, Office of Water (1999, September). Storm Water Technology Fact Sheet: Sand Filters. Office of Water, Washington D.C. EPA 832-F-99-007 <http://www.epa.gov/owm/mtb/sandfltr.pdf>
28. Ferguson, Bruce K. (1994) *Stormwater Infiltration*, Boca Raton: CRC Press.
29. Hansen, K. (2005). Dry Parking. *Stormwater Magazine*, S10-S14.
<http://www.estormwater.com/Dry-Parking-article6191>
30. Florida Concrete & Products Association. (n. d.) *Construction of Portland Cement Pervious Pavement*, (a training video and booklet)
31. Ramsey, Charles G. & H. R. Sleeper. (1988) *Architectural Graphic Standards (Eighth Ed.)*, Somerset, NJ: John Wiley & Sons.
32. California Department of Transportation. (1995) *Standard Specifications*, Sec. 39.
33. Schueler, Thomas. (1995). *Site Planning for Urban Stream Protection*. Metropolitan Washington Council of Governments: Washington D.C.
34. Victoria Transport Policy Institute, (2007, May). Traffic Calming: Roadway Design to Reduce Traffic Speeds and Volumes. TDM Encyclopedia, Victoria, BC, Canada,
<http://www.vtpi.org/tdm/tdm4.htm>
35. Institute of Transportation Engineers Technical Committee 5P-8 (Frank L. Spielberg, chair). (1994, February) *Traffic Engineering for Neo- Traditional Neighborhood Design: an informational report*, Washington, DC: ITE.

36. Section 902.2.2.4 County of San Diego Consolidated Fire Code (2001, October 17)
Ord. No. 9397. County Code of Regulatory Ordinances. Title 3, Div 5, Ch3.
37. The Green Roof Infrastructure Monitor, (2006, Spring), Volume 8, No. 1
http://www.greenroofs.org/resources/GRIM_Spring2006.pdf
38. Hinman, C. (2005). *Low Impact Development Technical Guidance Manual for Puget Sound*. Puget Sound Action Team. Washington State University Pierce County Extension. Puget Sound, WA: http://www.psat.wa.gov/Publications/LID_tech_manual05/LID_manual2005.pdf
39. Harris, Richard W. (1992), *Arboriculture: integrated management of landscape trees, shrubs and vines* (2nd ed.), Englewood Cliffs: Prentice Hall.
40. Water Conservation in Landscaping Act (1990). California Government Code, Division 1, Chapter 3, Article 10.8, Section 65591-65600. <http://ucrturf.ucr.edu/Links/ab325.htm>
41. Street Tree Seminar, Inc. (1999), *Street Trees Recommended for Southern California*. Anaheim, California.
42. King County Government Center
http://www.psat.wa.gov/Publications/LID_studies/rooftop_rainwater.htm,
http://dnr.metrokc.gov/dnrp/ksc_tour/features/features.htm
43. Carkeek Environmental Learning Center. <http://www.harvesth2o.com/seattle.shtml>
44. Natural Resources Defense Council office, Santa Monica.
<http://www.nrdc.org/buildinggreen/casestudies/nrdcsm.pdf>

An extensive LID Literature Index can be found on the County of San Diego Department of Planning and Land Use website: www.sdcounty.ca.gov/dplu

Appendix 3 San Diego LID Considerations

San Diego County is located between Orange and Riverside Counties on the north, the United States/Mexico International Border on the south, Imperial County on the east, and the Pacific Ocean on the west. San Diego County encompasses approximately 4,260 square miles and includes a variety of topography, soil types, land uses, and climate, all of which have impacts to runoff during rainfall and storm events.

San Diego is an area of great climatic variation. The map of San Diego County, Figure A.1, shows the major rivers and the divide that separates the western and eastern watersheds. This divide follows the mountain ridgeline with elevations that vary from 3,000 to 5,000 feet above sea level. Precipitation that falls east of the divide flows to the Salton Sea Basin, while runoff from precipitation west of the divide flows down the western slope to the Pacific Ocean. The western side of the divide is designated as Region 9 by the Regional Water Quality Control Board and is regulated by the Municipal Stormwater Permit (Order No. R9-2007-0001).

The key physical factors that affect the function, design and performance of LID measures in San Diego are: climate; geology; hydrology; groundwater; fire safety; and vector management.

A. Climate


One of the key physical factors in San Diego that can affect the function, design and performance of LID measures is climate (precipitation, temperature, evapotranspiration). San Diego County has a mild, equable climate characterized by warm dry summers and mild winters. However there is considerable variation between the coastal, mountain, and desert areas. The major influences on San Diego's climate are the topography, the sea-surface temperature of the coastal waters, and the orientation of the coastline. In general the coastal area has a very small temperature range; temperature variations are greater in the mountains and greatest in the desert. The county generally has abundant sunshine. Winds are generally light and variable in direction except for persistent westerly winds during summer afternoons along the coast. Humidity remains moderate throughout the year in the western and middle portions of the County and quite low in the desert area during summer afternoons. Rainfall is variable across the region based primarily on season, location, and elevation.

Precipitation

Rainfall across San Diego County is variable, with most rain falling from November to April. The average rainfall is highest in the mountains and least along the coast and in the desert. Most of the county experiences light rainfall, although some of the central mountain areas receive more than 30 inches per year. Seasonal precipitation along the coast averages 10 inches. The amount increases with elevation as moist air is lifted over the mountains. Some reporting points in the Cuyamaca and Vulcan Mountains measure more than 35 inches per year with areas on Mt. Palomar receiving up to 45 inches. Totals diminish rapidly with decreasing elevation on the eastern slopes of the mountains with

some desert stations reporting as low as 2.5 inches per season. The average annual precipitation across San Diego is represented in map below (Figure A.1). The average monthly distribution of rainfall across the year within San Diego is summarized in Table A.1 below.

Figure A.1 Average Annual Precipitation

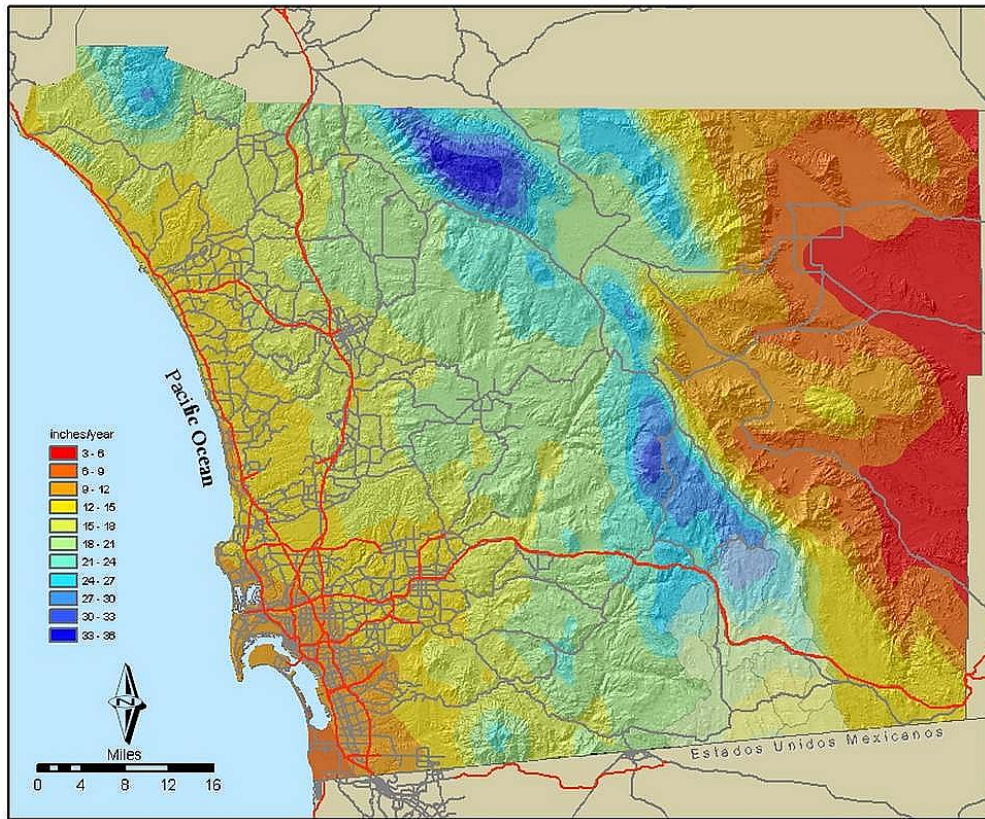

Average Annual Precipitation for San Diego County

Source: California Irrigation Management Information System (1999) (see below)

Table A.1 Average Monthly Rainfall in San Diego County (inches)

Location	J	F	M	A	M	J	J	A	S	O	N	D	Annual
Escondido (1931-1979)	2.79	2.85	2.54	1.30	0.37	0.09	0.02	0.15	0.28	0.66	1.58	2.94	15.57
San Pasqual (1979-2005)	2.70	3.37	2.79	1.08	0.28	0.11	0.14	0.06	0.22	0.68	1.21	1.63	14.26
Ramona (1974-2005)	3.42	3.51	3.37	1.23	0.39	0.08	0.13	0.18	0.36	0.71	1.40	1.73	16.49
El Capitan Dam (1948-2005)	3.09	2.88	3.23	1.29	0.51	0.12	0.06	0.15	0.28	0.63	1.58	2.01	15.82
El Cajon (1979-2005)	2.48	2.74	2.45	0.80	0.14	0.09	0.09	0.02	0.17	0.61	1.33	1.24	12.16
La Mesa (1948-2005)	2.62	2.17	2.42	1.05	0.31	0.08	0.05	0.08	0.21	0.54	1.42	1.55	12.50
San Diego Airport (1914-2005)	2.06	2.00	1.70	0.79	0.21	0.06	0.02	0.06	0.18	0.50	0.95	1.74	10.26
Chula Vista (1948-2005)	1.91	1.73	1.75	0.75	0.15	0.06	0.02	0.06	0.16	0.40	1.13	1.17	9.30
Alpine (1952-2005)	3.00	3.15	3.18	1.39	0.48	0.15	0.12	0.18	0.32	0.75	1.72	1.93	16.36
Campo (1948-2005)	3.03	2.69	2.43	1.09	0.33	0.07	0.35	0.52	0.37	0.67	1.29	1.83	14.68
Oceanside (1953-2005)	2.11	2.14	1.73	0.97	0.20	0.08	0.03	0.07	0.27	0.40	1.06	1.26	10.31
Vista (1957-2005)	2.80	2.55	2.43	1.04	0.22	0.12	0.06	0.08	0.28	0.55	1.43	1.66	13.22
Palomar Mountain (1948-2005)	5.65	5.42	5.31	2.18	0.61	0.13	0.40	0.66	0.56	1.04	2.78	3.78	28.52
Henshaw Dam (1948-2005)	5.00	4.82	4.71	2.01	0.62	0.11	0.30	0.47	0.50	0.94	2.37	3.20	25.06
Warner Springs (1948-1977)	2.48	1.92	2.14	1.37	0.45	0.06	0.37	0.88	0.46	0.60	1.22	1.91	13.86
Borrego (1948-2005)	1.10	1.13	0.75	0.24	0.07	0.02	0.31	0.55	0.34	0.30	0.48	0.75	6.04
Julian (1949-1988)	4.68	4.09	4.51	2.41	0.97	0.14	0.39	0.74	0.83	0.98	2.86	3.27	25.89
Cuyamaca (1948-2005)	5.94	5.88	6.02	2.90	1.11	0.19	0.49	0.72	0.84	1.28	3.31	4.56	33.25

Temperature

Moderate temperatures are found year round near the coast while the interior part of the county has generally warm summers and cool winters. The average annual temperature is in the low 60s (Fahrenheit) on the coastal plain and in the coastal valleys it drops into the mid-50s at higher elevations in the mountains, and increases to values around 70 degrees in the desert areas at the eastern edge of the county. During the winter the mean minimum temperature drops to the mid-40s along the immediate coast, below 30 degrees in the mountains, and is in the mid-30s over the desert. July maximum temperatures average in the 70s along the coast, increasing to around 90 degrees in the foothills, and can exceed 100 degrees in the desert area. The average monthly distribution of temperature within San Diego is summarized in Table A.2 below.


Table A.2 Average Monthly Temperature in San Diego County (°F)

Location		J	F	M	A	M	J	J	A	S	O	N	D	Annual
Escondido (1931-1979)	max.	66.0	66.9	68.9	72.3	75.7	80.8	87.6	88.0	85.7	79.4	73.4	67.5	76.0
	min.	37.7	39.8	42.4	46.4	50.9	54.4	58.7	59.6	56.7	50.0	41.9	38.3	48.1
San Pasqual (1979-2005)	max.	71.0	71.2	72.5	76.7	79.4	84.3	90.2	91.8	90.2	83.6	76.5	71.2	79.9
	min.	39.8	42.5	44.9	47.5	52.2	55.7	59.0	60.0	57.5	51.3	42.7	38.0	49.3
Ramona (1974-2005)	max.	66.8	67.3	68.1	72.5	76.7	84.0	90.0	91.0	88.0	80.6	72.9	67.4	77.1
	min.	38.3	39.0	4.0	43.0	48.2	51.5	55.9	57.0	55.1	48.0	41.6	36.9	46.3
El Capitan Dam (1948-2005)	max.	68.6	70.4	70.6	75.5	78.8	86.3	93.0	93.6	91.4	84.4	76.6	70.2	80.0
	min.	41.2	42.9	44.5	47.5	50.9	54.3	58.1	59.2	58.1	52.9	46.4	41.8	49.8
El Cajon (1979-2005)	max.	69.4	69.9	71.3	75.4	77.4	81.5	87.4	88.9	87.1	81.2	74.3	69.5	77.8
	min.	42.5	44.3	47.3	50.5	55.4	58.4	62.7	64.1	61.3	54.9	45.8	41.2	52.4
La Mesa (1948-2005)	max.	67.0	68.4	68.8	71.6	73.3	77.5	82.8	84.3	83.3	78.8	73.1	68.3	74.8
	min.	44.5	46.0	47.6	50.6	54.3	57.7	61.5	62.8	61.0	55.9	49.2	44.8	53.0
San Diego Airport (1914-2005)	max.	64.7	65.2	65.9	67.5	68.6	70.9	74.8	76.3	75.7	72.9	70.0	65.9	69.9
	min.	48.0	49.6	51.8	54.6	58.0	60.8	64.3	65.6	63.8	59.2	52.8	48.6	56.4
Chula Vista (1948-2005)	max.	65.0	65.6	65.3	66.8	67.9	69.8	73.4	75.2	75.4	73.1	69.5	65.5	69.4
	min.	44.8	46.4	49.1	52.0	56.4	59.6	63.5	64.7	62.6	56.8	49.5	44.6	54.2
Alpine (1952-2005)	max.	65.2	66.6	67.9	72.4	76.5	83.7	90.4	90.7	88.1	80.7	71.5	65.5	76.6
	min.	42.3	42.9	43.8	46.4	50.0	54.7	60.1	61.3	59.3	53.4	46.6	42.1	50.1
Campo (1948-2005)	max.	62.1	63.7	66.0	71.2	77.6	86.4	93.7	93.6	89.2	79.7	69.1	62.7	76.2
	min.	33.6	33.8	35.1	36.9	40.8	44.6	52.2	52.9	48.7	41.9	36.2	32.7	40.8
Oceanside (1953-2005)	max.	63.9	63.8	63.8	65.1	66.6	68.5	72.1	74.3	73.7	71.5	68.2	64.9	68.0
	min.	44.6	45.7	47.6	50.4	54.8	58.4	62.2	63.4	60.9	55.9	48.9	44.5	53.1
Vista (1957-2005)	max.	67.3	67.9	68.1	70.9	72.9	76.3	81.4	83.1	82.0	78.0	72.4	67.6	74.0
	min.	44.0	45.0	46.3	48.6	53.3	56.6	60.1	61.5	59.9	55.0	48.3	44.0	51.9
Palomar Mountain (1948-2005)	max.	51.1	52.6	55.4	61.3	68.3	77.9	84.3	83.8	79.7	69.7	59.0	62.3	66.3
	min.	34.0	34.5	35.7	39.5	45.7	54.3	61.6	61.9	57.0	48.6	39.9	34.8	45.6
Henshaw Dam (1948-2005)	max.	59.7	61.9	63.7	68.5	74.3	83.9	92.3	92.8	88.4	79.0	68.0	61.2	74.5
	min.	29.2	31.2	33.9	37.0	41.7	45.8	52.1	52.6	47.3	39.4	32.7	28.5	39.3
Warner Springs (1948-1977)	max.	59.5	62.6	64.1	69.6	76.8	85.8	94.1	93.5	88.9	78.9	68.1	61.7	75.3
	min.	28.7	29.7	31.9	35.3	39.7	44.8	52.7	52.4	47.5	40.2	34.1	29.7	38.9
Borrego (1948-2005)	max.	69.3	72.5	77.6	84.5	93.1	102.7	107.3	105.9	100.7	89.8	77.8	69.1	87.5
	min.	44.1	46.7	50.0	53.8	60.7	68.2	75.4	75.3	69.9	60.6	52.3	43.4	58.2
Julian (1949-1988)	max.	55.6	58.2	59.3	64.8	71.3	81.4	90.1	89.6	84.6	74.2	63.4	57.4	70.8
	min.	34.5	34.7	34.8	37.0	40.6	45.8	53.0	53.7	49.3	43.3	38.1	35.6	41.7
Cuyamaca (1948-2005)	max.	50.8	52.8	55.3	60.7	67.8	77.1	84.7	84.8	80.3	70.3	59.3	52.4	66.3
	min.	29.2	30.5	32.9	36.2	41.3	48.2	55.0	55.1	48.3	39.4	33.4	29.1	39.8

Evapotranspiration

The term “evapotranspiration” refers to the total transfer of moisture to the atmosphere from the soil, water bodies, vegetation canopy (evaporation) and plants (transpiration). Evapotranspiration can represent a significant water loss from a watershed. Types of vegetation and land use significantly affect evapotranspiration and therefore, the amount of water leaving a watershed. Factors that affect evapotranspiration include the plant type (root structure and depth), the plant's growth stage or level of maturity, percentage of soil cover, solar radiation, humidity, temperature, and wind.

Monthly reference evapotranspiration (ET_o), which is a measure of potential evapotranspiration from a known surface, such as grass or alfalfa, has been estimated for San Diego County by the California Irrigation Management Information System (CIMIS) and is represented in the map below (Figure A.2):

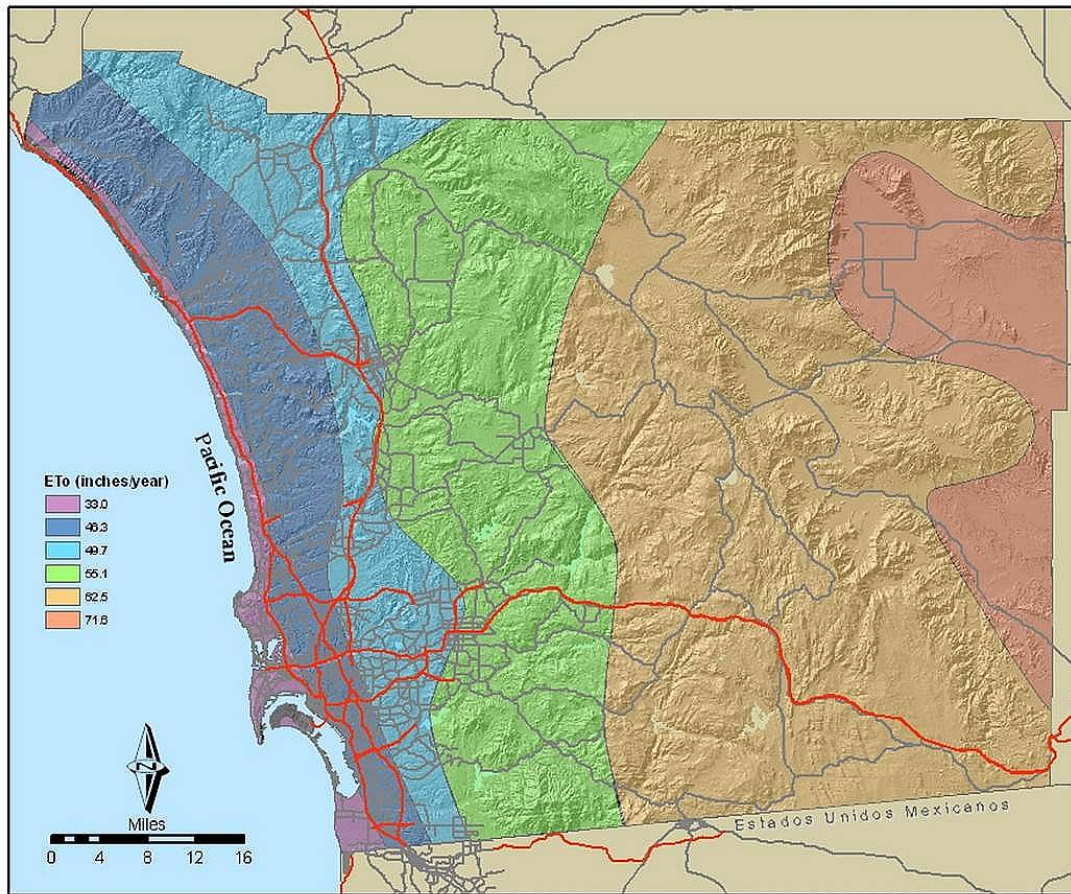Figure A.2. Evapotranspiration.

Evapotranspiration for San Diego County

Source: California Irrigation Management Information System (1999) (see below)

References:

- California Department of Water Resources, Water Use Efficiency Office, (1999). *California Irrigation Management Information System (CIMIS)*. State of California. <http://wwwcimis.water.ca.gov/cimis/welcome.jsp>

B. Geology and Soils

San Diego County can be divided into three distinct geomorphic provinces: (1) the Coastal Plain, (2) the Peninsular Range, and (3) the Salton Trough. The Coastal Plain is largely covered in sedimentary formational units. The Peninsular Range generally consists of granitic and other hard rock. The Salton Trough represents a relatively small, remote portion of the County, and has a limited extent of pervious sandy deposits. Unlike many other areas of California, San Diego County has relatively little in the way of pervious soils, such as alluvium-filled valleys and dune deposits. Thus, stormwater infiltration devices (lacking under drains) may not be appropriate for many portions of the County.

Proposed stormwater “Infiltration BMPs”, including permeable pavements, shall be reviewed by a qualified, licensed professional to provide a professional opinion regarding the potential adverse geotechnical conditions created by the implementation of the plans. Geotechnical conditions such as: slope stability, expansive soils, compressible soils, seepage, groundwater, and loss of foundation or pavement subgrade strength should be addressed, and where appropriate, mitigation recommendations should be provided. The impact on existing, proposed, and future improvements should be included in the review. The United States Department of Agriculture National Resources Conservation Services (NRCS), formerly the Soil Conservation Services, has classified San Diego Area soils with respect to: (1) Their ability to accept and absorb water, (2) their tendency to produce runoff, and (3) their erodibility. Their results are presented in Soil Survey, San Diego Area, California (1973). For more information on infiltration site selection please see the CALTRANS Infiltration Study (2003).

The ability of soils to accept and absorb water was originally evaluated for the purpose of sewage effluent disposal; but, applications in low impact development are closely related. According to the Survey:

In general, the entire Area has severe limitations for sewage effluent disposal. There are, however, some exceptions worth mentioning. Along the major streams of the Coastal Plains and the Foothills are soils that have slight limitations. The Lake Henshaw drainage and the tributary drainage basin to the east comprise a large area where limitations are moderate. This area extends northwest and east along valleys floors. In the valleys of the southern part of the Mountain zone are scattered areas of soils that have slight limitations. In the Desert zone are extensive areas of soils that formed in alluvium and have slight limitations.

Widespread severe limitations indicate the need for caution in locating and constructing sewage disposal systems. Nevertheless, some areas where limitations are severe have been developed for homesites served by individual systems. In these areas, other factors may have outweighed the soil limitations, the limitations may not have been considered when selecting the sites, or the limitations were compensated for through the use of larger filter fields or other design features.

The Survey classified soil runoff potential into four Hydrologic Soil Groups labeled A through D. Group A and B soils exhibit the greatest percolation rates (unless soils are compacted during construction) and are generally best suited to stormwater percolation. However, the San Diego Area has a relatively high concentration of Group C and D soils, which exhibit lower percolation rates that generally limit the use of infiltration-based stormwater management systems.

The hydrologic soil groups are defined as follows:

Group A soils have a high rate of percolation and a low runoff potential. The rate of water transmission is high, thus, runoff potential is low.

Group B soils have moderate percolation rates when thoroughly wet. These are chiefly soils that are moderately deep to deep, moderately well drained to well drained, and moderately coarse textured. Rate of water transmission is moderate.

Group C soils have a slow percolation rate when thoroughly wet. They are chiefly soils that have a layer impeding the downward movement of water, or they are moderately fine to fine textured soils that have a slow infiltration rate. The rate of water transmission is slow.

Group D soils have very slow percolation rates when thoroughly wet. They are clays that have a high shrink-swell potential, soils that have a high permanent water table, soils that have a claypan or clay layer at or near the surface, or soils that are shallow over nearly impervious material. The rate of water transmission for group D soils is very slow.

The Survey also evaluated erodibility. The great majority of soils in the San Diego Area exhibit moderate or severe erosion potential.

Data for a specific site, preliminary infiltration, runoff, and erodibility can be obtained by referring to the Survey and consulting the complete national listing provided by the NRCS, or by performing an on-site investigation. Retaining a licensed professional engineer and advancing exploratory excavations at the site are highly recommended. Consideration should be given to the effects of urbanization on the natural hydrologic soil group. If heavy equipment can be expected to compact the soil during construction or if grading will mix the surface and subsurface soils, appropriate changes should be made in the soil group selected (SD County Hydrology Manual, 2003).

References

- Bowman, R.H. (1973, December). Soil survey of San Diego Area, California. US Department of Agriculture. Soil Conservation Service and Forest Service, Washington, DC.
- San Diego County Hydrology Manual (2003, June). Department of Public Works, Flood Control Section.
<http://www.sdcounty.ca.gov/dpw/docs/hydrologymanual.pdf>

C. Hydrology

Hydrology is the scientific study of the waters of the Earth and its atmosphere, their occurrence, circulation, distribution, chemical and physical properties, and their reaction with their environment, including the relation to living things. While the science of hydrology includes many aspects such as groundwater movement, oceanography, meteorology, and other aspects, the purpose of this Section is to examine surface runoff.

This Section will describe the type of storm runoff events occurring in San Diego County as a result of the region's climate (discussed in Section 2.A) combined with geology (discussed in Section 2.B), topography, predominant soils, land use, and other factors. It will further describe how these factors impact engineering design of storm water conveyance features, including design of LID features. The practices described in this LID Handbook are designed to address surface runoff resulting from direct precipitation, with a goal of mimicking natural conditions as closely as possible to reduce surface runoff from developed areas. The LID Handbook describes LID features that can be incorporated on project sites to achieve this goal. The inclusion of native vegetation into landscaping is a complementary, beneficial practice to LID, which minimizes excess surface runoff and subsurface flow of irrigation water that is not representative of natural site conditions by reducing the need for or amount of irrigation.

The factors influencing the amount of surface runoff generated during a storm event include: the total area contributing to the point of interest (the drainage area), rainfall intensity, and the ability of the watershed to capture or attenuate runoff. The latter is dependent on the land cover and soil type, slope, antecedent moisture conditions, and existing drainage infrastructure within the watershed. Runoff is directly related to rainfall intensity. The higher the rainfall intensity, the higher the resulting peak flow rate of surface runoff. Runoff is also directly related to the land cover and soil type, slope, and antecedent moisture conditions within the watershed. These factors affect both the volume and peak flow rate of runoff. More impervious land cover, steeper slopes, more impermeable soil types, and saturated soil conditions result in greater runoff volumes and greater peak flow rates. Rainfall intensity depends on climate, which is a factor that cannot be controlled in engineering design. Slopes and soil types are also somewhat predetermined based on existing geology. Fill practices will significantly alter existing slopes and soil properties, but typically in a manner that increases surface runoff. Antecedent moisture conditions depend on climate, but may be altered by irrigation practices in localized areas. Although some of these factors are predetermined for engineering design, engineers and site designers do have the ability to enhance land cover practices to maximize the watershed's ability to intercept and store runoff.



Figure A.3 Major Rivers and Creeks in San Diego

Source: County of San Diego (2003, June). *San Diego County Hydrology Manual*.
Department of Public Works, Flood Control Section

Storm Intensity

Due to the convective winter weather pattern and relative proximity to the jet stream, San Diego typically has high intensity, short duration storm events. Regardless of the amount of total rainfall delivered (measured in inches), the intensity with which it is delivered (measured in inches per hour) often results in flashy, high peak flow rates of storm runoff. The design of LID features used in San Diego must account for the high intensity storms in order to provide for conveyance or bypass, and appropriate erosion prevention. The engineer must assess how the design storm event that governs the design of storm water conveyance systems for flood control (e.g., the 100-year storm event) will affect the LID features, which are typically designed for more frequent (1, 2, and 5-year) storm events. The engineer must determine whether the 100-year storm event should bypass the LID feature, or be conveyed through the LID feature, accounting for proper energy dissipation, scour prevention, and capacity. It may be necessary to provide for overflow from the LID feature or provide bypass if safe overflow (that would not result in erosion or directing flow to undesirable location) is not practical or achievable.

Land Cover, Slope, and Soil Type

Land cover, slope, and soil type influence the ability of the watershed to capture or attenuate runoff. Within a development project, land cover is almost entirely determined by engineering design (site design). The intent of LID features is to enhance the land cover to mimic the project site's natural ability to intercept, store, and route runoff in the pre-development condition. This can be achieved by a combination of reducing the development features that act to reduce absorption and infiltration, replacing absorption and infiltration areas, and preserving natural drainage routes where possible. Section 3 of the LID Handbook discusses seven site planning strategies to meet these goals.

The design of LID features must respect hydrologic constraints presented by slopes (natural and engineered), soil types (natural and engineered/compacted), and the historical development of the area in order to provide a safe development. The naturally steep slopes and clayey soils that are predominant in San Diego County present unique challenges to achieving the goals stated above, and their hydrologic effects must be considered in the design of LID features. Steep slopes and clayey soils are not conducive to infiltration. Instead, they result in high peak flow rates and volumes of surface runoff. LID features that replace infiltration lost to impermeable surfaces should not exceed pre-development conditions or concentrate infiltration volumes that were previously dispersed throughout the site in the pre-development condition without consideration of subsurface geology and flow paths. Furthermore, knowledge of how tributary and downstream areas were developed in the past (i.e. whether underdrains were used in existing fill areas) is vital to help determine how increased infiltration could affect the project site as well as down gradient properties.

The existing soil types in the majority of developable area in San Diego typically have low infiltration rates. Furthermore, steep slopes in San Diego County present a challenge to minimizing fill, as fill is often constructed in order to maximize buildable area. In order to protect them from erosion or failure, fill slopes are designed to drain runoff safely from the land surface to an engineered system to minimize intrusion of water into the fill. Based on these factors, neither the natural nor the engineered/compacted soils are conducive to infiltrating excess runoff on or above steep slopes. Potential increased seepage conditions could develop from increased infiltration of surface water to the subsurface, which could potentially present problems to properties adjacent and down gradient from infiltration projects. Therefore, it will be essential to work closely with the a qualified, licensed professional on the design of Infiltration BMPs to evaluate the site constraints as well as the potential impacts to downstream property owners.

Because of the difficulty of replacing infiltration to convey runoff safely from fill areas and slopes, site design LID techniques can be utilized to reduce impervious areas. In order to maximize buildable area techniques such as constructing streets, sidewalks, and parking lot aisles to the minimum width necessary, increasing building density (number of stories above or below ground), and minimizing the use of impervious surfaces, such as decorative concrete, in the landscape design can be utilized. Absorption areas can be mimicked by maximizing canopy interception in the site landscaping, minimizing soil compaction, and replacing soil absorption in controlled locations where underdrain

systems can be included to protect against increased seepage conditions, such as in engineered open drainage channels, planters, tree wells, biofiltration areas, and other landscaped areas with controlled drainage.

D. Groundwater Infiltration

Aquifer Characteristics in San Diego County

San Diego County has a variety of aquifer types and geologic environments, which have different associated groundwater issues. The coastal zone is mostly supplied with imported potable water from the member agencies of the San Diego County Water Authority (CWA). The remaining portion of the County (approximately 65% by area) is totally dependent on groundwater resources. For all lands to the east of the San Diego CWA boundary, water resources are limited to naturally-occurring surface and groundwater resources. In this area, no imported water is, or will likely become, available in the foreseeable future. This is due to the lack of infrastructure, the limited availability of water within the desert southwest, the cost of providing these services, and the political approval needed to extend the CWA boundaries.

Groundwater resources in the County which lie east of the CWAs service area are limited due to the amount of rainfall and resulting infiltration, or groundwater recharge, as well as limited groundwater storage. The majority of this area is underlain by fractured rock aquifers, which restricts development due to very limited groundwater storage. There are also relatively shallow, alluvial aquifers which are typically found in river and stream valleys and intermountain valleys adjacent and in many cases overlying fractured rock aquifers. Some of these aquifers have a relatively thin saturated thickness and therefore limited storage. Desert basins in the extreme eastern portion of the County have relatively large storage capacity, but extremely limited groundwater recharge. Because of the limited groundwater recharge, desert basins are particularly prone to groundwater overdraft, where groundwater extraction exceeds long-term groundwater recharge. High groundwater demand in Borrego Springs has resulted in an overdraft condition.

High Groundwater Conditions

In areas served by municipal drinking water, the potential for high groundwater exists in some areas due to the artificial introduction of imported water into the groundwater system mainly from septic system and/or irrigation return flows. Parts of Valley Center, Rainbow, Ramona, and a few areas east of Escondido have historic records of high groundwater. These areas have had recorded septic tank failures which has led to bacteria and nitrate contamination of groundwater. A technical septic system failure is when conditions are such that the water table rises to within five feet of the bottom of a septic system disposal field. A minimum 10-foot separation is required to prevent the underlying groundwater and nearby surface waters from being contaminated by bacteria, nitrates, and possible virus strains in the wastewater. Stormwater infiltration devices may not be feasible in areas with septic systems which are served by municipal drinking water.

In general, perennially high groundwater conditions are uncommon in the groundwater dependent areas of the County east of the CWA line with a few exceptions such as parts of Jacumba and a few other sporadic instances largely within alluvial aquifer environments.

Groundwater Contamination Concerns

Some pollutants, such as nitrates, bacteria, total dissolved solids, petroleum products, and solvents, can migrate to depths that can ultimately threaten water supply wells. Illegal dumping of waste oil, pesticides, herbicides, paint, paint thinner and other chemical products into any type of infiltration device presents additional risk to groundwater contamination. Local water districts and other agencies generally have policies and strategies to protect groundwater supplies from these threats. These policies are an attempt to balance the environmental benefits of infiltration with the compelling need to protect soil and groundwater supplies.

Groundwater infiltration concerns:

A case study by the USGS of a groundwater recharge basin in Fresno showed that a wide variety of urban runoff pollutants were removed by absorption within the top 1.5 inches of sediment in the basin, but no pollutants were found in the sediment at a depth greater than six inches. This shows that the pollutants did not travel more than six inches deep – typically well above the level of groundwater wells. In the County of San Diego, a ten foot separation is recommended between infiltration practices and the top of the groundwater table in order to allow sufficient biological activity and filtration to occur.

With proper maintenance of stormwater management systems, pollutants infiltrating into the soil do not usually pose a risk of contaminated soil or groundwater. Risk is greater when there is a concentrated source of pollutants, such as in a heavy industrial site or in the case of illegal disposal.

References

- Additional information on groundwater may be found in the Groundwater section of the San Diego County LID Literature Index.
- Schroeder, Roy A. (1995) Potential for Chemical Transport Beneath a Storm-runoff Recharge (Retention) Basin for an Industrial Catchment in Fresno. U.S. Geological Survey Water Resources Investigations Report 93-4140, prepared in cooperation with the Fresno Metropolitan Flood Control District. Sacramento.

E. Fire Safety Considerations

There are a multitude of approaches to reducing the impact of stormwater runoff in developed areas. Paramount in choosing optimal design methods is public safety.

Fire safety demands accessibility to structures by fire apparatus (trucks and other emergency vehicles) and allows residents to relocate in a safe manner in advance of an oncoming fire, flood, or other catastrophe. State and County Fire Codes specify how fire access roads are to be designed to provide emergency vehicle access within recognized operational parameters. Dead end roads must meet the CCR Title 14 and County Fire Code requirements for secondary access and emergency vehicle turnarounds.

Vegetation management (“fuel modification”) must be maintained in compliance with fire codes, particularly adjacent to buildings and to grass surfaced fire lanes. Landscaping restrictions limit the amount and type of native and ornamental vegetation within 100 feet or more of structures. Landscaping in proximity to specially designed roadways with grass covering is particularly important in that it not interfere with fire apparatus access, or with firefighter perception of vehicle accessibility

Any design that allows water to travel through surfaces designed for travel by fire apparatus must meet accepted County of San Diego design criteria to allow all weather safe passage by heavy fire equipment. Areas designed for fire engine access that appear to be lawns or meadows (e.g. “turf block”) must be clearly marked as fire lanes and have an irrevocable easement which prohibits the installation of anything that could obstruct or appear to obstruct its use by fire engines. Fire officials have concern that responding apparatus operators are able to recognize designated fire lanes (fire access roadways) that appear to be lawns, and have confidence in the area’s capability of safely supporting 50,000 – 75,000 pound engines and ladder trucks. Fire apparatus can only utilize such surfaces in wet situations if the surface is virtually flat. Any grade makes traction and control very difficult.

Developments must be designed to permit testing of fire protection systems. Discharge of potable water from fire hydrants and sprinkler system test valves must be directed to permeable areas.

References

- Section 902.2.2.4 County of San Diego Consolidated Fire Code (2001, October 17) Ord. No. 9397. County Code of Regulatory Ordinances. Title 3, Div 5, Ch3.

F. Vector Control

A vector is any insect, arthropod, rodent or other animal that is capable of harboring or transmitting a causative agent of human disease. In the County of San Diego, the most significant vector population related to stormwater is mosquitoes.

Mosquitoes and Disease

Figure 1. The Mosquito Life Cycle

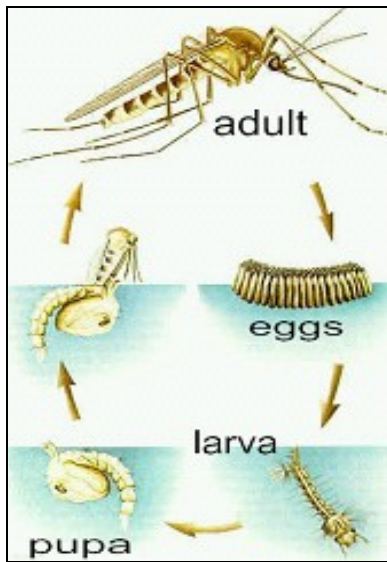


Figure from County of San Diego,
Department of Environmental Health,
Vector Control Program website

The mosquito has four stages of life (Figure 1, The Mosquito Life Cycle). The life cycle begins when a female lays an egg raft on top of water that can contain up to 100 eggs. Total development from egg to adult can be less than one week during periods of warm weather and the average adult mosquito usually lives for about two weeks. Almost all mosquitoes need standing water to complete their life cycle. For this reason, mosquitoes are usually found in areas of standing water including wetlands, irrigation ponds, detention basins, percolation and infiltration basins, and other stormwater conveyance systems. Only female mosquitoes bite. They need the protein and nutrients from blood for their developing eggs.

There are approximately 24 species of mosquitoes found in San Diego County and of these; there are at least four that are known to carry diseases that can be passed to humans. The recent spread of West Nile virus (WNV) has increased the health risk of mosquito contact and

increased the importance of designing and maintaining measures to prevent mosquito breeding. Prevention and remedial measures can also protect or prevent (1) the individuals who are allergic to bites of various mosquitoes and other vector species; (2) numerous bites or stings from vectors which can destroy the pleasure of patio or garden use in suburban areas; (3) large numbers of biting or stinging vectors in recreational areas; and (4) secondary infections which can result from bites and stings.

San Diego County's Vector Control Program (VCP) has developed a comprehensive early detection, surveillance, and response plan to control the spread of WNV. For more information visit the VCP website at www.sdfightthebite.com.

Vector Sources

Vector sources occur where conditions provide habitat suitable for breeding. Backyard residential sources of standing water are common mosquito breeding sources. These sources include unmaintained swimming pools and buckets, toys, and other common items that can hold even small amounts of water. Ponds and reservoirs are another major source of mosquitoes.

Any source of standing water, including but not limited to natural and constructed wetlands, irrigation ponds, detention basins, percolation and infiltration basins, and other stormwater conveyance systems (even those below ground) can be breeding grounds for mosquitoes and other vectors resulting in adverse public health effects related to vectors and disease transmission.

Stormwater Management

A standard requirement for new development is the incorporation of Best Management Practices (BMPs) to reduce stormwater flow rates, allowing stormwater to infiltrate into the ground, and to reduce constituent concentrations in runoff. Unfortunately, BMPs for managing runoff often provide aquatic habitats suitable for mosquitoes and other vector species as an unintended consequence of their implementation.

An often overlooked aspect of treatment BMP implementation is the long-term commitment of funds necessary for proper maintenance of structures. Routine and timely maintenance is critical for suppressing mosquito breeding as well as for meeting local water quality goals. If maintenance is neglected or inappropriate for a given site, even structures designed to be the least “mosquito friendly” may become significant breeding sites.

Every possible effort should be made to “design the bugs out” early in the project design phases. Vectors should be considered during the preparation of stormwater management and maintenance plans and during preconstruction planning to avoid creating possible public health hazards. The County of San Diego includes guidance in the Standard Urban Stormwater Mitigation Plan (SUSMP) to minimize the mosquito production potential of treatment BMPs. The County of San Diego requires that stormwater management facilities be designed so that water will drain within 72 hours to prevent mosquito breeding.

Standard Mitigation and Project Design Considerations

Minimizing mosquito production potential requires that standing water not be available for sufficient time to permit eggs to develop to adult mosquitoes. For stormwater BMP's, this can be achieved in one of three ways: 1) discharge of all captured water within 72 hours, 2) deny mosquitoes access to standing water, or 3) make the habitat less suitable for mosquito breeding. The most effective design strategy to exclude vectors from Low Impact Development (LID) Integrated Management Practices (IMPs) is to design the system to ensure that water is discharged within 72 hours, thereby eliminating the potential vector breeding source. The below recommendations are adapted from the document, “Managing Mosquitoes in Stormwater Treatment Devices” prepared by the University of California, Agriculture and Natural Resources, UC Mosquito Research Program. Management of standing water to eliminate the potential for vector breeding sources associated with stormwater treatment facilities must be addressed in the project's Stormwater Management Plan (SWMP).

Design Measures to promote rapid discharge of captured water in BMP's

- Select or design an alternative stormwater device that provides adequate constituent removal and complete drainage within 72 hours. Special attention to groundwater depth is essential to determining water residence times.
- Incorporate features that prevent or reduce the possibility of clogged discharge orifices (e.g., debris screens). The use of weep holes is not recommended due to rapid clogging.
- Use the hydraulic grade line of the site to select a treatment BMP that allows water to flow by gravity through the structure. Pumps are not recommended because they are subject to failure and often require sumps that hold water.
- Design distribution piping and containment basins with adequate slopes to drain fully and prevent standing water. The design slope should take into consideration buildup of sediment between maintenance periods.
- Avoid the use of loose riprap or concrete depressions that may hold standing water.
- Avoid barriers, diversions, or flow spreaders that may retain standing water.

REFERENCES

- Metzger, Marco E. (2004). *Managing Mosquitoes in Stormwater Treatment Devices* California Department of Health Services, Vector-Borne Disease Section. University of California, Division of Agriculture and Natural Resources
<http://www.ucmrp.ucdavis.edu/publications/managingmosquitoesstormwater8125.pdf>
- Additional information on mosquitoes and other vectors in San Diego may be found in the Vector section of the San Diego County LID Literature Index.

G. LID Treatment BMPs Design Considerations

LID site design BMPs are more readily applied to new development where the implementation of these methods can begin as part of the planning phase. LID BMPs applied to retro-fit and in-fill projects in most cases need to consider to a greater extent existing site conditions. These site conditions as discussed below may limit the application of LID BMPs and need to be considered in the design approach.

Design considerations for LID site development BMPs include increasing travel time to maintain the time of concentration and provide storage to control both peak flows and total runoff volume to address hydro-modification issues. As discussed previously, the design approach to LID site design BMPs with regard to storm water quantity requirements should be based on the design criteria presented in the updated Hydraulic Design Manual, updates to the SUSMP and the Hydro-modification Plan that is under development.

LID BMPs may also function in new development, in-fill development and retro-fits to address urban runoff water quality issues. For most in-fill and retro-fit projects in built-out and urbanized areas of the County, LID site design techniques are often limited. However, LID BMPs that also address water quality issues may be applicable where site conditions are favorable. Per the Municipal Stormwater Permit for San Diego County (January 2007), LID BMPs that are correctly designed to effectively infiltrate, filter, or treat runoff can be considered treatment control BMPs. Where LID BMPs are used as “Treatment BMPs”, the design approach needs to consider both water quantity and quality requirements. LID BMPs applied to retro-fit projects may be integrated into an overall watershed program to reduce the overall volume of impacted runoff entering the receiving waters.


LID BMPs that use infiltration as a primary or secondary function need to consider both sub-surface vertical and horizontal hydraulic conductivity and the design volume or flow of runoff to be “treated” by the BMP. LID BMPs include permeable pavement, bioretention, bioswales, stormwater planters, wetlands and turf replacement which all have a secondary infiltration function. “Infiltration BMPs” such as infiltration trenches, infiltration basins, permeable pavements without under-drains and infiltration devices are examples of LID BMPs where infiltration is the primary function.

The determination of infiltration rates within the sub-soils is one of a number of site conditions that need to be assessed as part of the design of LID BMPs. As recommended throughout this document, these site conditions should be conducted and reported by a geotechnical engineer or other qualified, licensed professional. Generally, there are less of these site issues for new development compared to in-fill and retro-fit projects. The site conditions that should be assessed include:

- Infiltration Rate - Vertical and horizontal hydraulic conductivity of the sub-surface soils below the bottom elevation of the BMP

- Depth to Groundwater – Distance to the groundwater table and the potential for groundwater mounding, short circuiting through higher permeability pathways, and increased down-gradient seepage
- Existing Structures – Distance to existing structure and the potential of damage from increased infiltration
- Existing Infrastructure/ Utilities - Distance to existing infrastructure and utilities and the potential of damage from increased infiltration
- Slope Stability – Potential for increase in pore water pressures leading to instability of down-gradient slopes and damage to property
- Expansive Soils – Presence of expansive clays that are adjacent to or under existing structures that may result in damage

Based on the infiltration rate of the underlying soils, additional storage may be required as part of the LID BMP depending on the treatment volume or rate required. Storage can be provided, for example, in the granular sub-base layer of a porous pavement section or in the amended soil and/or granular layers in a bio-retention BMP. As shown in the figure below, the required storage may be based on a comparison of the rate of infiltration of the sub-soils and the design storm hydrograph. If the design requirement is to capture the entire flow of the design storm represented by the hydrograph, then the required storage volume would be the area under the hydrograph and above the infiltration line.

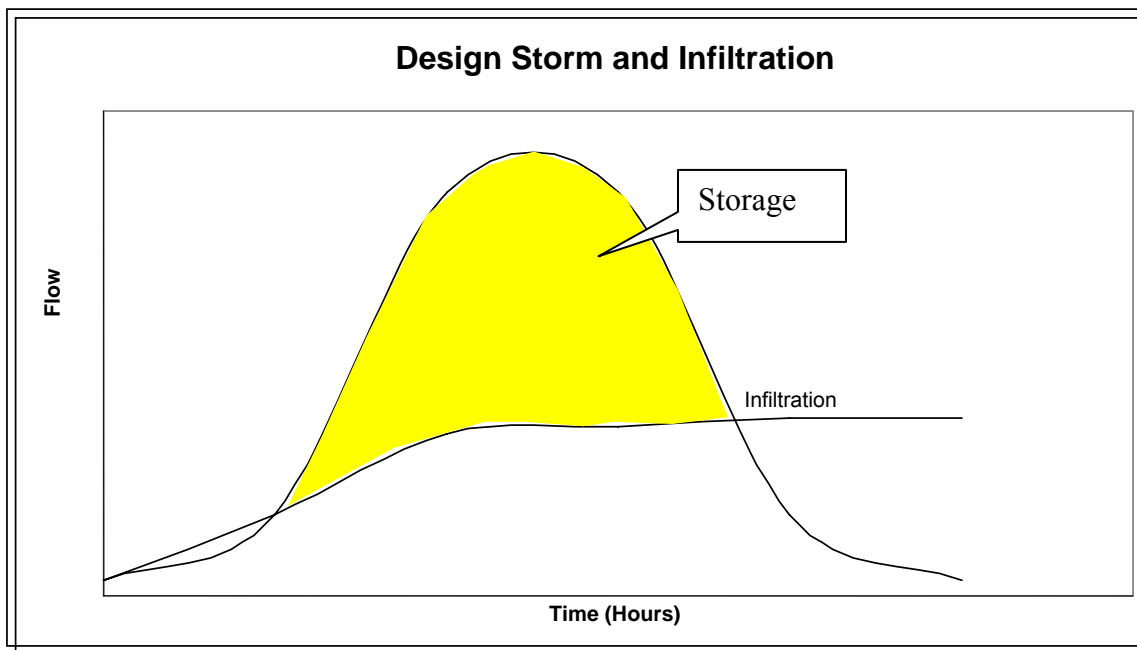

The determination of the required storage volume will depend on the design treatment volume or flow. This selection of the design treatment sizing criteria will depend on the specific applicable and relevant regulatory drivers. The regulatory requirements will depend on the location of the site and water quality issues within the associated watershed and jurisdiction.

The design criteria for sizing of site design LID BMPs will be developed as part of the SUSMP and Hydrology Manual updates. LID BMPs may also be designed as treatment or pollution control BMPs. Where LID BMPs have a treatment or pollution reduction function, the sizing of the LID storage and treatment components may consider additional regulatory drivers. For example, the San Diego Region Municipal Stormwater Permit (Order No. R9-2007-0001) requires for all treatment control BMPs on Priority Development Projects (see D.d.(1) of the Permit) to meet the following design criteria:

- Volume-based BMPs – 24-hr 85th percentile storm event
- Flow-based BMPs – maximum flow rate from 0.2 inch per hour rainfall or max. flow rate from 85th percentile hourly rainfall intensity

The Permit allows for LID BMPs that are correctly designed to effectively infiltrate, filter or treat runoff to be considered treatment control BMPs. LID treatment/pollution control BMPs located in jurisdictions that need to consider additional pollution reduction goals as part of a TMDL program may also include design approaches that consider design storms based on pollutograph data and specific pollutant reduction goals of the watershed. These design approaches will be further developed in the next phase and will depend on the specific watershed and jurisdiction regulatory drivers.


The application of these regulatory driven approaches to the LID BMP design needs also to consider the specific site conditions as listed above. Sites with a greater number of constraints to increased infiltration and storage requirements will require additional engineered system components. For example, site with low permeability soils will require additional storage above the sub-soils (where appropriate). The application of LID treatment control BMPs to sites that are characterized as least favorable for infiltration BMPs, may not suitable from a cost benefit perspective when compared to other BMPs. The table below presents a possible range of site types from more (Site A) to least favorable (Site C) based on site conditions. Possible engineering solutions are listed in the table to address these constraints. The design approach to LID treatment BMPs needs to consider possible engineering solutions, however, a cost benefit analysis should be performed to compare with other possible BMPs to address water quality goals.

Site Constraints	Example Site A	Example Site B	Example Site C	Possible Engineering Components
Low Permeability Soils	√	√	√	Increase storage by increasing depth and porosity of sub-base layers and amending sub-soils (or line and drain)
Shallow Groundwater			√	Evaluate potential mounding and migration of constituents to verify BMP will not impact groundwater
Adjacent to Existing Structures		√	√	Provide underdrains and/or liners to prevent seepage from damaging existing structures
Space is Limited		√	√	Evaluate the potential to provide greater storage below ground or provide storage through green roofs, rain barrels or other rain collection techniques
Adjacent to Existing Infrastructure / Utilities	√	√	√	Provide underdrains and/or liners to prevent seepage from damaging existing structures
Proximity to Foundations			√	Provide underdrains and/or liners to prevent seepage from damaging existing structures
Potential Slope Stability Issues		√		Evaluate the potential for increased pore water pressure from increased infiltration
Presence of Expansive Soils			√	Provide underdrains and/or liners to prevent seepage from damaging existing structures. Rely on evapo-transpiration as primary function rather than infiltration.

The approach to evaluating a site for the application of LID treatment BMPs should therefore include first identifying the desired level of treatment based on the regulatory drivers. The regulatory drivers can then be used to assign a design volume or flow. Site conditions should then be assessed to determine the constraints to achieve the treatment goal. Based on the site constraints, a cost benefit analysis should then be conducted compared to other approaches to meet water quality goals. This cost benefit analysis should evaluate the increased costs to achieve higher infiltration or overall treatment volume based on site constraints. At higher treatment volumes and flows costs are likely to increase sharply at a point where significant additional engineering components are required to address existing site constraints. As shown in the figure below, this point of sharp cost increase should then be compared to other water quality treatment options

where required by the specific regulatory drivers. Site with less favorable conditions (Site C) will have sharp increased costs at lower infiltration/treatment volume compared to more favorable sites (Site A). The application of LID treatment BMPs to these less favorable sites may therefore not be cost effective.

These design considerations for the application of LID BMPs should be compared to the applicable watershed and jurisdictional urban runoff management program goals and design guidelines.

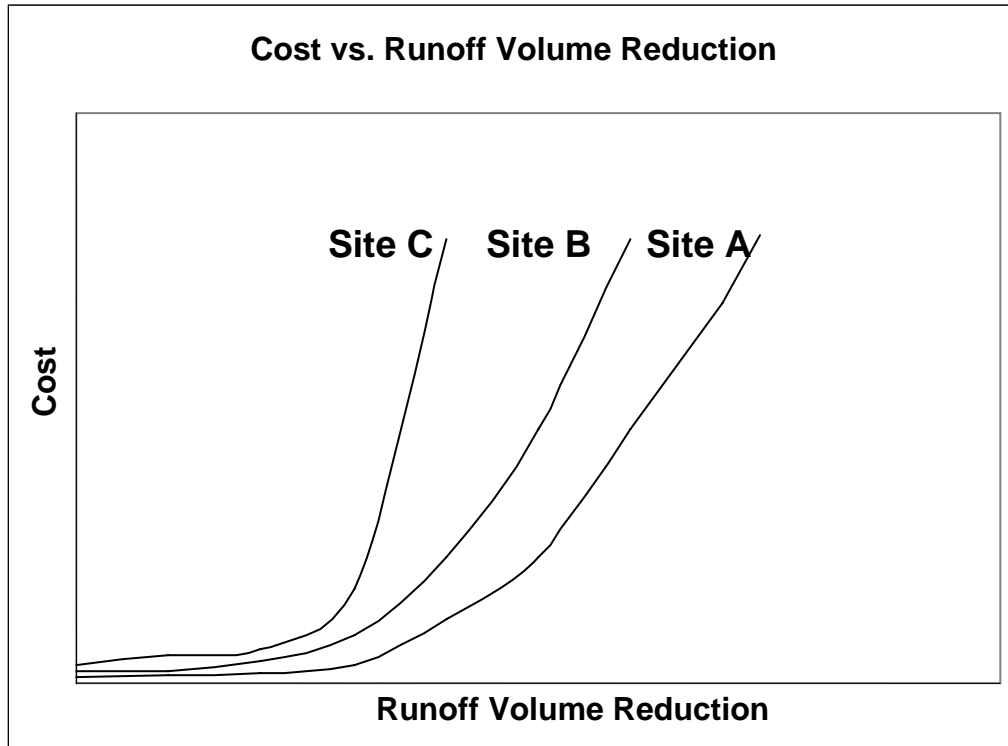

Appendix 4 Technical Fact Sheets

LID site design uses planning and design strategies to minimize the quantity and improve the quality of stormwater from new development and redevelopment. The following fact sheets suggest techniques to reduce impervious surfaces, directly disconnect impervious areas from storm drains, maximize on-lot infiltration through vegetated and landscaped features, maximize multi-use open space, and minimize disturbance. Any particular design detail can make a small difference in the overall impact of a development, but when implemented with other IMPs, these details can exert a profound influence on the ability of a development to meet stormwater quality goals. These details will hopefully encourage planners, developers, engineers, and builders to utilize these opportunities to manage small quantities of runoff at many diverse locations throughout a site.

The techniques presented here are not all-inclusive, and may not be appropriate for every site or condition. The intent of these fact sheets is to encourage the use of and foster the development of alternative strategies where appropriate to reach water quality goals.

For further information regarding the techniques described below, refer to the Additional Literature Index. The sections titled Best Management Practices and Economics cover each of the techniques. The other sections in which information about a particular technique can be found are listed at the end of each fact sheet.

****Please Note****

All figures and illustrations are courtesy of Patric Dawe from BASMAA's "Start as the Source" Manual (1999) unless otherwise noted.

	Detention	Infiltration Practices			Filtration Practices						Reuse
Site Features and Design Objectives	Extended Detention Pond	Infil-tration Trench	Infil-tration Basin	Dry Well	Vegetated/ Rock Swale	Filter Strip	Sand Filter	Bio-retention system	Down-spout to Swale	Vegetated Roof and Walls	Cisterns and Rain Barrels
Clayey native soils	✓				✓	✓	✓	✓	✓	✓	✓
Permeable native soils	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓
Very steep slopes									✓	✓	
Shallow groundwater	✓				✓	✓	✓	✓	✓	✓	✓
Avoid saturation subsurface soils									✓	✓	
Connect to roof downspouts				✓	✓				✓		✓
Parking lots/ island medians					✓	✓	✓	✓			
Sites with extensive landscaping	✓		✓		✓	✓		✓			✓
Densely developed sites with limited space/landscape		✓		✓		✓	✓		✓	✓	✓
Fit BMPs into landscape and setback areas		✓			✓	✓	✓	✓			✓
Make drainage a design feature					✓	✓		✓			✓
Convey as well as treat stormwater					✓	✓			✓		

Adapted from Contra Costa's Stormwater C.3 Guidebook (2006).

Fact Sheet 1. Infiltration Trench

Infiltration trenches temporarily hold stormwater runoff within a sub-surface trench prior to infiltration into the surrounding soils. An infiltration trench is similar in function to an infiltration basin except that an infiltration basin's stored volume is held above ground, while an infiltration trench's stored volume is held below ground.

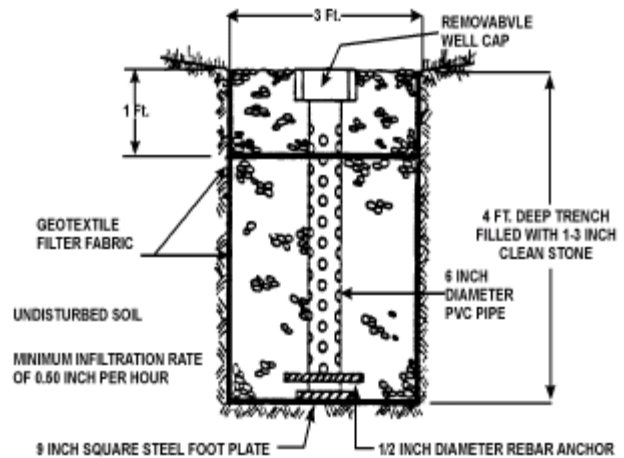


Photo: Southeastern Wisconsin Regional Planning Commission, 1991.

CHARACTERISITICS

- Runoff entering the system is stored in the void space of the aggregate material or modular cells prior to percolating into the surrounding soils
- Removes sediments and attached pollutants by infiltration through the sub-soils, reduces runoff volumes by infiltration into the sub-soils, delays runoff peaks by providing detention storage capacity and reducing flow velocities
- Surface area above the trench to be used for planting, gardens, temporary parking lots, etc.

APPLICATION

- Best suited to small residential, commercial and industrial developments with high percentages of impervious areas.
- Commonly used in conjunction with overlying permeable pavements as an effective treatment train.

DESIGN

- Typically constructed as a shallow trench filled with reservoir storage aggregate of gravel or cobbles, but can also comprise of modular plastic cells.
- The maximum contributing area to an individual infiltration trench should be less than 5 acres.
- The base of the trench must be ripped/tynd before placement of the overlying aggregate
- Soils analysis required to determine anticipated percolation rate through the sub-soil layer
- Construction phase runoff must not be allowed to enter and clog these facilities.

MAINTENANCE

- Careful site evaluation and inspection prior to construction is important for the effectiveness and longevity of the device
- Regular maintenance, including the replacement of clogged aggregate, will also increase the effectiveness and life of the trench.

- Generally, the maintenance needs of infiltration trenches is minimal, however, inadequate maintenance frequencies can result in the underlying surface soils becoming clogged.

LIMITATIONS

- Extensive geotechnical site evaluation must occur before construction to ensure that the infiltration trench will function properly without compromising groundwater, slopes, etc.
- “Infiltration BMPs” are not appropriate when:
 - The seasonal high groundwater table is within 10 feet of the base of the BMP
 - At locations where surrounding soil stratum is unstable
- exceptions to the 10 foot separation can be made when:
 - The BMP is designed with an under-drain and approved by a qualified licensed professional, or when:
 - Written approval of a separation within the interval of 4-10 feet has been obtained by the Regional Water Quality Control Board and the Department of Environmental Health.
- Generally, infiltration trenches are not suitable for: areas with heavy clay soils, exposed bedrock or shallow soils over rock or shale, steep terrain, locations with a high water table, potential salinity hazard areas, non-engineered fill or contaminated land and areas adjacent to building foundations or fill slopes.
- Upstream pre-treatment of litter and coarse sediments must be available to reduce clogging of the underlying infiltration surface (treatment train).

ECONOMICS

- Infiltration trenches are somewhat expensive, when compared to other stormwater practices, in terms of cost per area treated.
- One cost concern associated with infiltration practices is the maintenance burden and longevity. If improperly sited or maintained, infiltration trenches have a high failure rate. In general, maintenance costs for infiltration trenches are estimated at between 5 percent and 20 percent of the construction cost. More realistic values are probably closer to the 20-percent range, to ensure long-term functionality of the practice.

REFERENCES

- For more information on infiltration site selection please see the CALTRANS Infiltration Study (2003) at : http://www.dot.ca.gov/hq/env/stormwater/special/newsetup/_pdfs/new_technology/CTSW-RT-03-025/IFB_Final_Report.pdf
- California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment. Section TC-10 <http://www.cabmphandbooks.com/Documents/Municipal/TC-10.pdf>
- Southeastern Wisconsin Regional Planning Commission (1991). Costs of Urban Nonpoint Source Water Pollution Control Measures. Technical Report No. 31. Southeastern Wisconsin Regional Planning Commission, Waukesha, WI.
- URS Australia Pty Ltd, (2004, May), Water Sensitive Urban Design: Technical Guidelines for Western Sydney, Upper Parramatta River Catchment Trust. Section 3
- US EPA (1999, September) BMP Fact Sheet 832-F-99-019. <http://www.epa.gov/owm/mtb/infiltrenc.pdf>
- For additional information pertaining to Infiltration Trenches, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 2. Infiltration Basins

Infiltration basins are sited in either natural or excavated open areas and are designed to temporarily hold stormwater runoff prior to infiltration through the basin floor. They are similar in function to infiltration trenches except that an infiltration basin's stored volume is held above ground, while an infiltration trench's stored volume is held below ground.



CHARACTERISTICS

- Use the natural filtering ability of the soil to remove pollutants in stormwater runoff.
- Infiltration through the sub-soils serves to remove sediments and attached pollutants, reduce runoff volumes, and reduce downstream peak flows and velocities.

APPLICATION

- Most effective in removing coarse to fine sediments and attached pollutants
- Best suited to medium to large residential, commercial and industrial developments with high percentages of impervious areas.
- Best located within natural surface depressions or gullies within relatively large open areas.
- Best used in conjunction with passive recreation/green space.

DESIGN

- Can be constructed as either small or large scale devices. Small scale units are usually excavated pits or ponds, while larger scale units are typically located within natural surface depressions or gullies within the site occupying a large open area (i.e. playing field or parkland)
- Extensive site evaluation should take place to ensure that a particular site is suitable for an infiltration basin before one is constructed.
- Construction phase runoff must not be allowed to enter and clog these facilities.
- Infiltration basins typically consume about 2 to 3% of the site draining to them, which is relatively small. Additional space may be required for buffer, landscaping, access road, and fencing.
- Soils analysis required to determine the anticipated percolation rate through sub-soil layer.
- Should be constructed as part of a stormwater treatment train, with upstream pre-treatment of litter and coarse sediments
- Water quality volume determined by local requirements.
- Basin sized so that the entire water quality volume is infiltrated within 48 hours.
- Vegetation establishment on the basin floor may help reduce the clogging rate.

- Build the basin without driving heavy equipment over the infiltration surface. Any equipment driven on the surface should have extra-wide (“low pressure”) tires. Prior to any construction, rope off the infiltration area to stop entrance by unwanted equipment.
- After final grading, the infiltration surface should be tilled deeply to maximize infiltration.

MAINTENANCE

- Regular maintenance is critical to the sustained operation of infiltration basins
- Inspection and maintenance must ensure that water infiltrates into the subsurface completely and that the desired drain time is preserved.
- Drain time and vegetation must be monitored to prevent mosquito and vector habitat.
- Semiannual inspections are required to identify potential problems such as erosion of the basin side slopes and invert, standing water, trash and debris, and sediment accumulation.
- Remove accumulated sediment and regrade when the accumulated sediment volume exceeds 10% of the basin.
- If erosion is occurring within the basin, revegetate immediately and stabilize with an erosion control mulch or mat until vegetation cover is established.

LIMITATIONS

- Extensive geotechnical site evaluation must occur before construction to ensure that the infiltration basin will function properly without compromising groundwater, etc.
- “Infiltration BMPs” are not appropriate when:
 - The seasonal high groundwater table is within 10 feet of the base of the BMP
 - At locations where surrounding soil stratum is unstable
- exceptions to the 10 foot separation can be made when:
 - The BMP is designed with an under-drain and approved by a qualified licensed professional, or when:
 - Written approval of a separation within the interval of 4-10 feet has been obtained by the Regional Water Quality Control Board and the Department of Environmental Health.
- Generally, infiltration basins are not suitable for: areas with heavy clay soils, exposed bedrock or shallow soils over rock or shale, steep terrain, locations with a high water table, potential salinity hazard areas, non-engineered fill or contaminated land and areas adjacent to building foundations or fill slopes.
- Upstream pre-treatment of litter and coarse sediments must be available to reduce clogging of the underlying infiltration surface.


ECONOMICS

- Relatively cost-effective due to low infrastructure cost during construction.
- Land availability and cost should be taken into consideration.
- Maintenance costs are estimated at 5 to 10% of construction costs.
- If improperly maintained, infiltration basins have a high failure rate. Thus, it may be necessary to replace the basin with a different technology after a relatively short period of time.

REFERENCES

- For more information on infiltration site selection please see the CALTRANS Infiltration Study (2003) at :
http://www.dot.ca.gov/hq/env/stormwater/special/newsetup/_pdfs/new_technology/CTSW-RT-03-025/IFB_Final_Report.pdf
- California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment. Section TC-11
- URS Australia Pty Ltd, (2004, May), Water Sensitive Urban Design: Technical Guidelines for Western Sydney, Upper Parramatta River Catchment Trust. Section 3.
- Southeastern Wisconsin Regional Planning Commission (1991). Costs of Urban Nonpoint Source Water Pollution Control Measures. Technical Report No. 31. Southeastern Wisconsin Regional Planning Commission, Waukesha, WI.
- For additional information pertaining to Infiltration Basins, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 3. Extended detention (dry) ponds

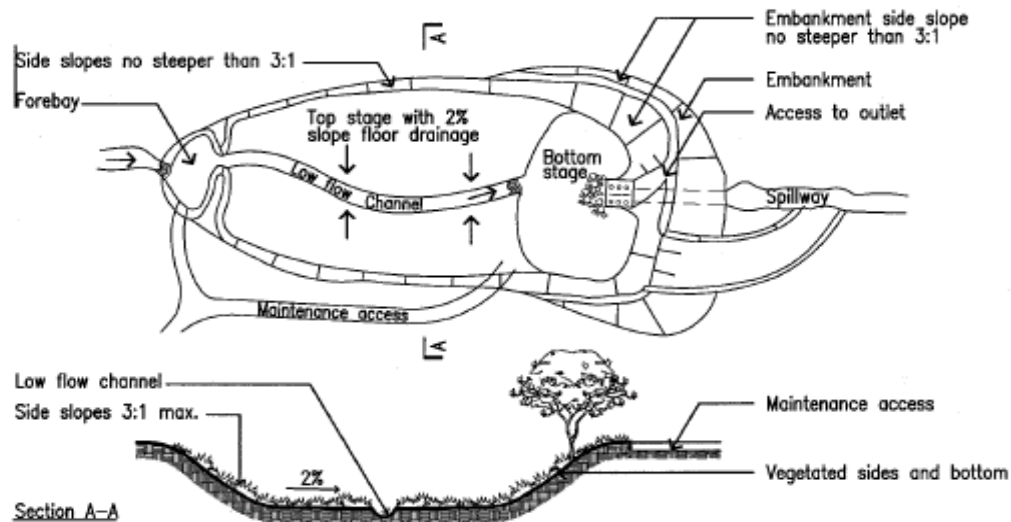

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Extended detention (dry) ponds store water during storms for a short period of time (from a few hours up to three days), and discharge water to adjacent surface waters. Stormwater design volumes are designed to be stored in such basins for more than 1 day to provide adequate settling time and maximize pollutant removal. The basins are dry between storms, and do not have a permanent pool of water. This tool is best suited for use as part of a treatment train in conjunction with other LID techniques.

CHARACTERISTICS

- If properly designed, ponds can have a lifetime of 50 years.
- Clay or impervious soils should not affect pollutant removal effectiveness, as the main removal mechanism is settling.
- Pollutants removed primarily through gravitational settling of suspended solids, though a small portion of the dissolved pollutant load may be removed by contact with the pond bottom sediments and/or vegetation, and through infiltration.
- Moderate removal of suspended solids (sediment) and heavy metals.
- Low to moderate removal of nutrients and Biological Oxygen Demand (B.O.D.).
- Pollutant removal can be maximized by increasing residence time; two-stage pond design, with the addition of wetland vegetation to lower stages of the pond; sediment trapping forebay to allow efficient maintenance; regular maintenance and sediment cleanout; installing adjustable gate valves to achieve target detention times; designing pond outlet to detain smaller treatment volumes (less than two-year storm event).

APPLICATION

- May be initially used as construction settling basins, but must be re-graded and cleaned out before used as a post-construction pond.
- May be designed for both pollutant removal and flood control.
- May be appropriate for developments of 10 acres or larger.

- Potential for multiple uses including flood control basins; parks, playing fields, and tennis courts; open space; overflow parking lots.

DESIGN

- Coordinate pond design, location, and use with local municipal public works department and/or county flood control department to reduce potential downstream flooding.
- Default conditions for safety have been to fence basins with chain link. Consider aesthetic design elements with safety analyst to address pond barriers, such as fencing and/or vegetation, and shallow side slopes (8:1 to 12:1).
- See County of San Diego Drainage Design Manual

MAINTENANCE

- Regular inspection during wet season for sediment buildup and clogging of inlets and outlets (designing a forebay to trap sediment can decrease frequency of required maintenance, as maintenance efforts are concentrated towards a smaller area of the basin and less disruptive than complete basin cleaning).
- Clean inlet trash rack and outlet standpipe as necessary.
- Clean out basin sediment approximately once per year (this may vary depending on pond depth and design, and if forebay is used).
- Mow and maintain pond vegetation, replant or reseed as necessary to control erosion.

LIMITATIONS

- Limitation of available space.
- Dry detention ponds have only moderate pollutant removal when compared to some other structural treatment controls and are relatively ineffective at removing soluble pollutants.
- Basins must be designed with vector control (max 72 hour residence time), sediment and vegetation removal/maintenance considerations in mind.
- Not suitable on sites with steep slopes.


ECONOMICS

- Least expensive stormwater quality pond option available. 0-25% additional cost when added to conventional stormwater detention facilities.
- Construction cost \$0.10-\$5.00 per cubic foot of storage (savings from preparing silt basins used during construction for use as extended detention ponds).
- Maintenance cost 3-5% of construction cost annually.

REFERENCES

- California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment.
- For additional information pertaining to extended detention ponds, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 4. Vegetated Swale / Rock Swale

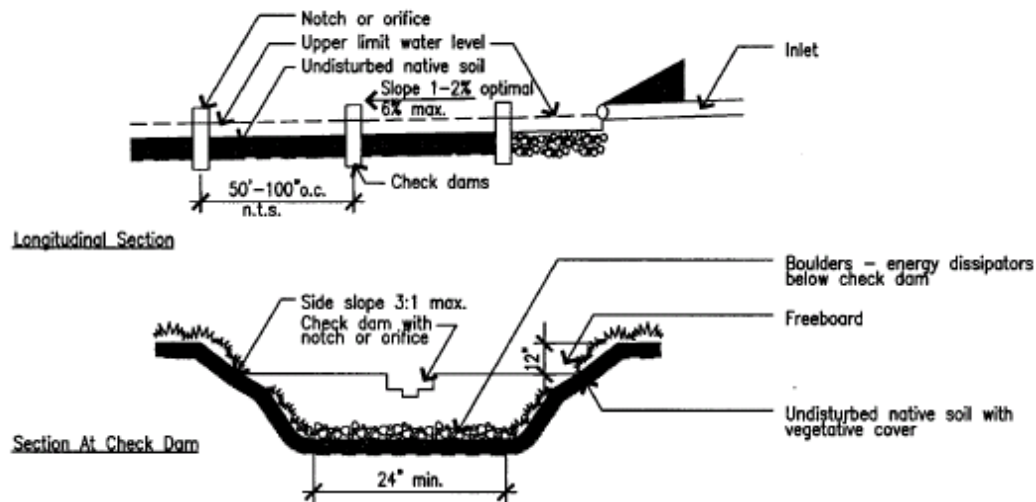

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Vegetated / rock swales are vegetated or rock lined earthen channels that collect, convey, and filter site water runoff and remove pollutants. Swales are an alternative to lined channels and pipes; configuration and setting are unique to each site.

CHARACTERISTICS

- If properly designed and maintained, swales can last for at least 50 years.
- Can be used in all soil types, natural or amended.
- When swales are not holding water, they appear as a typical landscaped area.
- Water is filtered by vegetation/rocks and pollutants are removed by infiltration into the subsurface of the soil.
- Swales also serve to delay runoff peaks by reducing flow velocities.

APPLICATION

- Swales are most effective in removing coarse to medium sized sediments.
- Parking lot medians, perimeters of impervious pavements.
- Street and highway medians, edges (in lieu of curb and gutter, where appropriate).
- In combination with constructed treatment systems or sand filters.

DESIGN

- Vegetation of each swale is unique to the setting, function, climate, geology, and character of each site and climatic condition.
- Can be designed with natural or amended soils, depending on the infiltration rate provided by the natural condition versus the rate needed to reduce surface runoff.
- Grass swales move water more quickly than vegetated swales. A grass swale is planted with salt grass; a vegetated swale is planted with bunch grass, shrubs or trees.
- Rocks, gravel, boulders, and/or cobbles help slow peak velocity, allow sedimentation, and add aesthetic value.

- Pollutant removal effectiveness can be maximized by increasing residence time of water in swale using weirs or check dams.
- Swales are often used as an alternative to curbs and gutters along roadways, but can also be used to convey stormwater flows in recreation areas and parking lots.
- Calculations should also be provided proving the swale capable of safely conveying the 100-year flow to the swale without flooding adjacent property or infrastructure.
- See County of San Diego Drainage Design Manual for design criteria. (section 5.5) <http://www.sdcounty.ca.gov/dpw/docs/hydrologymanual.pdf>

MAINTENANCE

- Swale maintenance includes mowing and removing clippings and litter. Vegetated swales may require additional maintenance of plants.
- Periodically remove sediment accumulation at top of bank, in swale bed, or behind check dams.
- Monitor for erosion and reseed grass or replace plants, erosion control netting and mulch as necessary. Fertilize and replace vegetation well in advance of rainy season to minimize water quality degradation.
- Regular inspections and maintenance is required during the establishment period.

LIMITATIONS

- Only suitable for grades between 1% and 6%; when greater than 2.5% should be paired with weir or check dam.
- “Turf” swales will commonly require irrigation and may not meet State water conservation goals.
- Irrigated vegetation is not appropriate in certain sites. Xeriscape techniques, natural stone and rock linings should be used as an alternative to turf.
- Wider road corridors may be required to incorporate swales.
- Contributing drainage areas should be sized to meet the stormwater management objective given the amount of flow that will be produced.
- When contributing flow could cause formation of low-flow channel, channel dividers must be constructed to direct flow and prevent erosion.

ECONOMICS

- Estimated grass swale construction cost per linear foot \$4.50-\$8.50 (from seed) to \$15-20 (from sod), compare to \$2 per inch of diameter underground pipe e.g., a 12” pipe would cost \$24 per linear foot).
- \$0.75 annual maintenance cost per linear foot

REFERENCES

- CALTRANS – Storm Water Handbook (cabmphandbooks.com)
- For additional information pertaining to Swales, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 5. Vegetated Filter Strips

A filter strip (or “buffer strip”) is an area of either planted or native vegetation, situated between a potential, pollutant-source area and a surface-water body that receives runoff. Vegetated filter strips are broad sloped open vegetated areas that accept shallow runoff from surrounding areas as distributed sheet flow.

CHARACTERISTICS

- Can serve to remove sediments by filtration through the vegetation, reducing runoff volumes, and delaying runoff peaks by reducing flow velocities.
- A properly designed and operating filter strip provides water-quality protection by reducing the amount of sediment, organic matter, nutrients and pesticides in the runoff at the edge of the field, and before the runoff enters the surface-water body.
- Filter strips also provide localized erosion protection since the vegetation covers an area of soil that otherwise might have a high erosion potential.
- Often constructed along road, parking-lot, stream, lake, pond or sinkhole boundaries, filter strips installed on cropland not only help remove pollutants from runoff, but also serve as habitat for wildlife.

APPLICATION

- Most effective in removing coarse to medium sediments and attached pollutants (such as nutrients, free oils/grease and metals).
- Typically used in conjunction with swales as an alternative to curb and gutter and can form part of a multi-use corridor.
- Typically used as a pre-treatment for other stormwater treatment devices (treatment train).

DESIGN

- The proper application of a filter strip should consider the type and quantity of the potential pollutant (sediment, nutrient, pesticide, organic matter, etc.), soil characteristics (clay and organic matter content, infiltration rate, permeability, etc.), slope steepness, shape and area of the field draining into the filter.
- Can be designed with natural or amended soils, depending on the infiltration rate provided by the natural condition versus the rate needed to reduce surface runoff .
- Most effective when used on gradually sloping areas
- The type of vegetation most suitable for the site should be decided based on soil type, potential pollutant sources/types, infiltration needs, etc.
- Once the type of vegetation is selected, soil fertility should be evaluated, and the seeding method selected.

MAINTENANCE

- Filter strips must be inspected after intense rainfall events and runoff events of long duration because small breaks in the sod and small erosion channels quickly become large problems.

- Minimize the development of erosion channels within the filter. Even small channels may allow much of the runoff from the field to bypass the filter. These areas should be repaired and reseeded immediately to help ensure proper flow of runoff through the filter.
- Periodic soil testing should occur and soil amendments should be applied as needed.
- Weeding may be necessary to reduce or eliminate weeds that could compromise the filter strip's effectiveness.

LIMITATIONS

- "Turf" buffer strips will commonly require irrigation and may not meet State water conservation goals.
- Irrigated vegetation may not be appropriate in certain sites. Xeriscape techniques, natural stone and rock linings can be used as an alternative to turf.
- Requires adequate sunlight for plant growth
- Effectiveness is dependant on soil characteristics, slope steepness, landscape shape, the ratio of the filter area to the area generating the runoff, filter width, and the type and quality of the vegetation in the filter.
- Regular inspections and maintenance is required, particularly during the establishment period.
- Requires sufficient space and designed large enough to meet the stormwater management objective given the amount of flow that will be produced.


ECONOMICS

- Installation costs for filter strips may be estimated by considering the amount of grading, seeding, and establishment required for the site. Filter strip installation costs are similar to those of vegetative swales, and typically lower than costs for bioretention swales with soil amendment or sand media filtration devices (2003 CASQA Development Handbook Tables 5-4 and 5-5).

REFERENCES

- California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment.
- Leeds, R., Brown, L. C., Sulc, M. R., VanLieshout, L, (n. d.) Vegetated Filter Strips: Application, Installation, and Maintenance. *Food, Agriculture and Biological Engineering*. Ohio State University Extension. <http://ohioline.osu.edu/aex-fact/0467.html>
- URS Australia Pty Ltd, (2004, May), Water Sensitive Urban Design: Technical Guidelines for Western Sydney, Upper Parramatta River Catchment Trust. Section 3.
- Southeastern Wisconsin Regional Planning Commission (1991). Costs of Urban Nonpoint Source Water Pollution Control Measures. Technical Report No. 31. Southeastern Wisconsin Regional Planning Commission, Waukesha, WI.
- For additional information pertaining to Filter Strips, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 6. Sand Filters

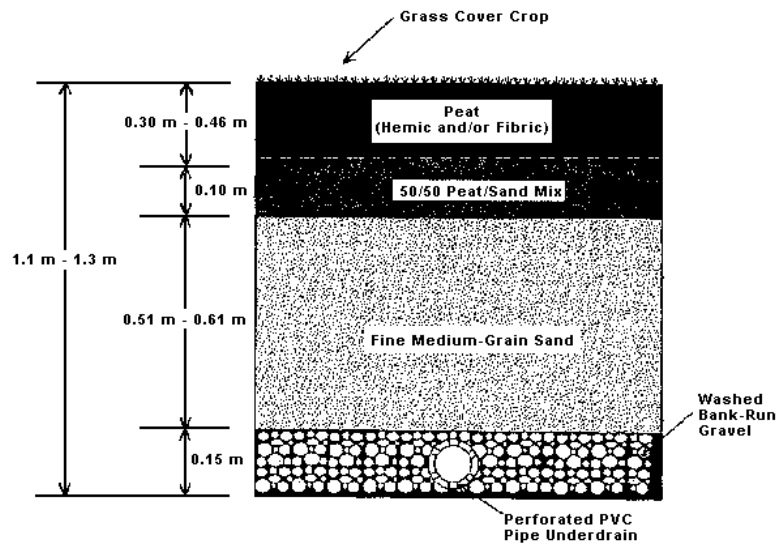

Typical peat-sand filter cross section, Young et al., (1996)

Sand filters have proven effective in removing several common pollutants from storm water runoff. Sand filters generally control storm water quality, providing very limited flow rate control (EPA). The purpose of sand filters is to manage the first flush, which typically contains the highest concentration of pollutants. There are two basic types of Sand Filters: the “Austin” design, which receives flow from a collection point, and the “Delaware” type, which takes dispersed sheet flow. Sand filters can be constructed either open to the surface or fully underground and can have a hard bottom or be open to the soil for infiltration of the treated runoff.

CHARACTERISICS

- Effective means of filtering
- Swales and sand filters remove suspended solids, pollutants that have been adsorbed into the solids, oil and grease
- Decrease flow rate and flow velocity by retaining stormwater as it filters through.

APPLICATION

- Most effective in removing medium to fine sized sediments and attached pollutants (such as nutrients, frees/grease and metals, especially when the sand is mixed with organic mulch)
- Best suited as near source treatment measures with small catchments (<50 acres) for residential commercial and industrial developments with high percentages of impervious areas, such as parking lots, service stations, high density residential housing and roadways.
- Sand filters are appropriate for retrofitting sites with space limitations and underground installations.
- Applicable in areas where underlying soils alone cannot treat runoff adequately - or where ground water tables are high.

DESIGN

- Can be constructed as either small or large scale devices.
- Small scale sand filter units are usually located in below ground concrete pits (as residential/lot level) comprising of a preliminary sediment trap chamber with a secondary filtration chamber.
- Larger scale sand filters may comprise of a preliminary sedimentation basin with a downstream sand filter basin-type arrangement.

MAINTENANCE

- Sand filters require frequent inspection and maintenance
- Annual removal and replacement of surface filter sand
- If upstream pre-treatment of litter and coarse sediments does not occur then filter clogging could become a major maintenance issue.


ECONOMICS

- Underground filters are generally considered to be a high-cost BMP option for water quality management. The cost of surface facilities using organic media filters is comparable to the cost of filtration facilities that use sand medium. For conceptual costing a price \$3,400 to \$16,000 per impervious acre served can be used to estimate the construction cost of a proposed facility, excluding real estate, design, and contingency costs (Schueler, 1994).

REFERENCES

- Young, G.K., Stein, S., Cole, P., Kammer, T., Graziano, F., Bank, F.. (1996). *Evaluation and Management of Highway Runoff Water Quality*. FHWA-PD-96-032. Federal Highway Administration, Office of Environment and Planning
- U.S. Department of Transportation, Federal Highway Administration
<http://www.fhwa.dot.gov/environment/ultraurb/3fs9.htm>
- US EPA (1999, September) BMP Fact Sheet 832-F-99-007.
<http://www.epa.gov/owm/mtb/sandfltr.pdf>
- Schueler, Thomas R. 1994. The importance of imperviousness. Watershed Protection Techniques 1:100-11
- For additional information pertaining to Sand Filters, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 7. Bioretention Systems

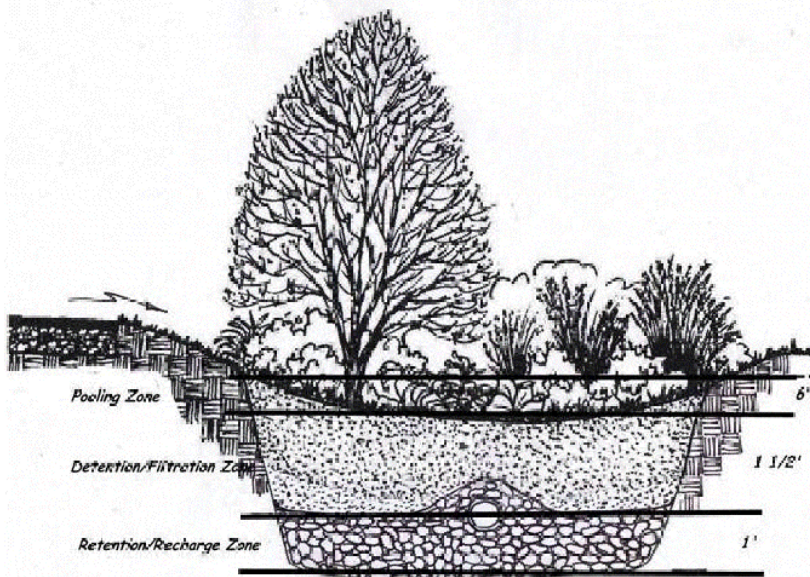

Typical Bioretention cross section, *Anatomy of a Rain Garden*, n.d.

Bioretention systems are essentially a surface and sub-surface water filtration system. In function they are similar to sand filters. Bioretention systems incorporate both plants and underlying filter soils for removal of contaminants. These facilities normally consist of a treatment train approach: filter strip, sand bed, ponding area, organic layer, planting soil, and plants.

CHARACTERISTICS

- Effective in removing sediments and attached pollutants by filtration through surface vegetation, ground cover and underlying filter media layer
- Delay runoff peaks by providing retention capacity and reducing flow velocities.
- Vegetation increases aesthetic value while also enhancing filtration capacity and helping to maintain the porosity of the filter media.
- Can be constructed as either large or small scale devices, with native or amended soils.
- Small scale units are usually located in a residential planter box that filters collected stormwater through the filter media and to an outlet.
- Larger scale devices work on the same methodology, however are generally located along the streetscapes and retarding basins over large open areas.
- In addition, there are two main types of bioretention system: Non-conveyance systems, which generally pond runoff volume, and Conveyance, which generally convey minor storm events along longitudinal channels. Such conveyance systems generally include an amended soil layer under the surface for additional storage and filtration

APPLICATION

- Effective in removing medium to fine size sediments and attached pollutants (such as nutrients, free oils/grease and metals), but typically have higher pollutant

- removal efficiencies for a wider range of contaminants due to enhanced filtration/biological processes associated with the surface vegetation.
- Best suited to small residential, commercial, and industrial developments with high percentages of impervious areas, including parking lots, high density residential housing, and roadways.
- Aesthetic benefits due to the surface vegetation make bioretention systems appealing for incorporation into streetscape and general landscape features.

DESIGN

- Provide a gentle slope for overland flow and adequate water storage. No water should be allowed to pond in the bioretention system for longer than 72 hours.
- Usually designed in conjunction with swales and other devices upstream so as to reduce filter clogging and provide water treatment (treatment train).
- Filter media employed is usually the plant growing material, which may comprise soil, sand and peat mixtures.
- “Planting box” type systems should be restricted to very small catchment areas.
- A subdrain system should be included in urban areas along with associated cleanout to facilitate maintenance.
- For more precise design techniques, see: CASQA (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment

MAINTENANCE

- Generally, only routine periodic maintenance typical of any landscaped area (mulching, plant replacement, pruning, weeding) is necessary.
- Regular inspections and maintenance are particularly important during the vegetation establishment period.
- Routine maintenance should include a biannual health evaluation of the trees and shrubs and subsequent removal of any dead or diseased vegetation.
- Other potential tasks include soil pH regulation, erosion repair at inflow points, mulch replenishment, unclogging the under-drain, and repairing overflow structures.

LIMITATIONS

- Adequate sunlight is required for vegetation growth.
- The use of irrigation may not meet State water conservation goals. Appropriate drought-tolerant plants should be considered.
- Placement may be limited by the need for upstream pre-treatment so as to avoid filter clogging (treatment train).
- Contributing drainage area should be less than 1 acre for small-scale, on-lot devices
- Bioretention (a BMP with incidental infiltration) is not an appropriate BMP when:
 - the seasonal high groundwater table is within 6 feet of the ground surface (US EPA 1999)
 - at locations where or where surrounding soil stratum is unstable
- exceptions to the 6 foot separation can be made when:
 - the BMP is designed with an under-drain and approved by a qualified licensed professional, or when:

- written approval of a separation in the interval of 4-6 feet has been obtained by the Regional Water Quality Control Board and the Department of Environmental Health.
- Site must contain sufficient elevation relief so that subdrain system may discharge to receiving swale, curb or storm drain system.


ECONOMICS

- Construction cost estimates for a bioretention area are slightly greater than those for the required landscaping for a new development (EPA, 1999).
- The operation and maintenance costs for a bioretention facility will be comparable to those of typical landscaping required for a site. (CASQA, 2003)
- Maintenance costs are projected at 5-7% of the construction cost annually.

REFERENCES

- California Stormwater Quality Association. (2003, January) California Stormwater BMP Handbook: New Development and Redevelopment.
- URS Australia Pty Ltd, (2004, May), Water Sensitive Urban Design: Technical Guidelines for Western Sydney, Upper Parramatta River Catchment Trust.
- US EPA (1999, September) BMP Fact Sheet 832-F-99-012.
<http://www.epa.gov/owm/mtb/biortn.pdf>
- US EPA (1999, August) Preliminary Studies: Preliminary Data Summary of Urban Stormwater Best Management Practices. EPA-821-R-99-012 Part D.
- For additional information pertaining to Bioretention Systems, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 8. Pervious Concrete

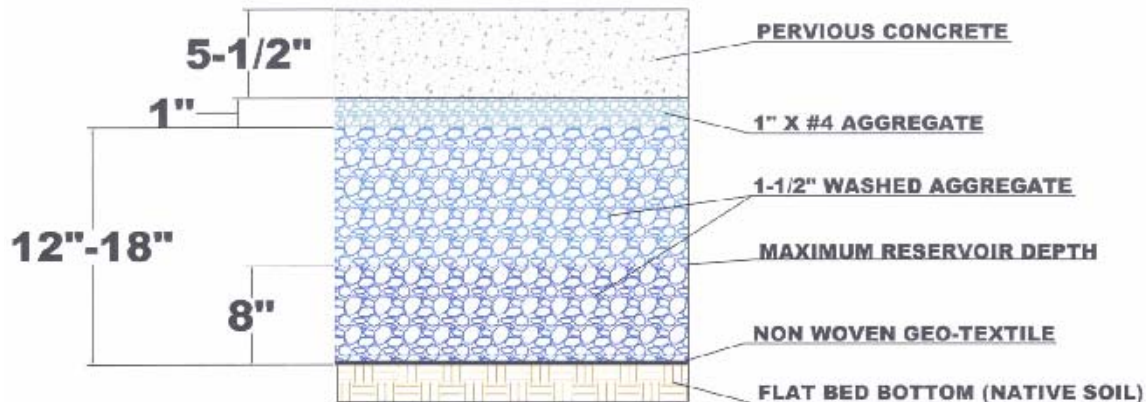

From the County of San Diego, Department of General Services, Permeable Pavement Study.

Pervious concrete is suitable for light to medium duty applications such as residential access roads, residential street parking lanes, parking lots, overflow parking areas, utility access, sidewalks, bike paths, maintenance walkways/trails, residential driveways, stopping lanes on divided highways, and patios.

CHARACTERISTICS

- Rigid, poured-in-place slab.
- Appearance similar to exposed aggregate.
- Texture will vary depending on the type of screed used during installation.
- An open-graded crushed aggregate base reservoirs for water storage is a critical component of a pervious concrete installation, especially in areas with low permeability soils.
- Curb and gutter system may not be necessary to control low flow.
- Runoff coefficient: very low to nil (can infiltrate up to 140cm/hr [56"/h])
- Reduces impervious land coverage

APPLICATION

- Flat sites (slope <5%) with uniform, permeable subgrade (or appropriate depth to construct deep base).
- Terraced, flat-bottomed stone reservoirs may be used to facilitate use of pervious concrete on steeper slopes.
- Low traffic volume bikeways, streets, travel lanes, parking stalls, residential driveways, patios.
- Not appropriate for gas stations, truck stops, areas with high concentrations of hydrocarbon leaching.
- Required pre-construction fire access roads must be constructed of conventional pavements due to construction sediments/fines.

DESIGN

- Install during a late phase of construction so that runoff will not enter and clog pavement pores.

- A thin (1-2") choker course of uniformly-graded 1/2" gravel material on top of the larger 2-3" stone reservoir stone facilitates placement of the pervious concrete.
- A maximum of one hour between on-site mixing and placing pervious concrete is recommended.
- Subgrade to be moistened before concrete is placed.
- The thickness of pervious concrete installations should be determined by a civil engineer based on analyses of hydraulic and structural requirements (typically 6").
- A geotechnical engineer or other qualified, licensed professional should verify the location of a pervious concrete installation as appropriate for infiltration.
- Subgrade and base rock design must be determined by a qualified professional according to soil conditions and intended use or anticipated loads.
- Base of open-graded crushed aggregate with no fine sands. Must be designed to support surface uses, allow water to flow through, and prevent migration of subbase soils.
- Avoid usage in high traffic areas.
- Slopes should be flat or very gentle.
- Filter fabric should be placed on the bottom and sides of the subbase reservoir.
- Erosion and sediment introduction from surrounding areas must be strictly controlled during and after construction to prevent clogging of void spaces in base material and permeable surface.
- Install pervious concrete towards the end of construction activities to minimize sediment transport and clogging of pores.
- During construction, do not allow construction or heavy vehicles to traverse excavated recharge beds or areas of newly completed permeable pavement.
- During emplacement of pervious concrete, boards should be used to separate individual pours and to produce uniform seams between adjacent pours.
- The surface of each pour should be finished as soon as possible because pervious concrete can set up very rapidly in our local arid environment.
- If surface permeability becomes ineffective due to clogging or accidental paving, water directed to a rock-edge drain will allow for infiltration into subbase when designed correctly (pages 41-42 in Porous Pavements by Bruce Ferguson).
- In areas with low permeability soil, an under-drain system may be needed.

MAINTENANCE

- The overall maintenance goal is to avoid clogging of the void spaces.
- Inspect permeable asphalt and concrete several times during the first few storms to insure proper infiltration and drainage. After the first year, inspect at least one time per year.
- Permeable pavements and materials should be cleaned with a vacuum-type street cleaner a minimum of twice a year.
- Hand held pressure washers can be effective for cleaning the void spaces of small areas.
- Maintenance personnel must be educated and instructed not to seal or pave with non-porous materials.

- Damaged pervious concrete can be removed and replaced with new pervious concrete. Small areas can be replaced with conventional concrete if drained to adjacent pervious material.

LIMITATIONS

- Appropriate construction techniques are necessary to ensure performance.
- Consistent mixes are critical in multi-pour projects.
- Proper hydration is critical in San Diego region because temperatures can vary considerably during multi-pour projects that may span several days.
- Curing with secure plastic sheeting must start immediately after placement and should continue for at least seven days.
- Typically not to be applied on street where speeds exceed 30mph or streets that experience high-traffic loads.
- Not applicable where the seasonal high groundwater table is closer than 10 feet below the bottom of the gravel subbase unless designed with an under-drain.
- Pervious concrete may experience raveling if not properly hydrated and installed.
- Pervious concrete may become clogged if not protected from nearby sediment sources or when not maintained.
- Applications with under-drain systems are typically more expensive than conventional concrete.
- Pervious concrete should be avoided in drainage areas with activities that generate highly contaminated runoff.
- Avoid using pervious concrete in close proximity to underground utilities. If it is necessary to use pervious concrete in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.


ECONOMICS

- Installation costs up to 50% greater than conventional concrete.
- Costs can be offset by savings in not installing curb and gutter drainage system.
- Maintenance cost up to 1-2% of construction cost annually.

REFERENCES

- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Pervious Concrete, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 9. Permeable Asphalt-Concrete (AC)

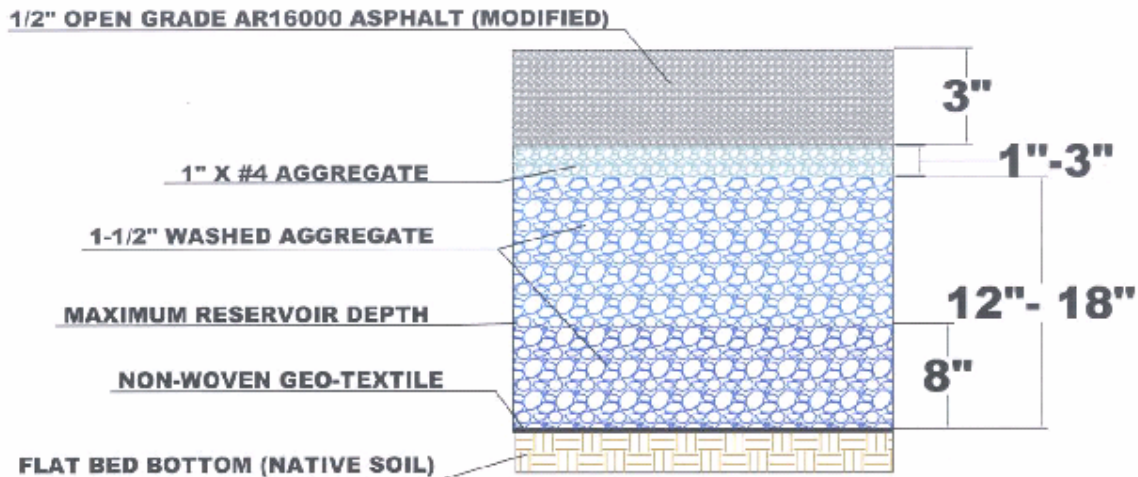

From the County of San Diego, Department of General Services, Permeable Pavement Study.

Permeable AC may be suitable for light to medium duty applications such as residential access roads, residential street parking lanes, parking lots, overflow parking areas, utility access, sidewalks, bike paths, maintenance walkways/trails, residential driveways, stopping lanes on divided highways, and patios.

CHARACTERISTICS

- Flexible, poured-in-place slab
- Appearance similar to conventional asphalt, though rougher surface.
- Rough, coarse surface improves traction in wet conditions, but may result in a rough ride.
- An open-graded crushed aggregate base reservoir for water storage is a critical component of a permeable AC installation, especially in areas with low permeability soils.
- Curb and gutter system may not be necessary to control low flow.
- Runoff coefficient: very low to nil (can infiltrate 50-150 cm/h [20-60"/h])
- Reduces impervious land coverage

APPLICATION

- For use in areas with mid-low traffic use, such as travel lanes, parking stalls, and especially well suited in parking lots.
- Flat sites (slope < 5%) with uniform, permeable subgrade.
- Not appropriate for gas stations, truck stops, or other areas in which hydrocarbon leaching occurs.
- Required pre-construction fire access roads must be constructed of conventional pavements due to construction sediments/fines.

DESIGN

- Install during a late phase of construction so that runoff will not enter and clog pavement pores.

- Subgrade and base rock design must be determined by a qualified professional according to soil conditions and intended use or anticipated loads.
- Base of open-graded crushed aggregate with no fine sands. Must be designed to support surface uses, allow water to flow through, and prevent migration of subbase soils.
- AC mix void content of 12-20%
- Filter fabric may be required below base course.
- Special tools are required for installation.
- Use a single size grading to provide open voids in the gravel subbase
- Erosion and sediment from surrounding areas must be strictly controlled during and after construction to prevent clogging of void spaces.
- Install permeable AC towards the end of construction activities to minimize sediment transport and clogging of pores
- During construction, do not allow construction or heavy vehicles to traverse excavated recharge beds or areas of newly completed permeable pavement.
- A qualified, licensed professional should verify the location of a permeable AC installation and subgrade preparation as appropriate for infiltration.
- Subgrade and base rock design must be determined by a qualified professional according to soil conditions and intended use or anticipated loads.
- During emplacement of permeable AC, boards should be used to separate individual pours and to produce uniform seams between adjacent pours.
- Permeable AC is stickier than conventional asphalt and a citron based releasing agent should be used to clean asphalt buildup from the supply truck bed.
- The surface of each pour should be finished as soon as possible as permeable AC can set up very rapidly in our local arid environment.
- In areas with low permeability soil, an under-drain system may be needed.

MAINTENANCE

- The overall maintenance goal is to avoid clogging of the void spaces.
- Inspect permeable AC several times during the first few storms to insure proper infiltration and drainage. After the first year, inspect at least one time per year.
- Permeable pavements and materials should be cleaned with a vacuum-type street cleaner a minimum of twice a year.
- Hand held pressure washers can be effective for cleaning the void spaces of small areas.
- Failures have been reported when pavements have been located down slope from an erosive soil and sediment is allowed to wash over the pavement. Caution must be taken during construction phase.
- Maintenance personnel must be educated and instructed not to seal or pave with non-porous materials.
- Small areas of damaged or removed permeable pavement can be repaired with conventional asphalt if drained to adjacent permeable AC.

LIMITATIONS

- Not applicable where the seasonal high groundwater table is closer than 10 feet below the bottom of the gravel subbase unless designed with an under-drain.
- Avoid using permeable pavements in close proximity to underground utilities. If it is necessary to use permeable pavements in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.
- Permeable AC may become clogged if not protected from sediment, or when not maintained.
- Applications with under-drain systems are typically more expensive than conventional asphalt
- Permeable AC should be avoided in drainage areas with activities that generate highly contaminated runoff.


ECONOMICS

- Up to 50% more than conventional asphalt pavement.
- Costs can be offset by savings in reducing or eliminating curb and gutter drainage system.
- Maintenance cost up to 1-2% of construction cost annually.

REFERENCES

- Cahill Associates – East Whiteland Township, Chester County, PA
- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Pervious Asphalt Concrete, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 10. Unit Pavers

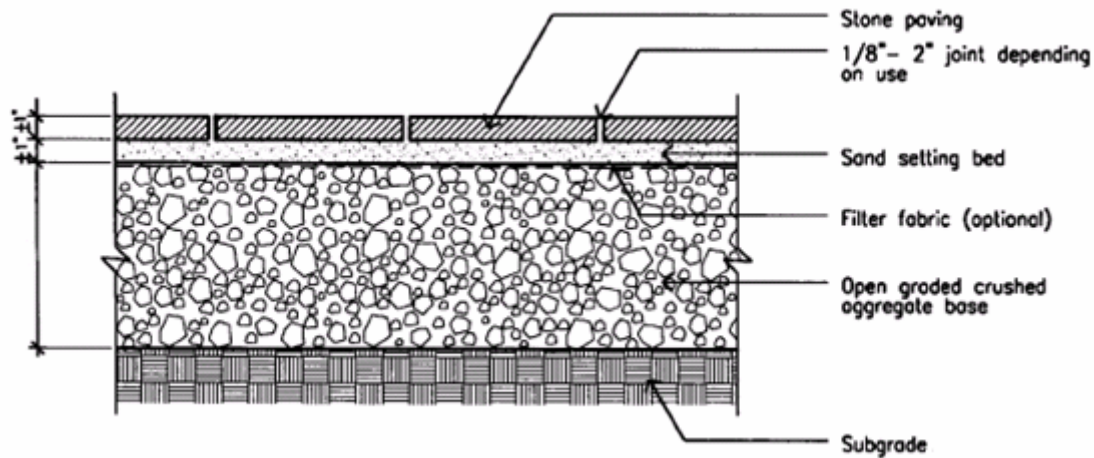

There are a variety of unit paver types that provide a pervious ground surface suitable for a variety of applications. Open celled unit pavers (turf block), brick paving, natural stone pavers, and solid pre-cast concrete unit pavers are all examples of unit pavers that can provide an attractive pavement with the added benefit of decreasing a development's impervious area.

CHARACTERISTICS

- Units vary in size, weight, surface characteristics, strength, durability, proportion of open area, interlocking capability, runoff characteristics, and cost.
- Units can be filled with gravel, stone, or salt grass turf.
- Turf units require deep-rooted grass species that can penetrate reservoir base course.
- Curbs and gutters are generally not necessary to control low flow.
- Runoff coefficient is generally between 0.13 and 0.8, but varies depending on rainfall intensity, joint spacing and paver type.
- Permeability is directly related to the permeability of the subgrade.
- Reduces impervious land coverage.
- Pavers are available in a variety of materials of varying colors, textures, shapes and finishes.
- Load bearing capacity is dependant upon the type of paver used.

APPLICATION

- Application varies based upon paver type.
- Areas of low flow traffic and infrequent parking such as residential driveways, overflow parking areas, fire/emergency access roads, utility roads, pedestrian paths and jogging trails, and street shoulders are appropriate locations for turf block.

- Brick pavers, concrete pavers and natural stone pavers are generally suitable for driveways, walkways, patios, public sidewalks, parking lots, plazas, and low volume streets.

DESIGN

- Flat sites (slope < 5%) with uniform, permeable subgrade.
- To maximize permeability, use an open-graded crushed rock base course in reservoir design (not rounded pea gravels or fines).
- Subgrade must be designed for anticipated loads.
- Provide under drain system where there are no deep permeable soils.
- Avoid using permeable pavers in areas with underground utilities. If it is necessary to use permeable pavers in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.
- Because bricks and natural stone are laid loose, the field for these pavers must be enclosed by a rigid frame. Concrete, mortared brick on a concrete grade beam, redwood header, and metal edging are commonly used.
- Erosion and sediment introduction from surrounding areas must be strictly controlled during and after construction to prevent clogging of void spaces in base material and permeable surface.
- Runoff should enter the system after pre-treatment through other treatment train controls (i.e. buffer strips, drainage swales, etc.).
- Filter fabric should be placed on the bottom and sides of the subbase layer.
- Permeable pavers should be the last element installed during construction or redevelopment.
- Utilization of correct design specifications is essential for adequate infiltration, storage, and structural integrity of permeable paving systems.
- Contractors should be trained and have experience with installation.

MAINTENANCE

- Longevity ensured by locating in low erosion conditions, quality construction, and installation of good base layer.
- Easy to repair, since units are easily lifted and reset.
- Periodically add joint material (i.e. sand) to replace material that has been moved or worn by traffic or weather.
- Occasional weed suppression may be required.
- Turf units may need occasional reseeding and have similar maintenance of a regular lawn, requiring mowing, fertilization, and irrigation.
- Concrete pavers should not be washed to remove debris and sediment in the openings between pavers, rather sweeping with suction should be utilized.
- Pavers can be removed individually and replaced when utility work is needed.
- Top course aggregate can be removed or replaced in open-celled unit paving systems if they become clogged or contaminated.
- In open-celled unit pavers, grid segments should be replaced when three or more adjacent rings are broken or damaged.
- Must not be sealed with non-porous materials.

LIMITATIONS

- Concrete block is bulkier with smaller openings for soil and infiltration. The concrete draws the moisture out of the soil which tends to dry out the grass in hot, dry weather.
- Turf swales will commonly require irrigation and may not meet State water conservation goals.
- Irrigated vegetation is not appropriate in certain sites. Gravel/rock fill may be necessary in these sites.
- Permeability is directly related to the permeability of the subgrade.
- Some paver types are not suitable for all day parking, heavy use or areas with turning movements because grass gets insufficient sun for optimal growth or is suppressed by constant abrasion.
- Avoid using permeable pavements in close proximity to underground utilities. If it is necessary to use permeable pavements in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.
- Due to the irregular surface area that can occur with permeable pavers, permeable pavers shouldn't be considered for disabled parking spaces and walkways.
- Areas with high water tables, impermeable soil layers, or shallow depth to bedrock may not be suitable as infiltration areas with an open-graded base.
- Not recommended in areas with high grease or oil loads, such as near restaurant waste disposal areas, gas stations and truck stops.
- Not recommended in areas where high sediment loads are deposited on the surface, such as downslope of steep, erosion-prone areas.
- Modular blocks are not recommended for slopes exceeding 10 percent.

ECONOMICS

- \$4-\$25 per square foot, installed, depending on paver type used.
- Generally more expensive than concrete or asphalt pavements.
- The cost of concrete unit pavers is generally the lowest of all unit pavers, though it can vary depending on shipping, special colors or finishes.

REFERENCES

- Guadalupe River Project, San José, CA. Emergency access/fire lane.
- University of Miami Orange Bowl Stadium, Miami, FL. Parking lot with asphalt aisles, and turf block stalls,
- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Unit Pavers, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 11. Subsurface Reservoir Bed



From the County of San Diego, Department of General Services, Permeable Pavement Study.

Stone reservoir recharge beds underneath parking lots are beds of open-graded crushed stone that receive and store water for infiltration.

CHARACTERISTICS

- Underground system eliminates the possibilities of mud, mosquitoes and safety hazards sometimes associated with ephemeral surface drainage.
- Provides for storage of large volumes of runoff, which is directed underground by means of permeable pavements or perforated distribution pipes.
- Plastic domed stormwater chambers can be used to increase the capacity of a recharge bed.
- Constraints include soil infiltration rates, depth to water table and bedrock, and traffic type and volume.

APPLICATION

- Underneath parking lots generally in areas where land values are high and the need to control runoff is great.

DESIGN

- Recharge and storage basin of clean open-graded crushed stone with 40% void space.
- Filter fabric placed on floor and sides of recharge bed following excavation allows water to pass readily, but prevents soil fines from migrating up into rock basin, reducing effective storage area of recharge bed.
- Water can be directed to recharge beds via permeable pavement and/or a storm drain system discharging through perforated pipes.
- Soil layer of 4 feet or more with percolation rate of 0.5 inches per hour or more required; must be field tested.
- Direct all sediment-laden runoff from impervious surfaces (e.g., roof tops, roads, parking areas, walkways, etc) away from permeable pavement/recharge bed or pretreat to eliminate sedimentation.
- Prevent failures by implementing strict erosion/sediment control during construction.

MAINTENANCE

- Vacuum sweeping or pressure hosing recommended.

LIMITATIONS

- Avoid using permeable pavements in close proximity to underground utilities. If it is necessary to use permeable pavements in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.
- Not applicable where the seasonal high groundwater table is closer than 10 feet below the bottom of the gravel subbase unless designed with an under-drain.


ECONOMICS

- Accurate economic data pertaining to the use of subsurface reservoir beds is currently unavailable, however, site specific cost records can be found in the LID Literature Index.

REFERENCES

- Morris Arboretum, Philadelphia, PA.
- Automatic Data Processing corporate offices, Philadelphia, PA.
- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Permeable Pavement Recharge Beds, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 12. Crushed Aggregate (gravel)

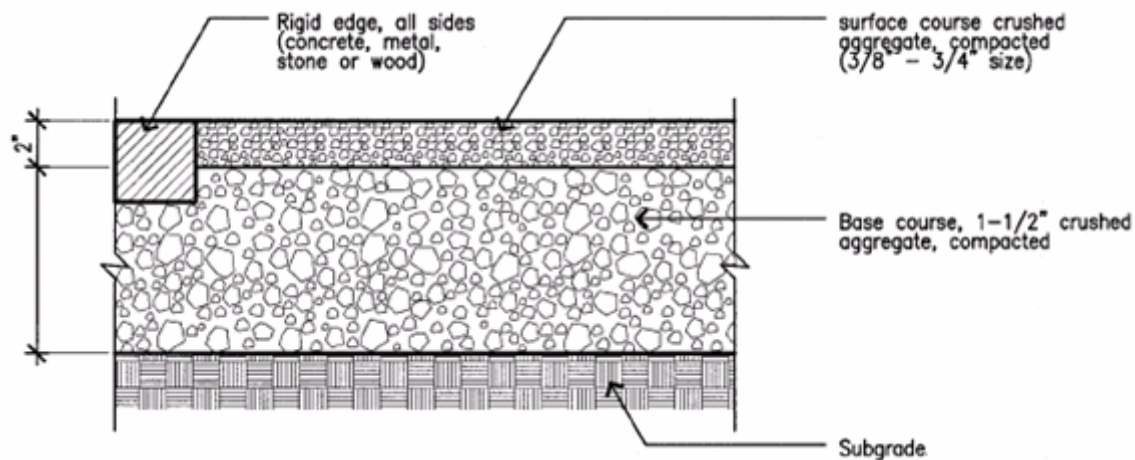

A variety of crushed aggregates, generally known as gravel, can be used to form a permeable pavement. Found in a variety of settings ranging from Parisian cafes to Japanese ceremonial gardens to rural roadways, crushed aggregate is a versatile, economical permeable pavement material with a long history of use.

CHARACTERISTICS

- A granular material, crushed aggregate can be laid in any shape field or configuration.
- Runoff coefficient: 0.10 – 0.40". Pavements of fine crushed stone (e.g. decomposed granite fines) are relatively impermeable. Permeability increases with larger aggregate sizes. Open-graded mixes are more permeable than mixes that include fines.
- Easy to install.
- Reduces impervious land coverage.

APPLICATION

- Low volume and low speed vehicle traffic areas.
- Parking stalls, private driveways, walkways, and patios.
- Areas of low erosion.
- Not appropriate for ADA-compliant accessible paths of travel.
- Flat sites (slope < 5%) with uniform, permeable subgrade.

DESIGN

- Because the aggregate is laid loose, the field must be enclosed by a rigid frame in most applications. Concrete, mortared brick on a concrete grade beam, redwood header, and metal edging are commonly used.
- To maximize permeability, use an open-graded crushed rock base course (not rounded pea gravels or fines).
- In areas with pedestrian traffic, use smaller aggregate (3/8" size). Larger aggregate (3/4" size) makes a better driving surface.

MAINTENANCE

- Longevity ensured by locating in low erosion conditions, quality construction, and installation of good base layer.
- Easy to repair since aggregate is easily re-graded and replenished.
- Occasional weed suppression may be required.
- To maximize permeability, minimize compaction of subgrade.
- Periodic and/or replenishing, raking of displaced gravel may be required.

LIMITATIONS

- Dust Control
- Not appropriate for ADA-compliant accessible paths of travel.
- Restrict heavy vehicle and equipment loading to prevent compaction of underlying soils when not used in conjunction with the recommended base course.
- Because the aggregate is laid loose, the field must be enclosed by a rigid frame in most applications.
- Avoid using permeable pavements in close proximity to underground utilities. If it is necessary to use permeable pavements in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.


ECONOMICS

- Less expensive than conventional asphalt or concrete pavement.
- Least expensive of all pavements, ranging from \$1 to \$3 per square foot.
- Reduced impervious land coverage reduces or eliminates need for catch basins/ underground storm drain system.

REFERENCES

- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Crushed Aggregate, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 13. Cobbles

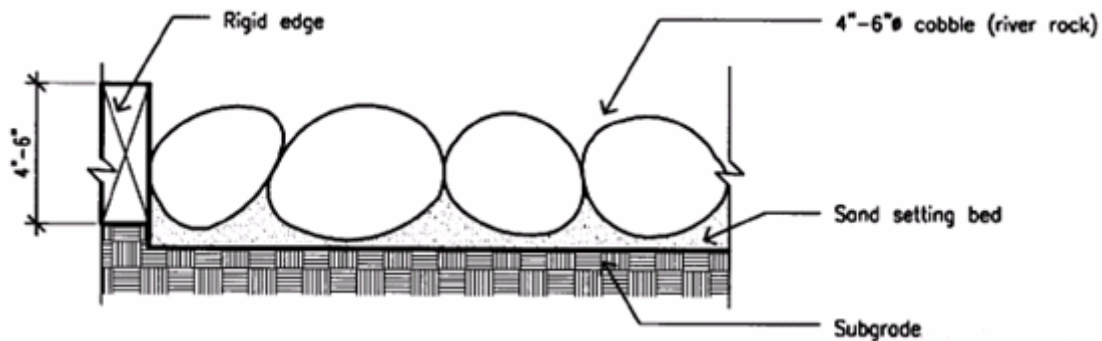

Larger granular materials are known as cobbles. Cobbles do not make a suitable surface for walking or vehicular traffic, but are useful as a permeable pavement in areas where little traffic is desired, such as under large trees, or in hard to maintain areas, such as median islands. Cobbles have similar construction characteristics as gravel, except they are somewhat more labor intensive to install because each cobble must generally be set individually.

CHARACTERISTICS

- Can be laid in a field of any shape or configuration with or without base.
- Material varies in color, shape, and size.
- Runoff coefficient: 0.60 – 0.90”; higher for larger sizes.
- Easy to install.
- Reduces impervious land coverage.

APPLICATION

- Commonly used around bases of trees in lawn areas and garden areas
- Commonly used in parkway planter strips and median islands.
- Commonly used with decorative mulch in landscaped areas.

DESIGN

- Rigid edges such as concrete, brick, wood or metal band is useful to keep cobbles in place.
- To maximize permeability, use an open-graded crushed rock base course (not rounded pea gravels or fines).
- Diameters range from 4” to 8”.
- A permeable filter fabric may be provided under the cobbles to suppress weeds and minimize migration of soil.

MAINTENANCE

- Periodic weed suppression may be required.
- Resetting or replacement of cobbles may be required periodically.

LIMITATIONS

- Not suitable for walkway surface or vehicular traffic

- Labor intensive to install because they have to be set individually
- Resetting or replacement of cobbles may be required
- Weed growth and sediment accumulation can impede permeability

ECONOMICS

- Easy to remove/reinstall
- Cost varies widely depending on material. Washed river rock is less costly than angular granite cobbles.

REFERENCES

- Ferguson, Bruce K. (2005). Porous Pavements: Integrative studies in water management and land development. CRC Press, Boca Raton, Florida.
- For additional information pertaining to Cobbles, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 14. LID Street Design

Streets and roads account for a significant portion of the impervious coverage in a given area and are one of the largest contributors to stormwater and pollutant runoff. LID techniques strive to reduce this impact by reducing impervious coverage and maximizing storm water infiltration and pollutant uptake.

CHARACTERISTICS

- Employs alternatives that reduce impervious coverage, such as reducing the length of the road network by exploring alternative street layouts.

APPLICATION

- Multiple techniques with a variety of applications can be utilized to achieve the goal of reducing impervious coverage and reducing pollutant runoff.
- Both city and rural streets have the potential for application of multiple LID techniques.
- Some possible applications include changes to road layout, street width, cul-de-sac design, use of permeable materials, utilization of traffic calming features as sites for LID components, curb-cuts, street-side swales, concave medians, as well as a number of others.

DESIGN

- Reduce the length of residential streets by reviewing minimum lot widths and exploring alternative street layouts
- Clustering homes and narrowing lot frontages can reduce road length by reducing the overall development area.
- Another approach is to lengthen street blocks and reduce cross streets, providing pedestrian and bicycle paths mid-block to increase access.
- When siting streets, consider natural drainage patterns and soil permeability.
- Consider access for large vehicles, equipment, and emergency vehicles when designing alternative street layouts, widths, and cul-de-sacs.
- Consider emergency access requirements and curve and sight distance requirements

MAINTENANCE

- Narrower streets should cost less to maintain than wider streets as they present less surface area to maintain and repair.
- Landscaped and bioretention cul-de-sacs and traffic calming areas will require routine maintenance associated with these areas.

LIMITATIONS

- Local zoning standards may require wide streets, sidewalks on one or both sides of streets, and curbed roads.

- Local zoning standards will also determine what other techniques may or may not be applicable.
- Arterial, collector and other street types with greater traffic volumes are not candidates for narrower streets.
- Street width and turnaround design need to accommodate emergency vehicles.


ECONOMICS

- Costs will vary based upon the techniques applied at each given location.
- Costs are also dependant on whether the application is a retro-fit or new construction.

REFERENCES

- Kennedy/Jenks Consultants (2005, August) Truckee Meadows, NV Low Impact Development Handbook: Guidance on LID Practices for New Development and Redevelopment
http://www.cityofreno.com/gov/pub_works/stormwater/management/land_use/
- City of Seattle street natural drainage systems:
http://www.seattle.gov/util/About_SPU/Drainage_&_Sewer_System/Natural_Drainage_Systems/index.asp
- For additional information pertaining to LID Street Design, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 15. Public Road Standard

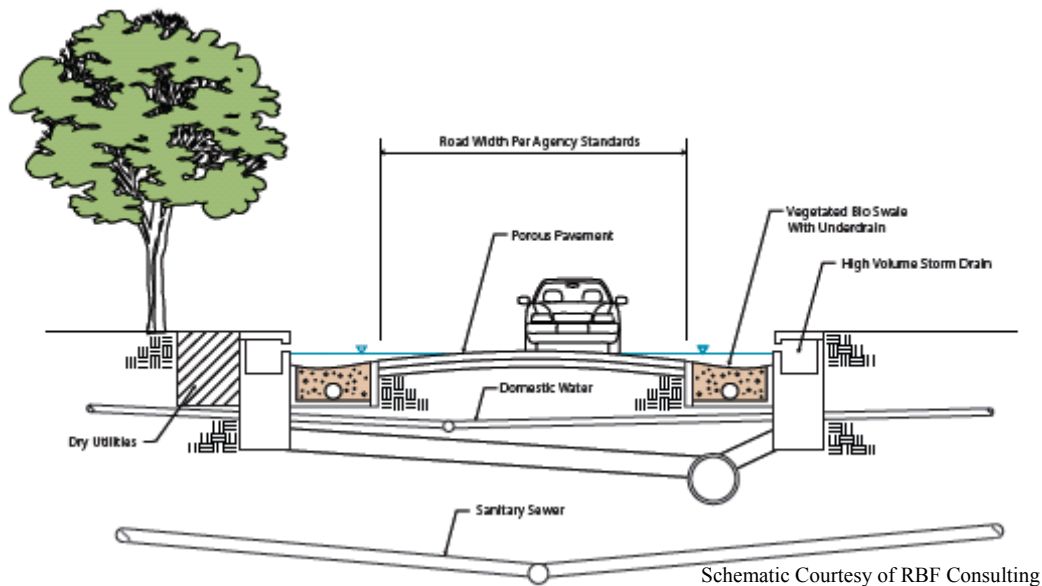

CHARACTERISTICS

- Sidewalks are provided on one or both sides of the street depending on adjacent land uses, pedestrian needs.
- Parkway on one or both sides can be used for planting and surface drainage (for flat slopes).
- Road is crowned to the gravel shoulders or swale on each side before flowing into underground storm drain.
- Reduces sediment, oil and grease, and hydrocarbons when combined with biofilters and swales.

APPLICATION

- Appropriate for areas where traffic volumes are at or between 750-2,500 ADT.
- Grid street systems and loop road are most appropriate for non-circulation element roads.
- May not be appropriate for long cul-de-sac streets or hillside sites with high fire risks.

DESIGN

- Construction detailing same as typical street standard.
- Coordinate with local and regional zoning ordinances and public works standards.
- Streets with special uses, such as bike routes, may require additional pavement width.
- Depending on topography, parkway strip can be designed as a linear swale/ biofilter with curb openings directly into swale.

MAINTENANCE

- Standard street maintenance practices required.
- Parkway strip between curb and sidewalk requires mowing, tree care. This can be the responsibility of the local jurisdiction or the adjacent property owner depending on local codes and ordinances.

LIMITATIONS


- Feasibility and amount of application is dependant upon local zoning standards
- May not be appropriate for long cul-de- sac streets or hillside sites with high fire risks (because of the potential of shared moving space to be blocked by a single vehicle, with no alternate emergency route).

ECONOMICS


- Narrower street section reduces initial construction costs.
- Increased parkway adds additional landscape maintenance cost, especially compared with conventional street section without a parkway strip.
- Properties on narrower streets with tree-lined landscaped parkways typically command higher values than those on wider treeless streets.

REFERENCES

- Spielberg, F., Chellman, C. E., (1997, June) *Traditional Neighborhood Development Street Design Guidelines*. Institute of Transportation Engineers (ITE) Transportation Planning Council Committee 5P-8. http://findarticles.com/p/articles/mi_qa3734/is_199706/ai_n8770782
- Skinny Streets program, Portland, OR., Velarde, Loreto Streets, Mountain View, CA.
- For additional information pertaining to Public Road Standards, see the works cited in the San Diego County LID Literature Index and the County of San Diego Department of Public Works Public Road Standards.

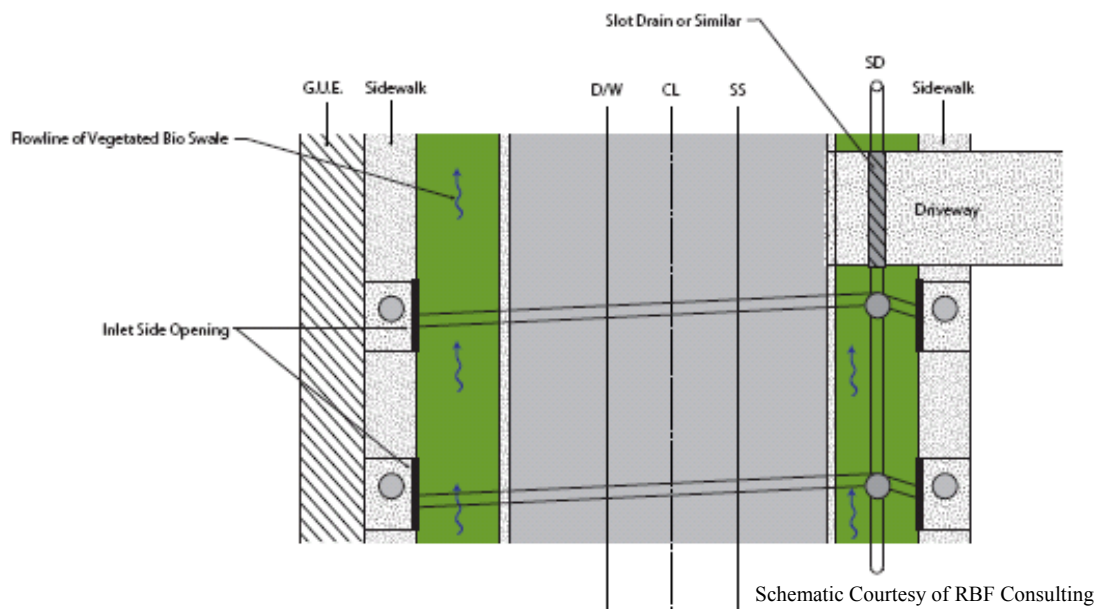

Fact Sheet 16. Private Road Standard

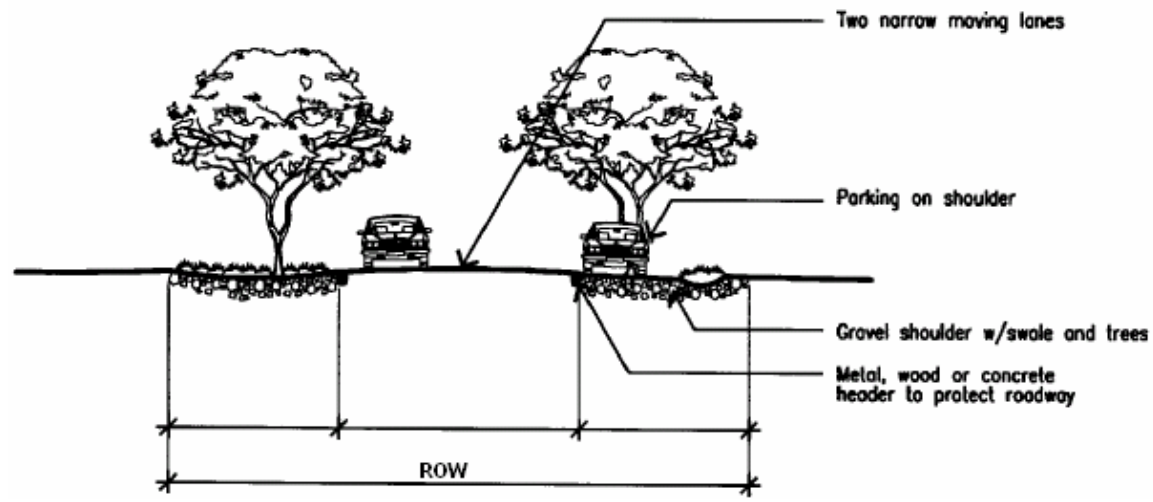

Standard Private Roads have 24' two-lane paved roadway with no curb or gutters. Gravel or crushed aggregate shoulders act as a drainage way and parking area.

CHARACTERISTICS

- Vehicles tend use the center of the narrow paved roadway.
- Permeability: Road is crowned to the gravel shoulders on each side. Pavement width allows for shoulder on one or both sides that can be used for planting and surface drainage (for flat slopes).
- Reduces impervious land coverage.
- Reduces sediment, oil and grease, and hydrocarbons when combined with biofilters and swales.

APPLICATION

- Appropriate for areas where traffic volumes are at or below 500-750 ADT and speeds between 15 to 25 mph.
- May not be appropriate for long cul-de-sac streets or hillside sites with high fire risks.
- Rural standard presents a more informal aesthetic and is suitable for less urban locations.

DESIGN

- Roadway edge protection can be achieved by flush concrete bands, steel edge, or wood headers.
- Depending on topography, gravel shoulder can be designed as a linear swale/biofilter with water sheet flowing directly into swale.
- Parking can be allowed only on one side to preserve a wider moving space for emergency vehicles. Parking restrictions may be required by the local fire authority.
- If catch basins are used, provide settlement basin before inlet or raise inlet above bottom of swale, to prevent sediment from filling catch basin.

MAINTENANCE

- Gravel shoulders require periodic regrading and replenishing.
- Elimination of curb means that conventional street sweeper machinery cannot be used.
- Landscaped shoulder with surface storm drain elements requires maintenance. This is the responsibility of the property owner.

LIMITATIONS

- Only appropriate where traffic volumes are low and speeds slow.
- May not be appropriate for long cul-de- sac streets or hillside sites with high fire risks


ECONOMICS

- Narrower street section and elimination of curb and gutter reduces initial street construction costs significantly.
- Landscaped shoulder with surface storm drain elements adds moderate landscape maintenance cost.
- Properties on narrower streets with tree-lined landscaped parkways typically command higher values than those on wider treeless streets.

REFERENCES

- Spielberg, F., Chellman, C. E., (1997, June) *Traditional Neighborhood Development Street Design Guidelines*. Institute of Transportation Engineers (ITE) Transportation Planning Council Committee 5P-8. http://findarticles.com/p/articles/mi_qa3734/is_199706/ai_n8770782
- Skinny Streets program, Portland, OR.
- Residential streets, Atherton, CA.
- For additional information pertaining to Private Road Standards, see the works cited in the San Diego County LID Literature Index and the San Diego County Standards for Private Roads (DPW).

Fact Sheet 17. Curb-cuts

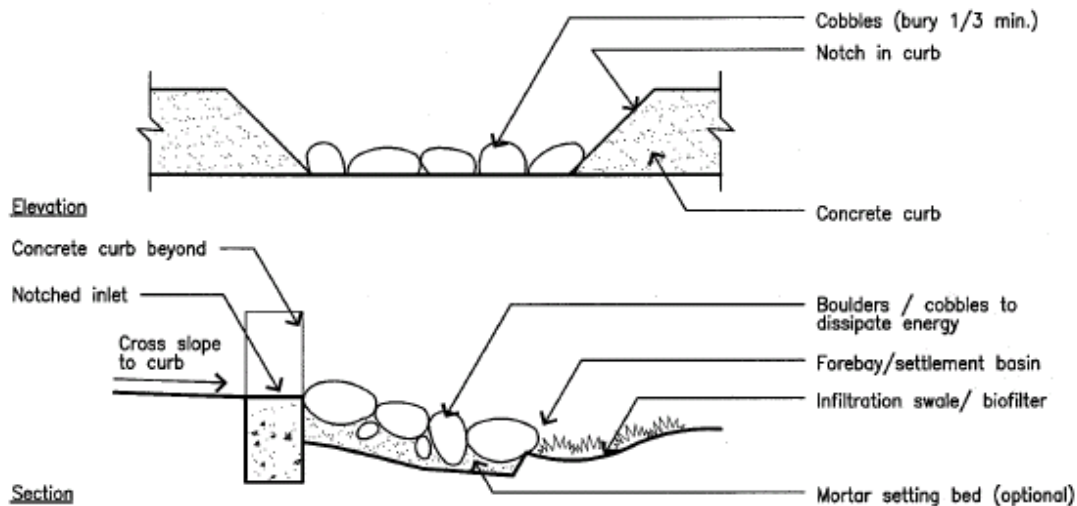

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

On streets where a more urban character is desired or where a rigid pavement edge is required, curb and gutter systems can be designed to empty into drainage swales. These swales can run parallel to the street, in the parkway between the curb and the sidewalk, or can intersect the street at cross angles, and run between residences, depending on topography. Runoff travels along the gutter, but instead of being emptied into a catch basin and underground pipe, multiple openings in the curb direct runoff into surface swales or infiltration/detention basins. If lined with ground cover or gravel/rock and gently sloped, these swales function as biofilters. Because concentration of flow will be highest at the curb opening, erosion control must be provided, which may include a settlement basin for ease of debris removal.

Urban curb/swale systems are a hybrid of standard urban curb and gutter with a more rural or suburban swale drainage system. It provides a rigid pavement edge for vehicle control, street sweeping, and pavement protection, while still allowing surface flow in landscaped areas for stormwater quality protection.

CHARACTERISTICS

- Runoff travels along the gutter, but instead of being emptied directly into catch basins and underground pipes, it flows into surface swales.
- Stormwater can be directed into swales either through conventional catch basins with outfall to the swale or notches in the curb with flow line leading to the swale.
- Swales remove dissolved pollutants, suspended solids (including heavy metals, nutrients), oil and grease by infiltration.

APPLICATION

- Can be created in existing and new residential developments, commercial office parks, arterial streets, concave median islands.

- Swale system can run either parallel to roadway or perpendicular to it, depending on topography and adjacent land uses.

DESIGN

- Size curb-openings or catch basins for design storm.
- Multiple curb openings closely spaced are better than fewer openings widely spaced because it allows for greater dissipation of flow and pollutants.
- Provide energy dissipaters at curb notches or catch basin outfall into swale.
- Provide settlement basin at bottom of energy dissipater to allow for sedimentation before water enters swale.
- Curb cuts should be at least 12 inches wide to prevent clogging.
- Curb cuts should have a vertical drop in addition to sufficient width to prevent clogging.

MAINTENANCE

- Annual removal of built-up sediment in settlement basin may be required.
- Catch basins require periodic cleaning.
- Inspect system prior to rainy season and during or after large storms.

LIMITATIONS

- Parking requirements and codes


ECONOMICS

- Cobble-lined curb opening may add marginal cost compared to standard catch basin.
- Swale system requires periodic landscape maintenance.

REFERENCES

- Village Homes subdivision, Davis, CA. Residential street network,
- Folsom, CA. Dual-drainage system,
- For additional information pertaining to Curb-cuts, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 18. Rural Swale Systems

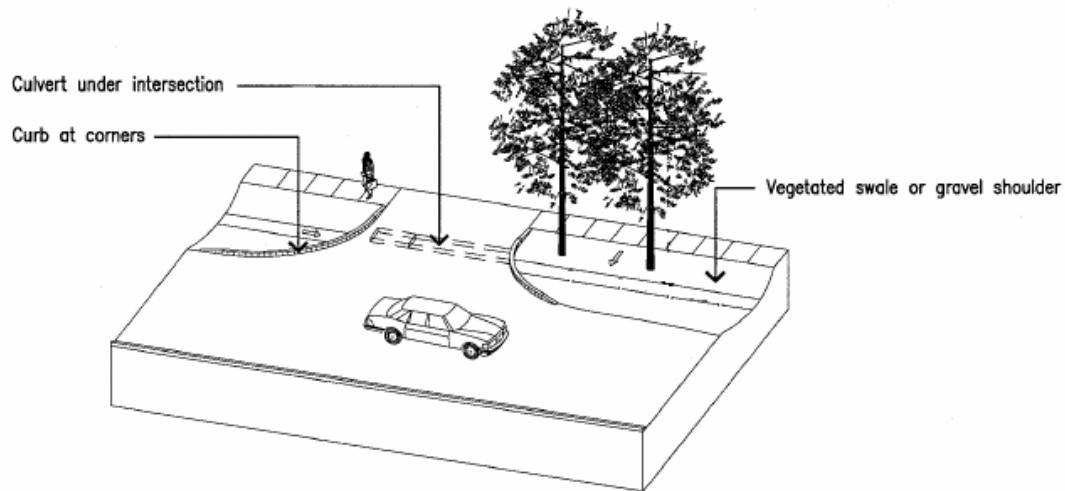

Rural swale systems are a combination of street design elements that allow for surface drainage while simultaneously protecting the roadway edge, organizing parking, and allowing for driveway access and pedestrian circulation. Generally consist of street sheet flows being directed to a vegetated swale or gravel shoulder, curbs only at street corners, and culverts under driveways and street crossings

CHARACTERISTICS

- Shoulder can be designed to accommodate parking or to serve as a linear swale, permitting infiltration of stormwater along its entire length.
- Runoff from the street is not concentrated, but dispersed along its entire length, and build-up of pollutants in the soil is minimized.

APPLICATION

- Differing systems can be applied depending on the local characteristics, needs and zoning standards.

DESIGN

- Concrete curb and gutter not required.
- Ensure that culverts under intersections drain, to avoid standing water and resulting septic condition.
- For steeper slopes, roadside swales should be protected to minimize erosion.
- Provide concrete curb at intersection radii to protect roadway edge and landscape area from turning movements.
- Crown street to direct runoff to shoulders. If drainage is provided on one side only, then provide cross-slope towards swale.
- Protect pavement edge with rigid header of steel, wood or a concrete band poured flush with the street surface.

- If parking is not desired on the shoulder, no parking signs and striping can be used.
- Central medians can be used to divide traffic for safety or aesthetics.

MAINTENANCE

- Surface systems require periodic maintenance and inspection.
- Maintenance for surface systems is different than most urban Public Works Departments currently practice, and employee retraining may be required.
- Surface drainage systems are easier to monitor and clear than underground systems, because problems, when they occur, are visible and on the surface. This eliminates the need for subsurface inspection or street excavation.

LIMITATIONS

- Design and scope is dependant upon local conditions and zoning standards.


ECONOMICS

- Surface swales are less costly to install than underground pipe systems, but may have higher on-going maintenance costs.

REFERENCES

- City of Folsom, CA.
- For additional information pertaining to Rural Swale Systems, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 19. Concave Median

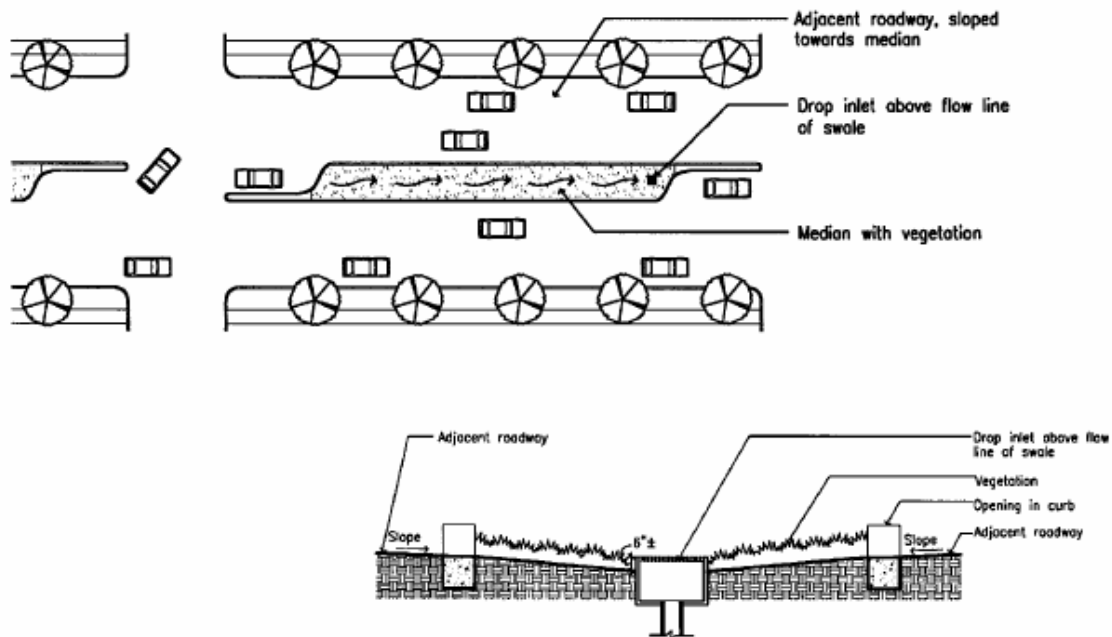

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Conventional medians are normally designed as a convex surface to shed water onto adjacent pavement and into a curb and gutter system. Concave medians reverse this relationship by depressing the median surface slightly depressed below the adjacent pavement section and designing the median to receive runoff.

CHARACTERISTICS

- Provides safety and aesthetic functions of traditional convex medians while accommodating stormwater infiltration.
- Helps to disconnect impervious street surface from storm drain system by directing street runoff into landscaped or aggregate-filled median for infiltration.
- Can be designed as a landscaped swale or turf-lined biofilter to treat first-flush runoff, which carries a high concentration of oils and other pollutants off the street.

APPLICATION

- Can be applied where new roads are being constructed or current roads can be retrofitted.
- Applicable on roadways where a traditional median might normally occur

DESIGN

- Adjacent roadway design must provide cross-slope into medians.
- Runoff from street can be directed into swale by sheet flow or curb inlets.
- Concave medians must be sized to accommodate the water quality volume, and planting must be designed to withstand periodic inundation.
- For steeper slopes, concave medians should be protected to minimize erosion.

- Catch basin and underground storm drain system may be required for high flows, depending on the available area for infiltration and retention.
- Set catch basin rim elevations just below the pavement elevation, but above the flow line of the infiltration area so that the water quality volume will collect in the swale before overflowing into the underground system.
- Can be constructed in either natural or amended soils, depending on the infiltration rate provided by the natural condition versus the rate needed to reduce surface runoff sufficiently.

MAINTENANCE

- Landscaped concave medians have maintenance requirements similar to landscaped convex medians.
- Some maintenance staff retraining may be required to facilitate maintenance of swales or other stormwater detention elements.

LIMITATIONS


- Plant species suited for concave medians depends upon water availability and frequency of rainfall and tend to be similar to those used for other vegetated swales.
- Irrigated vegetation may not be appropriate in certain sites. Xeriscape techniques, natural stone and rock linings can be used as an alternative to turf.

ECONOMICS


- Costs are similar to convex landscaped medians.

REFERENCES

- For additional information pertaining to Concave Medians, see the works cited in the San Diego County LID Literature Index.

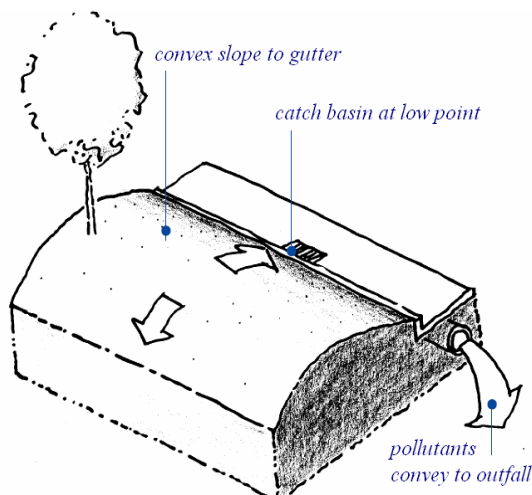


Conventional median design: convex surface

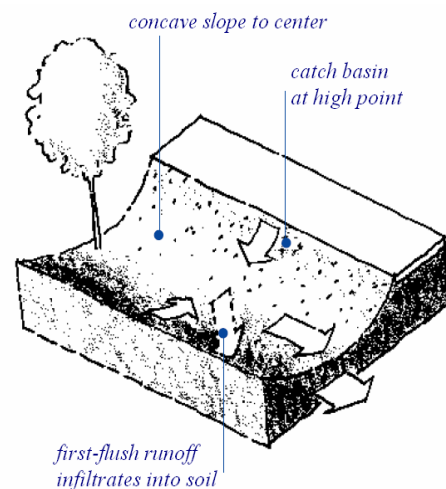

Concave median

Fact Sheet 20. Cul-de-sac Design

A landscaped area in the center of a cul-de-sac can reduce the impervious land coverage and can reduce and treat runoff through the use of bioretention and/or well draining soils. Design of a landscaped cul-de-sac must be coordinated with fire department personnel to accommodate turning radii and other operational needs (County of San Diego Consolidated Fire Code).

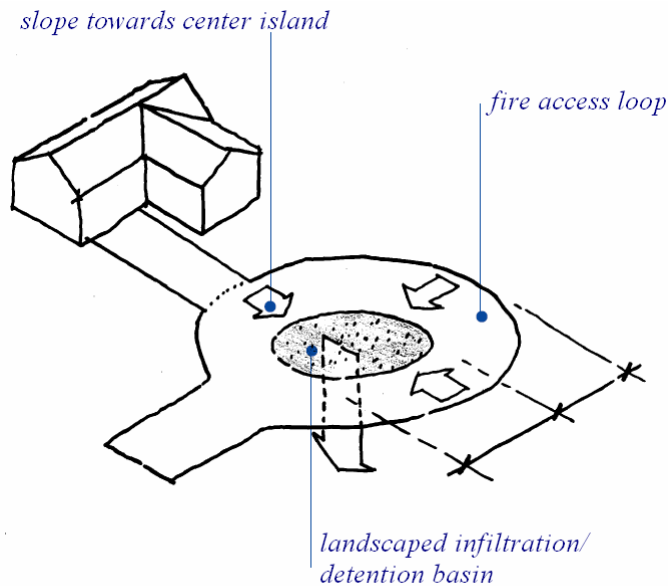

CHARACTERISTICS

- Conventional cul-de-sacs are paved across their entire diameter. This large impervious area increases runoff and creates a heat island at the front of adjacent land uses.
- A turnaround with a central concave landscaped space or other pervious surface can meet fire department access requirements and create an opportunity for stormwater infiltration or detention.
- A landscaped area in the center of a cul-de-sac can reduce impervious land coverage, while maintaining the required turning radius.

APPLICATION

- Appropriate for cul-de-sac streets in residential, commercial, and institutional settings.

DESIGN

- Street termination requires turnaround area large enough to accommodate large trucks.
- Some local fire departments may require the center landscaped area to accommodate fire trucks. This can be achieved by providing a permeable load bearing surface.
- Asymmetrical cul-de-sac design is more rural than conventional round cul-de-sac design.
- Curb with slots may be needed to allow run-on from the street while keeping vehicles off landscaping.

MAINTENANCE


- Similar to other planted medians.

LIMITATIONS

- Practicality and design are dependant upon local zoning standards and the specific characteristics of any given proposed site.
- Must be large enough to meet fire and other emergency standards

ECONOMICS

- Cost of extending storm drain the length of the cul-de-sac may outweigh the savings gained from reduction of paved area.
- Landscaping in center island may add costs for planting, and periodic maintenance.

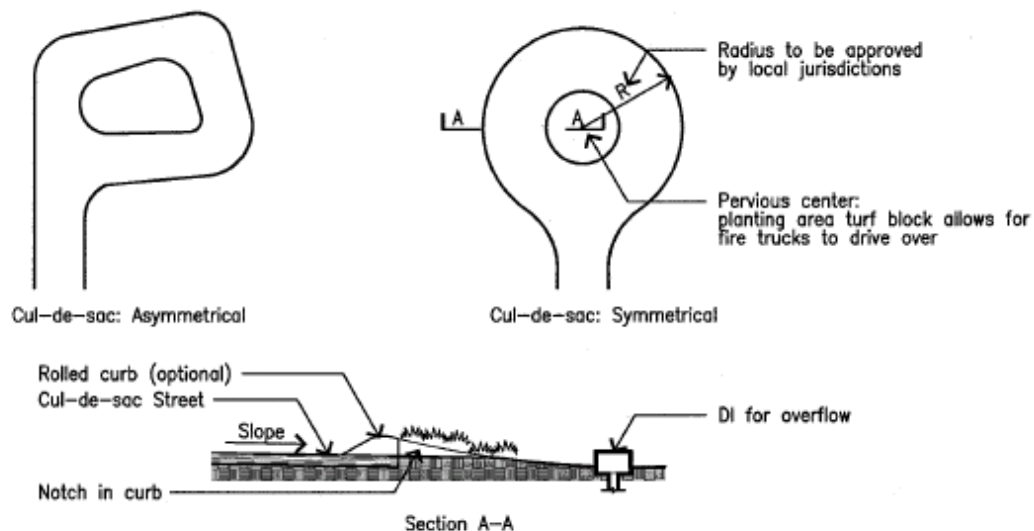


Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

REFERENCES

- For additional information pertaining to Cul-de-sac Design, see the works cited in the San Diego County LID Literature Index.
- Section 902.2.2.4 County of San Diego Consolidated Fire Code (2001, October 17) Ord. No. 9397. County Code of Regulatory Ordinances. Title 3, Div 5, Ch3.

Fact Sheet 21. Hybrid Parking Lot

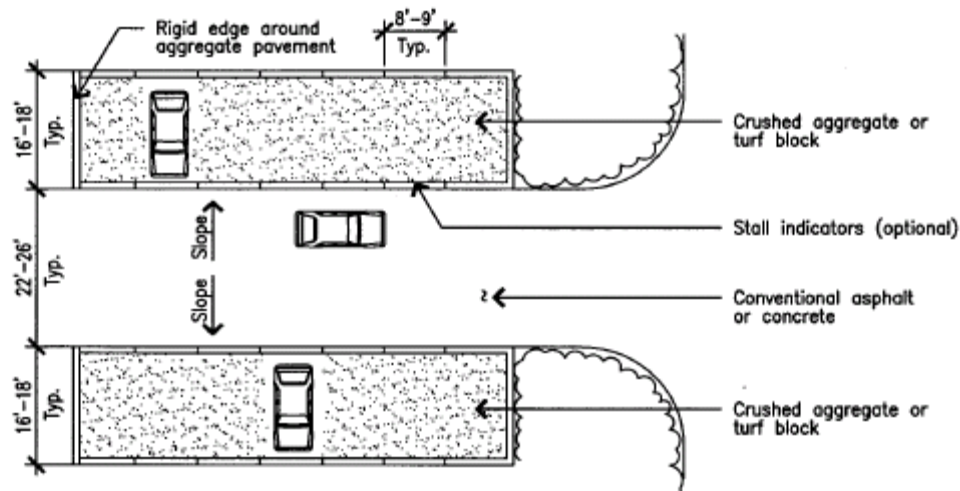

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Hybrid parking lots differentiate paving, combining impervious aisles with permeable stalls. Impervious aisles are designed to carry moving vehicle traffic and accommodate turning movements. Permeable stalls are designed for stationary or very slow moving cars. There are many possible combinations of materials.

CHARACTERISTICS

- Hybrid lots can reduce the overall impervious surface coverage of a typical double-loaded parking lot by 60%, and reduce the need for an underground drainage system.
- Differentiation between aisles and stalls can mitigate the overall visual impact of the parking lot.

APPLICATION

- Commercial areas, offices, multi-family housing, hotels, restaurants.
- Selection of permeable pavement material depends on use. Permeable asphalt, pervious concrete or unit pavers are recommended for stalls in areas with high turnover, such as restaurants. Areas with low turnover, such as hotels, office buildings, and housing can use crushed aggregate for stalls.
- Variable permeability, depending on pavements chosen.
- High ground water or lack of deep, permeable soils may limit applications.

DESIGN

- Keep permeable pavement areas relatively flat (slope $\leq 5\%$)
- Aisles are constructed of conventional asphalt or concrete suitable for heavier traffic use, speeds between 10 and 20 mph, and designed to support the concentrated traffic of all vehicles using the lot.
- Stalls are constructed of a permeable pavement, such as open-graded crushed aggregate, open-celled unit pavers, turf block, permeable asphalt, or pervious concrete.

- Avoid using permeable pavement in areas with underground utilities. If it is necessary to use permeable pavement in these areas, care must be taken to keep infiltrated water from migrating into utility trench bedding.
- Slope aisles into adjacent permeable stalls.
- Subdrain or overflow drainage may be required depending on design storm and underlying soils.
- Stall markings can be indicated with wood headers laid in field of permeable pavement, change in unit paver color, concrete bands or pavement markers (“Botts dots”), depending on the material used.
- Designated handicapped stalls must be made of an ADA compliant pavement.

MAINTENANCE

- Periodic weed control, sweeping, and regrading required for gravel stalls.
- Irrigation, fertilizer, weed control, and mowing required for turf block stalls. Pressure hosing or vacuum sweeping may be required for pervious concrete or permeable asphalt stalls.

LIMITATIONS

- Limitations are related to the materials used (for example, if stalls are constructed of crushed aggregate, the limitations associated with crushed aggregate would apply to the hybrid parking lot).
- Space limitations and soil type might affect the types of pavements that can be used.


ECONOMICS

- Reduction of overall impervious surface coverage may eliminate or reduce need for underground drainage system.
- Construction cost will depend on materials chosen. A hybrid lot of conventional asphalt aisles with crushed aggregate stalls will be lower cost than a lot entirely paved in asphalt. A hybrid lot of conventional asphalt aisles with unit pavers stalls will be higher cost than a lot entirely paved in asphalt.

REFERENCES

- Parking lot. Medford Village, NJ.
- For additional information pertaining to Hybrid Parking Lots, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 22. Parking Grove

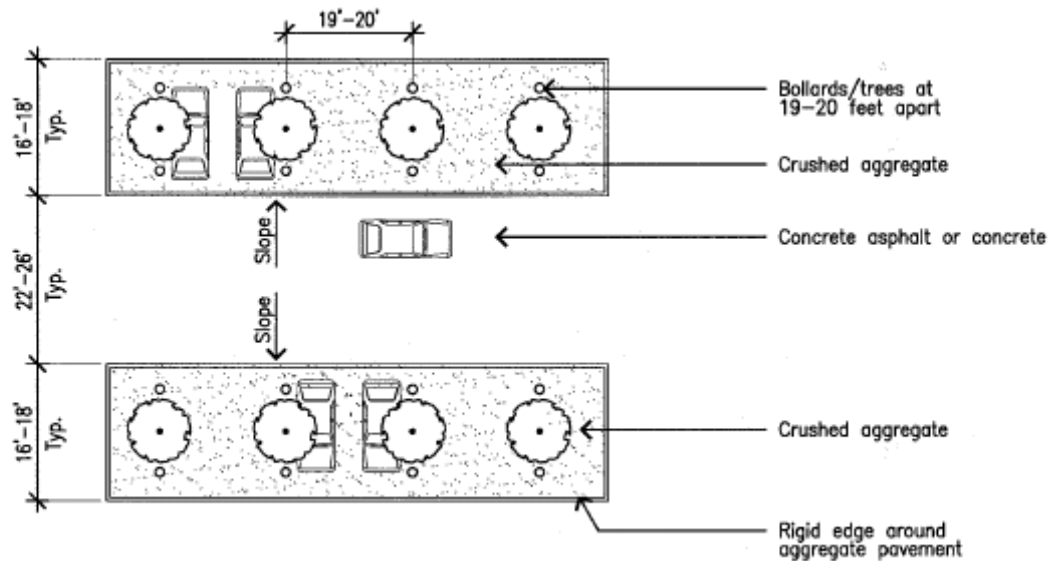

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Parking groves, a variation on the hybrid parking lot design, use a grid of trees and bollards to delineate parking stalls and create a shady environment. The permeable stalls reduce impervious land coverage while the trees reduce heat island effect and improve soil permeability.

CHARACTERISTICS

- Parking grove not only shades parked cars, but presents an attractive open space when cars are absent.
- Permeability depends on the type of pavement used.
- Reduces impervious land coverage.

APPLICATION

- Best in locations where the users of the parking lot are a consistent group of people (such as multi-family housing or an office building) who become familiar with parking between the trees.
- Best in situations where vehicles park for long periods of time, such as hotels, housing, offices.
- Not recommended for high turnover lots, such as restaurants and commercial areas because of additional care needed to navigate around trees.

DESIGN

- Parking stalls must be oversized to accommodate thickness of bollards and trees.
- Set trees/bollards at least three feet in from end of stall to allow for turning movements into and out of stall.
- Trees should be protected during the establishment period. Align stakes along implied stall line.
- Bollards may be omitted if proper tree staking is provided during establishment period.

- Metal tree cages are not recommended because they are easily damaged and can scratch cars.
- Trees should be selected for high, horizontal branching structure, and should not be prone to limb breakage or insects that secrete honeydew.
- Provide irrigation to trees as required.

MAINTENANCE

- Requires tree pruning and maintenance to ensure clearance of vehicles.
- Trees may occasionally be damaged by cars. They should recover after pruning, but may require replacement.

LIMITATIONS

- Limitations are related to the materials used (for example, if stalls are constructed of crushed aggregate, the limitations associated with crushed aggregate would apply to the hybrid parking lot).
- Space limitations and soil type might affect the types of pavements that can be used.


ECONOMICS

- More expensive to construct and maintain than standard parking lots.

REFERENCES

- Seaside Motel Auto Court, Seaside, FL.
- City of LA, Bureau of Street Services – Street Tree Division
<http://lacity.org/boss/streettree/treeguide.htm>
- Street Trees Recommended for Southern California, Second Edition (1999).
Street Tree Seminar, Inc.
- For additional information pertaining to Parking Groves, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 23. Overflow Parking

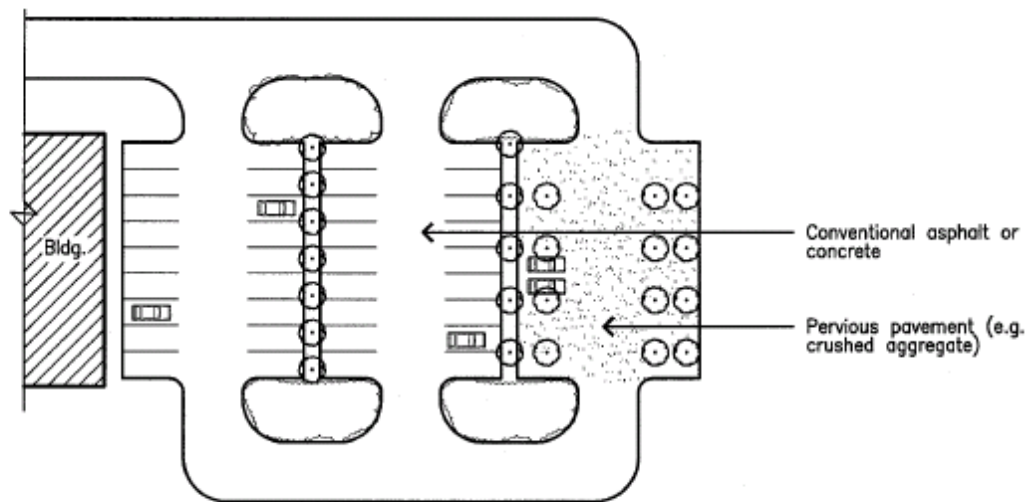

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Overflow parking design differentiates between regular and peak parking demands, constructing the regular demand parking stalls with traditional impervious materials and constructing peak parking stalls of a different, more permeable, material.

CHARACTERISTICS

- Overflow area can be pervious materials such as turf block, crushed stone, unit pavers on sand, and can be designed to break up an expanse of continuous parking lot.
- Permeability depends on pavement used.

APPLICATION

- Large parking lots with variable capacity needs such as shopping malls, conference centers, office complexes, amusement parks, sport facilities.
- Visitor parking areas in multifamily residential developments or office complexes.
- Facilities with infrequent but extensive peak parking needs, such as churches, sports arenas, and conference centers.

DESIGN

- Must be designed to accommodate volume of overflow parking.
- In many uses, regular parking demand accounts for approximately two-thirds of total, with one-third accommodated as overflow.
- Irrigation may be necessary if overflow parking is turf block.

MAINTENANCE

- Maintenance depends on pavement selected.

LIMITATIONS

- Limitations are related to the materials used (for example, if stalls are constructed of crushed aggregate, the limitations associated with crushed aggregate would apply to the hybrid parking lot).
- Space limitations and soil type might affect the types of pavements that can be used.

ECONOMICS

- Cost depends on pavement selected and overall design.

REFERENCES

- Gravel overflow parking at Nordstrom parking lot. Corte Madera, CA.
- Orange Bowl parking lot, FL.
- For additional information pertaining to Overflow Parking, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 24. LID Driveway, Sidewalk, and Bike Path Design

CHARACTERISTICS

Driveways, sidewalks and bike paths are another source of impervious coverage that can adversely affect water quality by the runoff generated from their surface. Several management opportunities and strategies are available to reduce this impact, including:

- Reducing sidewalks to one side of the street.
- Utilize shared driveways to provide access to several homes.
- Disconnect bike paths from streets. Bike paths separated from roadways by vegetated strips reduce runoff and traffic hazards.
- Utilizing pervious materials to infiltrate or increase time of concentration of storm flows.
- Reducing driveway and sidewalk width when possible.
- Directing driveway and sidewalk runoff to adjacent vegetation to capture, infiltrate, and treat runoff.
- Installing a bioretention area or swale between the street and sidewalk and grading runoff from the sidewalk to these areas.
- Planting trees between the sidewalk and streets to capture and infiltrate runoff.
- Installing grated infiltration systems in sidewalks and bike paths to receive runoff as sheet flow. These can be installed to protect trees or can provide off-line stormwater management via a grate over an infiltration trench.

APPLICATION

- Residential Subdivisions, single family and multi-family homes.
- Commercial Development
- Public Parks

DESIGN

- Grade driveways, sidewalks, and bike paths at a two percent slope to direct runoff to an adjacent vegetated area.
- Pervious materials such as permeable pavers, permeable concrete or asphalt, gravel, or mulch can be utilized for sidewalk surfaces.
- In some cases, sidewalks and bike paths can be placed between rows of homes to increase access and decrease overall effective imperviousness.
- Grated infiltration systems should include removable grates to allow for maintenance, and must be capable of bearing the weight of pedestrians.

LIMITATIONS

- Ordinances may require sidewalks on both sides of the street.
- Groundwater table must not be within 10 feet of the bottom of infiltration trenches.

MAINTENANCE CONSIDERATIONS

- Maintenance necessary is related to the techniques applied (permeable materials, bioretention, swales).
- Vector breeding may occur in bioretention and swales if not properly designed or maintained.


ECONOMICS

- Costs are related to the number, type and size of the techniques applied.

REFERENCES

- For additional information pertaining to LID Driveway, Sidewalk, and Bike Path Design see the works cited in the San Diego County LID Literature Index.

Fact Sheet 25. Dry-well

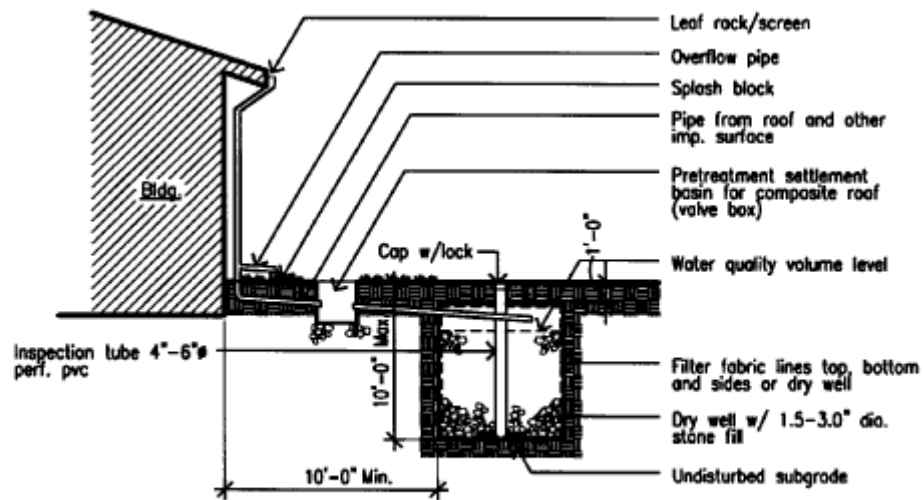

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

A dry-well is a subsurface basin to which runoff is diverted for infiltration. The roof downspout is connected to the dry-well, allowing runoff to be stored and slowly infiltrated.

CHARACTERISTICS

- Compact.
- Hidden from view, has no effect on aesthetics.

APPLICATION

- Can be used to control stormwater runoff for new residential development, or new additions to existing buildings

DESIGN

- Confirm requirements with local municipal ordinances and receive approval from a qualified, licensed professional. These may include overall depth, as well as setbacks from structures, property lines, water supply wells, groundwater level, septic drainfields, and sensitive areas.
- Subgrade must be relatively permeable (not appropriate for clay).
- Requires excavation filled with drain rock and wrapped top, sides and bottom with filter fabric. Excavation is sized to accommodate water quality volume storm, accounting for 38-40% void space of gravel fill.
- A buried catch basin (concrete, plastic, or metal) or large diameter pipe with open bottom set on end can be used to contain drain rock.
- Roof downspouts are attached to the dry well, an overflow pipe is provided for runoff in excess of water quality volume.
- Provide perforated observation pipe (such as a 6" diameter PVC) to allow for inspection and maintenance.
- Provide pre-treatment sedimentation basin for composite roofs. This can be a small plastic valve box with open bottom.

MAINTENANCE

- Requires inspection at beginning of rainy season.
- Remove sediment from sedimentation basin prior to rainy season.

LIMITATIONS

- Not appropriate for slopes >40% or
- Not appropriate for areas with expansive soils.
- “Infiltration BMPs” are not appropriate when:
 - the seasonal high groundwater table is within 10 feet of the base of the BMP
 - at locations where surrounding soil stratum is unstable
- exceptions to the 10 foot separation can be made when:
 - the BMP is designed with an under-drain and approved by a qualified licensed professional, or when:
 - written approval of a separation within the interval of 4-10 feet has been obtained by the Regional Water Quality Control Board and the Department of Environmental Health.
- Subgrade must be relatively permeable (not appropriate for clay).
- Applicability dependant upon local regulations, zoning standards and site characteristics (slope, soil type, amount of rainfall, drainage area, space available, etc).


ECONOMICS

- Relatively inexpensive to construct and maintain.

REFERENCES

- For more information on infiltration site selection please see the CALTRANS Infiltration Study (2003) at:
http://www.dot.ca.gov/hq/env/stormwater/special/newsetup/pdfs/new_technology/CTSW-RT-03-025/IFB_Final_Report.pdf
- Washington Department of Ecology’s Stormwater Management Manual for Western Washington (<http://www.ecy.wa.gov/pubs/0510033.pdf>), BMP T5.10 Downspout Dispersion in Volume V, page 5-3.
- For additional information pertaining to Dry-wells, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 26. Rain Harvesting

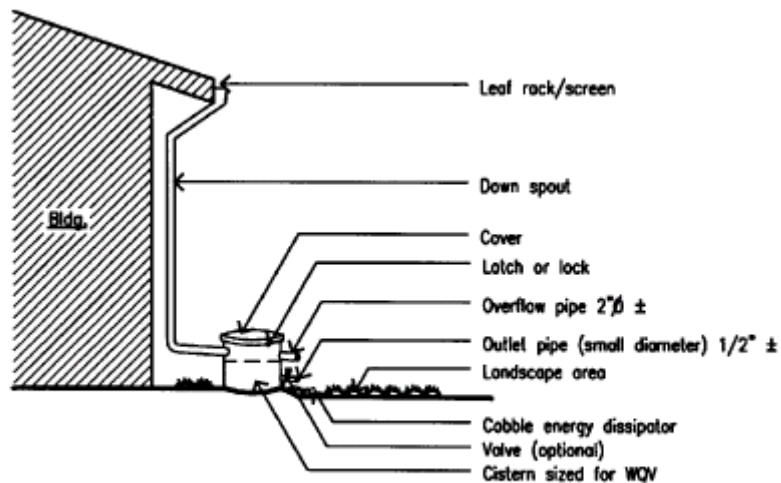

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Rain harvesting reduces runoff discharged to the storm drain system and can help conserve water in applications at all scales. Rain barrels and cisterns are storage vessels that are directly connected with the roof downspout. Water is slowly released with either a manually operated valve or a permanently open outlet.

CHARACTERISTICS

- Can be incorporated into the aesthetics of the building and garden.
- Reduces peak runoff and allows sediment to settle.
- Provides more infiltration benefits than connecting directly to storm drain.

APPLICATION

- New and existing residential buildings
- New and existing commercial buildings

DESIGN

- Manually operated valve can be closed to store stormwater for irrigation use or infiltration between storms.
- Must be covered to prevent mosquitoes from breeding.
- Permanently open outlet must be sized appropriately.
- Size cistern for water quality volume, provide overflow for larger storms.
- For safety reasons provide secure cover or $\leq 4''$ top opening if holding more than 6'' depth of water.
- Provide screen on gutter and intake of outlet pipe to minimize clogging by leaves and other debris.

MAINTENANCE

- System requires regular monitoring and cleaning.
- Ensure system is not clogged by leaves or other debris.

LIMITATIONS

- Due to San Diego's arid climate and depending on location, rain barrels and cisterns may fill with rain only a few times per year.


ECONOMICS

- Low installation cost.

REFERENCES

- For additional information pertaining to Cisterns and Rain Barrels, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 27. Foundation Planting

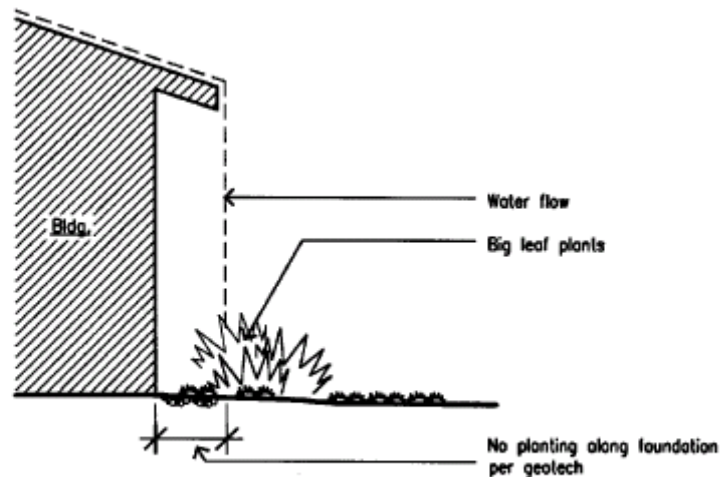

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Landscape planting around the base of the eaves can reduce the physical impact of water on the soil and provide a subsurface matrix of roots that encourage infiltration.

CHARACTERISTICS

- Foundation planting provides increased opportunities for stormwater infiltration.
- Planting protects the soil from erosion caused by concentrated sheet flow coming off the roof, reducing the amount of sediment in urban runoff.

APPLICATION

- For buildings that do not use a gutter system.

DESIGN

- Locate plants at the roof drip-line.
- Select plants with high capacity for vertical water storage.
- Select plants with leaf architecture that intercepts rainwater and traps it for eventual evaporation.
- Select plants sturdy enough to tolerate the heavy runoff sheet flows, and periodic soil saturation.
- Provide mulch cover in planting bed to protect soil from impact of falling rainwater and to increase soil water-holding potential.
- Protect perimeter of foundation as required by local soil conditions.

MAINTENANCE

- Regular garden maintenance.
- Gardening must occur to ensure compliance with fire codes.

LIMITATIONS

- Particularly considering the frequency and ferocity of fires in San Diego County, care must be taken to ensure that any foundation planting does not pose a potential fire hazard for the building.
- Water infiltration near the building presents the danger of water damage to the foundation. Depending on soil type, protect foundation with moisture barriers and grade foundation to move water a safe distance from the building. Contact a qualified, licensed professional before this LID technique is applied.

ECONOMICS

- Costs vary based upon plant choice, but generally can be expected to be relatively low if planted and maintained correctly.

REFERENCES

- For additional information pertaining to Foundation Planting, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 28. Downspout to Swale

Discharging a roof downspout to landscaped areas via swales allows for polishing and infiltration of the runoff.

CHARACTERISTICS

- Runoff from the roof is directed into a rocky or vegetated swale area.
- The water flows through swale with overflow continuing to the storm drain.

APPLICATIONS

- Appropriate for most buildings with landscaped areas adjacent to the building where soil drainage is appropriate and water infiltration does not pose a risk to the foundation.



Photograph Courtesy of EOA, Inc.

DESIGN

- The downspout can be directly connected to a pipe which daylights some distance from the building foundation, releasing the roof runoff into a rock lined swale towards a landscaped area.
- The roof runoff is slowed by the rocks, absorbed by the soils and vegetation, and remaining runoff flows away from the building foundation into the storm drain.
- Xeriscape techniques, natural stone and rock linings should be used as an alternative to turf.

MAINTENANCE

- Maintenance is similar to that necessary for other swale areas and will depend on the specific style chosen.

LIMITATIONS

- Only suitable for grades between 1% and 6%
- When a vegetated swale is used, the site requires adequate sunlight for vegetation growth
- Avoid infiltrating too close to foundations and underground utilities.

ECONOMICS

- Costs are similar to those associated with other swale devices.

REFERENCES

- For additional information pertaining to the Downspout to Swale technique, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 29. Vegetated Roofs

Vegetated roofs serve to treat stormwater pollutants, reduce runoff volumes, provide additional landscape amenity, provide acoustical control, air filtration and create urban wildlife habitat. Vegetated roofs also provide oxygen production, carbon storage, increase insulation and extend the expected lifetime of the roof compared to conventional roofing.



Photograph Courtesy of EOA, Inc.

CHARACTERISTICS

- Roofs can be either extensive or intensive or vegetation can be placed in modules.
- Extensive: Consists of shallow (1"-6"), lightweight substrate and a few types of low-profile, low-maintenance, drought-tolerant plants
- Intensive: Consists of thicker (8"-48") substrate can support a richer variety of plant material and a more garden-like appearance
- Vegetated walls are facades of steel cables that hold climbing plants away from the surface of the building.

APPLICATION

- Can be installed on almost any building with slopes up to 40 degrees
- Vegetated roofs are effective strategies for managing stormwater in highly urbanized settings where rooftops comprise a large percentage of the total impervious surface.
- Can be an effective way of reducing energy costs in a conservation-conscious way

DESIGN

- Construction should be performed by an experienced vegetated roof specialist.
- Extensive roofs utilize light-weight soil mixes to reduce loads. Native soils are usually too heavy when wet for roof usage.
- Structural capacity of the roof must be designed to support up the anticipated additional loads.
- A living non-irrigated vegetated roof in San Diego is possible to maintain and will perform a stormwater benefit; however irrigation may be required during Xeriscape plant establishment. Consult an experienced vegetated roof specialist.
- Extensive green roof systems contain several layers of protective materials to convey water away from the roof deck. These generally include (from the bottom up) a waterproof membrane, a root barrier, a layer of insulation, a drainage layer, a filter fabric for fine soils, the engineered growing medium or soil substrate, and the plant material.
- Sedums, a common vegetated roof plant, have fleshy water-storing leaves that do not burn easily, even in near drought conditions.

MAINTENANCE

- Installations require regular inspection and maintenance to guarantee proper functioning of any drainage or irrigation components as well as for removal of dead or diseased vegetation
- As needed, pruning and weeding must occur in order to maintain the appearance of the roof. Weeding and removal of dead material should be scheduled to coincide with important horticulture cycles.
- Intensive vegetated roofing may require more frequent inspection and maintenance.
- Intensive installations may also require irrigation as needed. Extensive installations should not be irrigated unless deemed absolutely necessary.
- Soils may also need to be tested for pH periodically and neutralizing agents may need to be employed as needed.

LIMITATIONS

- Installing a vegetated roof with a pitch of greater than 20 percent increases project complexity and requires supplemental anchoring.
- A slight pitch is preferable for efficient drainage but may not be as necessary in the arid environment.
- Sun exposure must be considered as both pitch and neighboring buildings may limit the amount of sunlight the vegetation receives, which can inhibit growth and the other beneficial effects of a vegetated roof.
- The site must have sufficient structural strength to hold the load of the vegetated roof at its most water saturated.
- Fire safety provisions must be abided by and may affect the location and the extent of vegetated roofing that is allowed.

ECONOMICS

- Costs vary based upon system implemented.
- Vegetated roof savings have been reported to offset annual energy costs.

REFERENCES

- Environmental Affairs Department: City of Los Angeles (2006), *Green Roofs-Cooling Los Angeles: A Resource Guide*, III-9
http://www.fypower.org/pdf/LA_GreenRoofsResourceGuide.pdf
- Miller, (2003). *Extensive Green Roofs*. Whole Building Design Guide.
<http://www.wbdg.org/design/resource.php?cn=0&cx=1&rp=41>.
- Breuning, Jorg (Spring 2007) Fire & Wind on Extensive Green Roofs. *Green Roof Infrastructure Monitor*. Vol. 9., No.1. pg 12-13.
- Sharp, R. (2007). Green Walls 101: Introduction to Systems and Design. *Green Roof Infrastructure Monitor*. Vol. 9, No.1. pg 16-17.
- For additional information pertaining to Vegetated Roofs, see the works cited in the Green Roofs Section of the San Diego County LID Literature Index.

Fact Sheet 30. Soil Amendments

Soils in the arid climate of San Diego tend to lack organic matter and nutrients, and often have a high silt and/or clay content. Soils high in clay content have slow infiltration rates, resulting in high runoff potential. The infiltration and water storage capacity of such areas can be amended by improving the organic content of the soil. This is achieved by tilling amendments including organic materials into the native soil or by importing topsoil.

CHARACTERISTICS

- Serves to reduce stormwater runoff volumes
- Improves water quality through filtration
- Improves plant growth and overall aesthetics
- Reduces or even eliminates the need for fertilizing
- Reduces net erosion
- Results in reduced total maintenance costs for landscaping
- In order to be effective, slopes must be less than 33%

APPLICATION

- Soil amendments are advisable for many vegetated areas and should be designed to address soil characteristics, plant types, drainage, and plant water use requirements.
- Existing lawn or landscaped areas with poor plant growth due to compaction and low-organic content soils and sites with poor drainage characteristics are prime candidates for soil amendments and/or lawn alternatives.
- May be especially important in new construction where the existing topsoil is poor, has been removed or has been compacted
- Retrofitting of existing landscape with minimal disturbance
- Soil amendments may not be required under certain circumstances when utilizing low water use and low nutrient demand plant material such as some California native species.
- If appropriate, where no amendments are required soil can be ripped, tilled or otherwise treated to reduce compaction and encourage percolation.
- Soil amendments can improve water storage and infiltration characteristics in applications such as swales, filter strips, and bioretention.

DESIGN

- A licensed landscape architect or other qualified licensed professional should be consulted.
- The most cost-effective strategy is to save and reuse native topsoil, and to protect areas of native vegetation wherever possible.
- Soils should be analyzed by a lab to determine the specific soil amendments needed.
- To optimize water holding capacity and plant health, organic material including leaf compost, peat moss or composted manure should be included in the soil amendments.

- Incorporate amendments during conclusion of site development.
- Care must be taken around existing trees and shrubs to prevent root damage during construction and soil amendment application.

MAINTENANCE

- For areas that incorporate turf, annual soil aeration should be conducted
- Organic topdressing mulch may need to be supplemented at certain intervals.

LIMITATIONS

- On steep slopes, increasing soil moisture could potentially cause soil instability, therefore soil amendments may not be suitable for certain slopes and care must be taken in the timing of the amending.
- Areas with grades steeper than 33% are not effective locations for soil amendments.
- Soil amendments may not be necessary under certain circumstances when utilizing low water use and low nutrient demand plant material such as some California native species.

ECONOMICS

- Costs will vary according to site specific conditions, but have previously been estimated at \$1.00 to \$3.00 per square foot of soil amended (this does not include the cost of revegetating the area after amendments are made).


REFERENCES

- Low Impact Development Center, Inc. (n.d.). *Soil Amendments Costs*. http://www.lid-stormwater.net/soilamend/soilamend_costs.htm
- For additional information pertaining to Soil Amendments, see the works cited in the San Diego County LID Literature Index.

Fact Sheet 31. Street Trees



Photograph Courtesy of EOA, Inc.

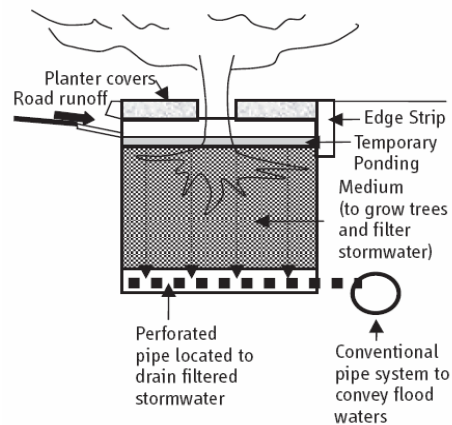

Tree planter schematic

Photograph from Water Sensitive Urban Design Guidelines, Melbourne, Australia (2005)

Trees can be used as a stormwater management tool in addition to providing the more commonly recognized benefits of energy conservation, air quality improvement, and aesthetic enhancement.

CHARACTERISTICS

- Tree surfaces (roots, foliage, bark, and branches) intercept, evaporate, store or convey precipitation to the soil before it reaches surrounding impervious surfaces.
- In bioretention cells or swales, tree roots build soil structure that enhances infiltration capacity and reduces erosion.

APPLICATION

- Using modified planter boxes as opposed to the tradition approach can provide stormwater filtration in an otherwise impervious urban environment.
- Modified street tree planters are appropriate for use along streets, sidewalks, driveways and other urban settings.
- Medians and traffic calming bays can also be utilized as bioretention systems using systems such as street trees.

DESIGN

- Appropriate placement and selection of tree species is important to achieve desired benefits and reduce potential problems such as pavement damage by surface roots and poor growth performance.
- Check with local community planning guidelines for the type and location of trees planted along public streets or rights-of-way.
- The extent and growth pattern of the root structure must be considered when trees are planted in bioretention areas or other stormwater facilities with under-drain structures or near paved areas such as driveways, sidewalks or streets. Root barrier devices can be utilized where applicable.

- Available growing space must also be considered in site planning.
- Soil type and water availability must be considered in species choice and placement.
- Underground utilities and overhead wires must be circumvented.
- Additional functions desired, such as shade, aesthetics, windbreak, privacy screening, should impact species choice and placement as well
- Other important tree characteristics to consider when making a selection include: Longevity or life-span, Tolerance for urban pollutants, Growth Rate, Tolerance to drought, seasonally saturated soils, and poor soils, Canopy spread and density, Foliage texture and persistence

MAINTENANCE

- In general, maintenance includes annual routine inspection and maintenance activities.
- These would include removal of trash, debris and sediment, replenishment of the mulch, and care or replacement of plants.
- During extreme droughts the plants may need to be watered in the same manner as any other landscape material.

LIMITATIONS

- Local planning guidelines and zoning provisions for the permissible species and placement of trees along public streets or rights-of-way must be consulted.
- Vehicle and pedestrian sight lines; proximity to paved areas and underground utilities; proximity to neighbors, buildings, and other vegetation; prevailing wind direction; and sun exposure all must be considered in street tree placement.
- Species appropriate is dependant upon the available space for root and foliage growth, location of utilities such as water pipes and power lines, available water (irrigation should be limited as much as possible) and tolerance to pollutants.


ECONOMICS

- Accurate economic data pertaining to the use of subsurface reservoir beds is currently unavailable, however, site specific cost records can be found in the LID Literature Index.

REFERENCES

- City of LA, Bureau of Street Services, Street Tree Division
<http://lacity.org/boss/streettree/treeguide.htm>
- Street Tree Seminar, Inc. (1999), *Street Trees Recommended for Southern California*. Anaheim, California.
- Low Impact Development Center, Inc. (n.d.). *Maintenance of Tree Box Filters*.
http://www.lid-stormwater.net/treebox/treeboxfilter_maintain.htm
- For additional information pertaining to Street Trees see the works cited in the San Diego County LID Literature Index.
- City of Melbourne, Australia. (2005). *Water Sensitive Urban Design Guidelines*.
http://www.melbourne.vic.gov.au/rsr/PDFs/Water/WSUD_part1.pdf

Fact Sheet 32. Plant species selection for infiltration areas

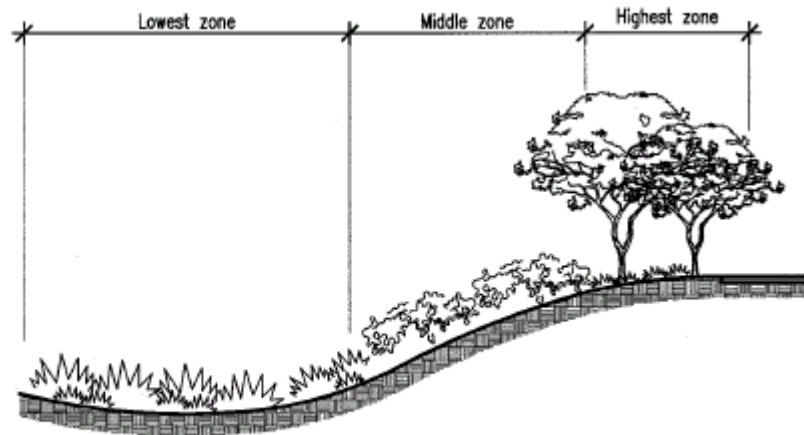

Conditions, dimensions, and materials shown are typical. Modifications may be required for proper application, consult qualified professional.

Plant species selection for infiltration areas can improve the infiltration potential of landscape areas as well as improve the aesthetics of design.

CHARACTERISTICS

- Deep rooted plants help to build soil porosity.
- Certain plant species and applications provide bio-remediation effects by improving water quality.
- Leaf surface-area helps collect rainwater before it lands on the soil, especially in light rains, increasing the overall water holding potential of the landscape.
- Select species that are tolerant of moist soils or periodic inundation, as well as drought if planted without supplemental irrigation.

APPLICATION

- Applicable to all treatment devices that incorporate plant materials.

DESIGN

- Select appropriate plant species depending on zone of inundation: lowest, middle, and highest.
 - Lowest: Depending on size, location and drainage watershed, this area may encounter frequent inundation, wet dry cycles or high moisture conditions.
 - Middle: Depending on size, location and drainage watershed, this area may encounter occasional inundation and wet dry cycles.
 - Highest: Depending on size, location and drainage watershed, this area may encounter very rare inundation.
- Select the appropriate plant for the use, anticipated water inundation, habitat and aesthetic goals.
- Consider sight-line and other requirements for parking lots and street-side plantings.
- Include mulch cover in planting areas.

MAINTENANCE

- Maintenance can have a significant impact on soil permeability and its ability to support plant growth. Proper mulching of the soil surface improves water retention and infiltration, while protecting the surface root zone from temperature extremes.
- Slightly more attention to maintenance and care of plant material may be required than in non-infiltration areas.

LIMITATIONS

- Cool season turf grasses utilized in vegetated swales require irrigation and may not meet state and local water conservation goals.
- Irrigated vegetation may not be appropriate in certain sites. Xeriscape techniques, natural stone and rock linings and other inert groundcovers can be used as an alternative to living vegetation.

ECONOMICS

- Varies based on landscaping needs.

REFERENCES

- For additional information pertaining to Species Selection for Infiltration Areas, see the works cited section titled “Landscaping” in the San Diego County LID Literature Index.